

---

*Thank you for purchasing our trailer. In the interests of your safety and care for the reliability and durability of the machine, we ask that you familiarise yourself with the content of this manual.*

***Remember!!!***

***Before using the trailer for the first time, check if the wheels are properly tightened!!! Regularly check the technical condition of the machine in accordance with the attached schedule.***

---

---

---

# INTRODUCTION

Information contained herein is current at date of publication. As a result of improvements, some numerical values and illustrations contained in this publication may not correspond to the factual specification of the machine supplied to the user. The manufacturer reserves the right to introduce design changes in machines produced that facilitate operation and improve the quality of their work, without making minor amendments to this Operator's Manual.

This Operator's Manual is an integral part of the machine's documentation. Before using the machine, the user must carefully read this Operator's Manual and observe all recommendations. This guarantees safe operation and ensures malfunction free work of the machine. The machine is designed to meet obligatory standards, documents and legal regulations currently in force.

The Operator's Manual describes the basic principles of safety in use and operation of the Pronar T653 agricultural trailer, which may be produced in one of three variants:

- T653 – no wall extensions,
- T653/1 – no wall extensions or with 0.5 m load box wall extensions,
- T653/2 – no wall extensions or with 0.5 m load box wall extensions,

If the information contained in the Operator's Manual needs clarification then the user should refer for assistance to the sale point where the machine was purchased or to the Manufacturer.

## **MANUFACTURER'S ADDRESS:**

*PRONAR Sp. z o.o.  
ul. Mickiewicza 101A  
17-210 Narew*

## **CONTACT TELEPHONES**

<i>+48 085 681 63 29</i>	<i>+48 085 681 64 29</i>
<i>+48 085 681 63 81</i>	<i>+48 085 681 63 82</i>

## SYMBOLS APPEARING IN THIS OPERATOR'S MANUAL

Information, descriptions of danger and precautions and also recommendations and prohibitions associated with user safety instructions are marked:




and also preceded by the word "**DANGER**". Failure to observe the instructions may endanger the machine operator's or other person's health or life.

Particularly important information and instructions, the observance of which is essential, are distinguished in the text by the sign:



and also preceded by the word "**ATTENTION**". Failure to observe the instructions may lead to damage to the machine as a result of improper operation, adjustment or use.

In order to focus the user's attention on the need to perform maintenance, the relevant section of the Operator's Manual is marked with the pictogram:

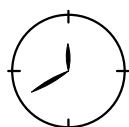

Additional tips and advice for machine operation are marked:



and also preceded by the word „**TIP**”.

## **DIRECTIONS USED IN THIS OPERATOR'S MANUAL**

Left side – side to the left hand of the operator facing in the direction of machine's forward travel.

Right side – side to the right hand of the operator facing in the direction of machine's forward travel.

## **REQUIRED SERVICE ACTIONS**

Service actions described in the manual are marked: ➡

Result of service/adjustment actions or comments concerning the performance of actions are marked: ⇨

# TABLE OF CONTENTS

1	BASIC INFORMATION	1.1
1.1	IDENTIFICATION	1.2
1.1.1	TRAILER IDENTIFICATION	1.2
1.1.2	AXLE IDENTIFICATION	1.3
1.1.3	LIST OF FACTORY NUMBERS	1.4
1.2	PROPER USE	1.4
1.3	OPTIONAL EQUIPMENT	1.8
1.4	WARRANTY TERMS	1.10
1.5	TRANSPORT	1.11
1.5.1	TRANSPORT ON VEHICLE.	1.11
1.5.2	INDEPENDENT TRANSPORT BY THE USER.	1.13
1.6	ENVIRONMENTAL HAZARDS	1.14
1.7	WITHDRAWAL FROM USE	1.15
2	SAFETY IN USE	2.1
2.1	BASIC SAFETY RULES	2.2
2.1.1	USE OF TRAILER	2.2
2.1.2	HITCHING AND DISCONNECTING FROM TRACTOR	2.3
2.1.3	COUPLING AND UNCOUPLING SECOND TRAILER	2.3
2.1.4	HYDRAULIC AND PNEUMATIC SYSTEMS	2.4
2.1.5	LOADING AND UNLOADING	2.5
2.1.6	TRANSPORTING THE MACHINE	2.7
2.1.7	TYRES	2.10
2.1.8	MAINTENANCE	2.11
2.2	DESCRIPTION OF MINIMAL RISK	2.13
2.3	INFORMATION AND WARNING DECALS	2.14

3	DESIGN AND OPERATION	3.1
3.1	TECHNICAL SPECIFICATION	3.2
3.2	TRAILER CONSTRUCTION	3.3
3.2.1	CHASSIS	3.3
3.2.2	LOAD BOX	3.5
3.2.3	NET EXTENSIONS	3.7
3.2.4	MAIN BRAKE	3.8
3.2.5	HYDRAULIC TIPPER SYSTEM	3.13
3.2.6	PARKING BRAKE	3.15
3.2.7	LIGHTING SYSTEM	3.16
4	CORRECT USE	4.1
4.1	PREPARING FOR WORK BEFORE FIRST USE	4.2
4.1.1	CHECKING THE TRAILER AFTER DELIVERY	4.2
4.1.2	PREPARE A TRAILER FOR FIRST HITCHING TO TRACTOR	4.3
4.2	HITCHING AND DISCONNECTING FROM TRACTOR	4.4
4.3	COUPLING AND UNCOUPLING SECOND TRAILER	4.9
4.4	LOADING AND SECURING LOAD	4.11
4.4.1	GENERAL INFORMATION CONCERNING LOAD	4.11
4.5	TRANSPORTING LOADS	4.19
4.6	UNLOADING	4.21
4.7	PROPER USE AND MAINTENANCE OF TYRES	4.25
5	TECHNICAL OPERATION	5.1
5.1	PRELIMINARY INFORMATION	5.2
5.2	SERVICING BRAKES AND AXLES	5.2
5.2.1	PRELIMINARY INFORMATION	5.2
5.2.2	INITIAL INSPECTION OF AXLE BRAKES,	5.3
5.2.3	CHECK WHEEL AXLE BEARINGS LOOSENESS	5.4

5.2.4	ADJUSTMENT OF WHEEL AXLE BEARINGS LOOSENESS	5.6
5.2.5	MOUNTING AND DISMOUNTING WHEEL, INSPECTION OF WHEEL NUT TIGHTENING.	5.7
5.2.6	CHECK AIR PRESSURE, EVALUATE TECHNICAL CONDITION OF WHEELS AND TYRES,	5.10
5.2.7	MECHANICAL BRAKES ADJUSTMENT,	5.11
5.2.8	ADJUSTMENT OF OVERRUN BRAKE CABLE TENSION	5.13
5.2.9	CHANGE OF PARKING BRAKE CABLE AND ADJUSTMENT OF CABLE TENSION.	5.14
5.3	PNEUMATIC SYSTEM OPERATION	5.16
5.3.1	PRELIMINARY INFORMATION	5.16
5.3.2	INSPECTING AND CHECKING AIR TIGHTNESS OF PNEUMATIC SYSTEM.	5.17
5.3.3	CLEANING THE AIR FILTERS	5.18
5.3.4	DRAINING WATER FROM AIR TANK	5.20
5.3.5	CLEANING DRAIN VALVE	5.21
5.3.6	CLEANING AND MAINTAINING PNEUMATIC CONDUIT CONNECTIONS AND PNEUMATIC SOCKETS,	5.21
5.4	HYDRAULIC SYSTEM OPERATION	5.22
5.4.1	PRELIMINARY INFORMATION	5.22
5.4.2	CHECKING HYDRAULIC SYSTEM TIGHTNESS	5.22
5.4.3	CHECKING TECHNICAL CONDITION OF HYDRAULIC CONNECTIONS AND SOCKETS.	5.23
5.4.4	CHANGE OF HYDRAULIC CONDUITS	5.24
5.5	OPERATION OF ELECTRICAL SYSTEM AND WARNING ELEMENTS	5.24
5.5.1	PRELIMINARY INFORMATION	5.24
5.5.2	CHANGE BULBS	5.25
5.6	TRAILER LUBRICATION	5.26
5.7	CONSUMABLES	5.31
5.7.1	HYDRAULIC OIL	5.31



5.7.2	RECOMMENDED GREASE	5.32
5.8	CLEANING TRAILER	5.32
5.9	STORAGE	5.34
5.10	TIGHTENING TORQUE FOR NUT AND BOLT CONNECTIONS	5.35
5.11	INSTALLATION AND DISASSEMBLY OF THE FRAME AND TARPAULIN COVER	5.36
5.12	INSTALLATION AND DISASSEMBLY OF EXTENSION WALLS	5.38
5.13	ADJUSTMENT OF DRAWBAR POSITION	5.39
5.14	TROUBLESHOOTING	5.39



***SECTION***


**1**

---

**BASIC  
INFORMATION**

# 1.1 IDENTIFICATION

## 1.1.1 TRAILER IDENTIFICATION

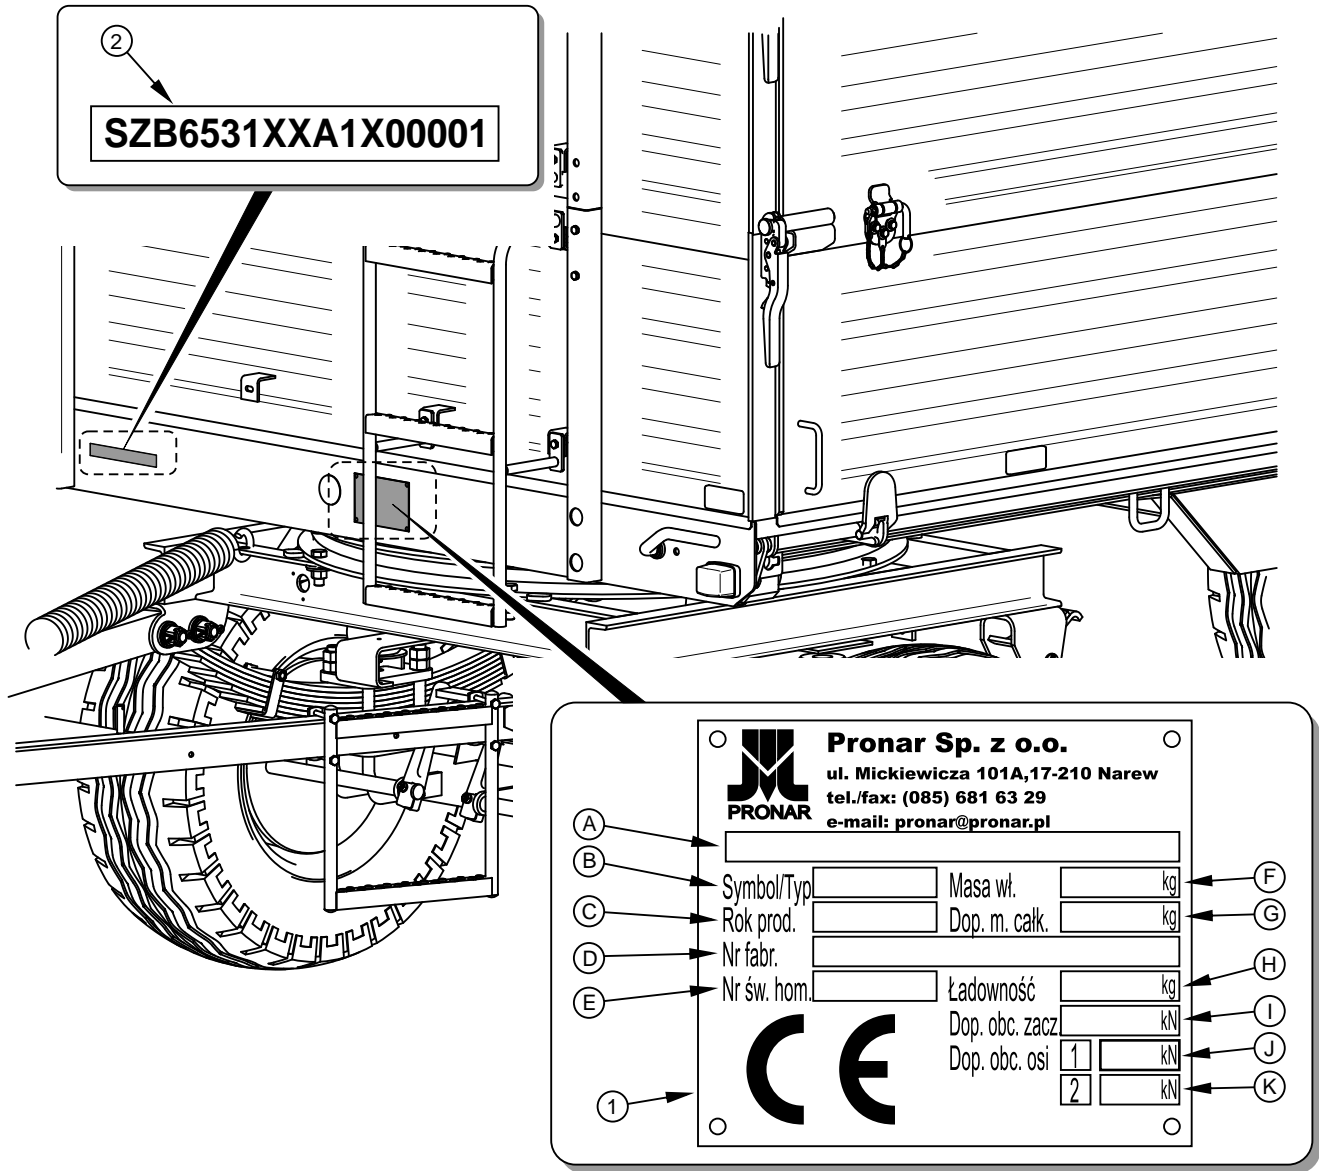

**FIGURE 1.1** Location of the data plate and serial number

(1) data plate, (2) serial number

The trailer is marked with the data plate (1), and the factory number (2) located on a gold painted rectangle. The serial number and data plate are on the beam of the trailer's upper frame (Fig. 1.1).


When buying the trailer check that the serial numbers on the machine agree with the number written in the *WARRANTY BOOK*, in the sales documents and in the *OPERATOR'S MANUAL*. The meaning of the individual fields found on the data plate are presented in the table below:

**TABLE 1.1 Markings on data plate**

ITEM	MARKING
<b>A</b>	General description and purpose
<b>B</b>	Symbol /Type
<b>C</b>	Year of manufacture
<b>D</b>	Seventeen digit serial number (VIN)
<b>E</b>	Official certificate number
<b>F</b>	Tare weight
<b>G</b>	Maximum gross weight
<b>H</b>	Carrying capacity
<b>I</b>	Maximum hitch load (not applicable)
<b>J</b>	Permissible front axle load
<b>K</b>	Permissible rear axle load

### 1.1.2 AXLE IDENTIFICATION


The factory number of the axle shaft and its type are stamped onto the data plate (2) secured to the axle shaft beam (1) – figure (1.2).

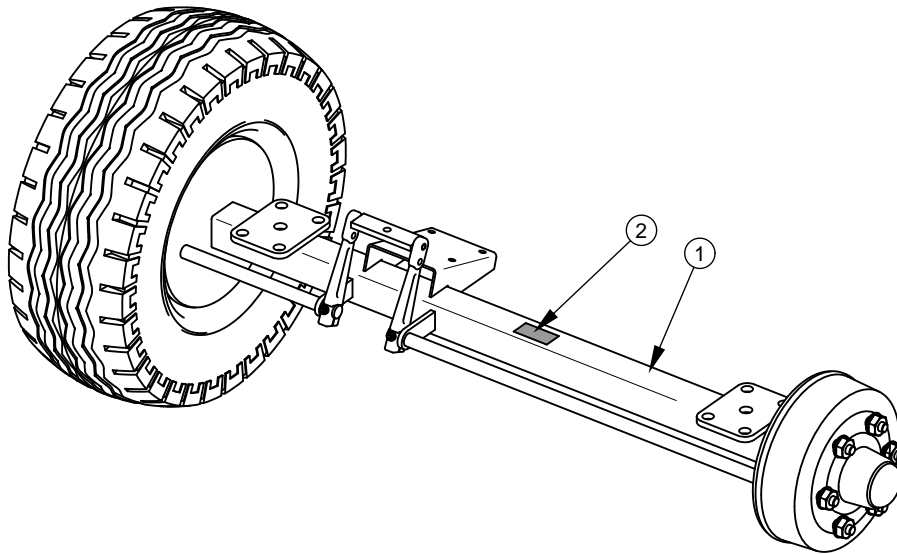

**FIGURE 1.2** Location of the axle data plate

(1) wheel axle, (2) data plate

**1.1.3 LIST OF FACTORY NUMBERS**

	<p><b>TIP</b></p> <p>In the event of ordering a replacement part or in the case of the appearance of problems it is often essential to give the factory numbers of parts or the VIN number of the trailer, therefore it is recommended that these numbers are inscribed in the spaces below.</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**VIN number**

S	Z	B	6	5	3		0	0			X				
---	---	---	---	---	---	--	---	---	--	--	---	--	--	--	--

**FRONT AXLE FACTORY NUMBER AND TYPE**

**REAR AXLE FACTORY NUMBER AND TYPE**

**1.2 PROPER USE**

The trailer is designed for transport of harvested crops and agricultural products as well as loose, bulk and long load materials at the farm and on public roads. It is acceptable to

transport construction materials, mineral fertilisers and other loads, if fulfilling conditions indicated in section 4. Non-compliance with the recommendations of the carriage and loading of goods described by the Manufacturer and the road transport regulations in force in the country in which the trailer is used, shall void the guarantee and is regarded as use of the machine not according to its intended purpose.

The trailer is not intended or designed for transporting people, animals or goods classified as dangerous materials.

### **IMPORTANT!**

The trailer must not be used for purposes other than those for which it is intended. The user **MUST NOT**:



- transport people, animals, hazardous materials, chemically aggressive loads that will corrode the construction elements of the trailer (causing corrosion of steel, destruction of paint coat, dissolving plastic elements and destruction of rubber elements etc.),
- transport incorrectly secured load, which during travel may cause contamination of the road and natural environment,
- transport incorrectly secured load, which during travel may change position in load box or fall out of the load box,
- transport loads, whose centre of gravity may destabilise the trailer,
- transport loads, which have uneven load distribution and/or overload axles and suspension elements.

The trailer is constructed according to current safety requirements and engineering standards. The brake system and the light and indicator system meet the requirements of road traffic regulations. The maximum speed of the trailer on public roads is 30 km/h in Poland (pursuant to Road Traffic Act of June 20th 1997, art. 20). In the countries where the trailer is used, the limits stipulated by the road traffic legislation in force in a given country must be observed. The trailer's speed must not, however, be greater than the maximum design speed of 30 km/h.

Using it as intended also involves all actions connected with the safe and proper operation and maintenance of the machine. In connection with this the user is obliged to:

- carefully read the *OPERATOR'S MANUAL* of the trailer and the *WARRANTY BOOK* and conform with the recommendations contained in these documents,
- understand the trailer's operating principle and how to operate it safely and correctly,
- adhere to the established maintenance and adjustment plans,
- comply with general safety regulations while working,
- prevent accidents,
- comply with the road traffic regulations and transport regulations in force in a given country, in which the trailer is used,
- carefully read the Operator's Manual and comply with its recommendations,
- only hitch the trailer to an agricultural tractor, which fulfils all the requirements made by the trailer's Manufacturer.

The trailer may only be used by persons, who:

- are familiar with the contents of this publication and with the contents of the agricultural tractor Operator's Manual,
- have been trained in trailer operation and safe operation,
- have the required authorisation to drive and are familiar with the road traffic regulations and transport regulations.

**TABLE 1.2     Agricultural tractor's requirements**

CONTENTS	UNIT	REQUIREMENTS
<b>Brake system - sockets</b>		
Pneumatic system 1 conduit	-	according to ISO 1728
Pneumatic system 2 conduit	-	according to ISO 1728
Hydraulic system	-	according to ISO 7421-1
<b>Maximum system pressure</b>		
Pneumatic system 1 conduit	bar / kPa	5.8 / 580
Pneumatic system 2 conduit	bar / kPa	8 / 800
Hydraulic system	bar / MPa	150 / 15



CONTENTS	UNIT	REQUIREMENTS
<b>Hydraulic tipper system</b>		
Hydraulic oil	-	L HL 32 Lotos <sup>(1)</sup>
Maximum system pressure	bar / MPa	160 / 16
Oil demand:	l	8
<b>Electrical system</b>		
Electrical system voltage	V	12
Attachment socket	-	7 polar compliant with ISO 1724
<b>Required tractor hitch</b>		
Type	-	Upper transport hitch
<b>Other requirements</b>		
Min. tractor power		
T653	kW / HP	26.7 / 36.3
T653/1	kW / HP	30.6 / 41.6
T653/2	kW / HP	34.4 / 46.7

<sup>(1)</sup> – use of other oil is permitted, on condition that it may be mixed with the oil in the trailer. Detailed information may be found on the product information card.

In the event that the trailer shall be hitched to a second trailer it must fulfil the requirements stipulated in table (1.3).

**TABLE 1.3 Requirements for second trailer**

CONTENTS	UNIT	REQUIREMENTS
<b>Maximum gross weight</b>		
T653	kg	6,000
T653/1	kg	7,100
T653/2 <sup>(1)</sup>	kg	8,120

CONTENTS	UNIT	REQUIREMENTS
<b>Brake system - connectors</b>		
Pneumatic system 1 conduit	-	connector compliant with ISO 1728
Pneumatic system 2 conduit	-	connector compliant with ISO 1728
Hydraulic system	-	connector compliant with ISO 7421-1
<b>Maximum system pressure</b>		
Pneumatic system 1 conduit	bar / kPa	5.8 / 580
Pneumatic system 2 conduit	bar / kPa	8 / 800
Hydraulic system	bar / MPa	150 / 15
<b>Hydraulic tipper system</b>		
Hydraulic oil	-	L HL 32 Lotos <sup>(2)</sup>
Maximum system pressure	bar / MPa	160 / 16
<b>Electrical system</b>		
Electrical system voltage	V	12
Attachment socket	-	7 polar compliant with ISO 1724
<b>Draw bar of trailer</b>		
Diameter of drawbar shaft	mm	40

<sup>(1)</sup> – does not apply to trailer version T653/2 with overrun brake

<sup>(2)</sup> – use of other oil is permitted, on condition that it may be mixed with the oil in the trailer. Detailed information may be found on the product information card.

### 1.3 OPTIONAL EQUIPMENT

**TABLE 1.4 Trailer optional equipment**

EQUIPMENT	STANDARD	ADDITIONAL
Operator's Manual	•	
Warranty Book	•	

EQUIPMENT	STANDARD	ADDITIONAL
Pneumatic system 1 conduit <sup>(1)</sup>	•	
Overrun brake <sup>(2)</sup>	•	
Rear hitch,	•	
Slow-moving vehicle warning sign		•
Warning reflective triangle		•
Frame with tarpaulin cover		•
Wall extension set, lower ladder, drawbar ladder <sup>(3)</sup>	•	
Hand brake <sup>(1)</sup>	•	
Wheel wedges	•	
Drawbar with hitching eye Ø40 mm	•	
Clamping cable with cable extraction mechanism	•	
Chute		•
Spare wheel holder with spare wheel		•

<sup>(1)</sup> – does not apply to trailer version T653/2 with overrun brake

<sup>(2)</sup> – applies to trailer version T653/2 with overrun brake

<sup>(3)</sup> – does not apply to trailer version T653

Some standard equipment elements, which were listed in table (1.4), may not be present in the delivered trailer. This allows the possibility of ordering new machines with a different set of optional equipment, replacing standard equipment.

Information concerning tyres is placed at the end of this publication in ANNEX A.

## 1.4 WARRANTY TERMS

PRONAR Sp. z o.o., Narew guarantees the reliable operation of the machine when it is used according to its intended purpose as described in the *OPERATOR'S MANUAL*.

The repair period is specified in the *WARRANTY BOOK*.

The guarantee does not apply to those parts and sub-assemblies of the machine, which are subject to wear in normal usage conditions, regardless of the warranty period. Consumables include the following parts/sub-assemblies:

- drawbar hitching eye,
- pneumatic system connector filters,
- tyres,
- brake shoes,
- bulbs and LED lamps,
- seals,
- bearings.

The warranty service only applies to such cases as: mechanical damage, which is not the user's fault, factory defects of parts, etc.

In the event of damage arising from:

- mechanical damage which is the user's fault, caused by road accidents,
- by inappropriate use, adjustment or maintenance, use of the trailer for purposes other than those for which it is intended,
- use of damaged machine,
- repairs carried out by unauthorised persons, improperly carried out repairs,
- making unauthorised alterations to machine design,

the user will lose the right to warranty service.

**TIP**

Demand that the seller carefully and precisely fills out the Warranty Book and guarantee repair coupons. A missing date of purchase or sale point stamp, may make the user ineligible for any warranty repair or refund.

The user is obliged to report immediately on noticing any wear in the paint coating or traces of corrosion, and to have the faults rectified whether they are covered by the guarantee or not. Detailed guarantee regulations are contained in the *WARRANTY BOOK* attached to each machine.

Modification of the trailer without the written consent of the Manufacturer is forbidden. In particular, do NOT weld, drill holes in, cut or keep the main structural elements of the machine, which have a direct impact on the machine operation safety.

## 1.5 TRANSPORT

The trailer is ready for sale completely assembled and does not require packing. Packing is only required for the machine's technical documentation and any extra fittings. The trailer is delivered to the user either transported on a vehicle or, after being attached to a tractor, independently (towed).

### 1.5.1 TRANSPORT ON VEHICLE.

Loading and unloading of trailer from vehicle shall be conducted using loading ramp with the aid of an agricultural tractor. During work adhere to the general principles of Health and Safety at Work applicable to reloading work. Persons operating reloading equipment must have the qualifications required to operate these machines. The trailer must be properly connected with the tractor according to the requirements closed in this Operators Manual. The trailer brake system must be started in checked before driving off or onto ramp.

The trailer should be attached firmly to the platform of the vehicle using straps or chains fitted with a tightening mechanism. Securing elements should be attached to the transport catches designed for this purpose (1) – figure (1.3), permanent structural elements of the trailer (longitudinal and transverse frame sections etc.). Transport catches (hooks and eyes) are welded to upper longitudinal frame (2), with one pair on each side of the trailer. Use certified and technically reliable securing measures. Worn straps, cracked securing catches, bent or

corroded as well as other damage may disqualify use of the given element from use. Carefully read the information contained in the Operator's Manual of the given securing measure. Wedges, wooden blocks or other objects without sharp edges should be placed under the wheels of the trailer to prevent it from rolling. Trailer wheel locks must be nailed to the low platform planks of the vehicle or secured in another manner preventing their movement. The number of securing elements (cables, straps, chains and stay etc.) and the force necessary for their tensioning depends on a number of things, including weight of the trailer, the construction of vehicle carrying trailer, speed of travel and other conditions. For this reason it is impossible to define the securing plan precisely. A correctly secured trailer does not change its position with regard to the transport in vehicle. The securing elements must be selected according to the guidelines of the Manufacturer of these elements. In case of doubt apply a greater number of securing straps in order to immobilise the trailer. If necessary, sharp edges of trailer should be protected at the same time protecting the securing straps from breaking during transport.

### **IMPORTANT!**



When being road transported on a motor vehicle the trailer must be mounted on the vehicle's platform in accordance with the transport safety requirements and the regulations.

Driver of the vehicle should be particularly careful during travel. This is due to the vehicle's centre of gravity shifting upwards when loaded with the machine.


Use only certified and technically reliable securing measures. Carefully read the manufacturer's instructions for the securing measures.

During reloading work, particular care should be taken not to damage parts of the machine's fittings or the lacquer coating. The tare weight of the trailer in condition ready for travel is given in table (3.1).



### **DANGER**

Incorrect application of securing measures may cause an accident.

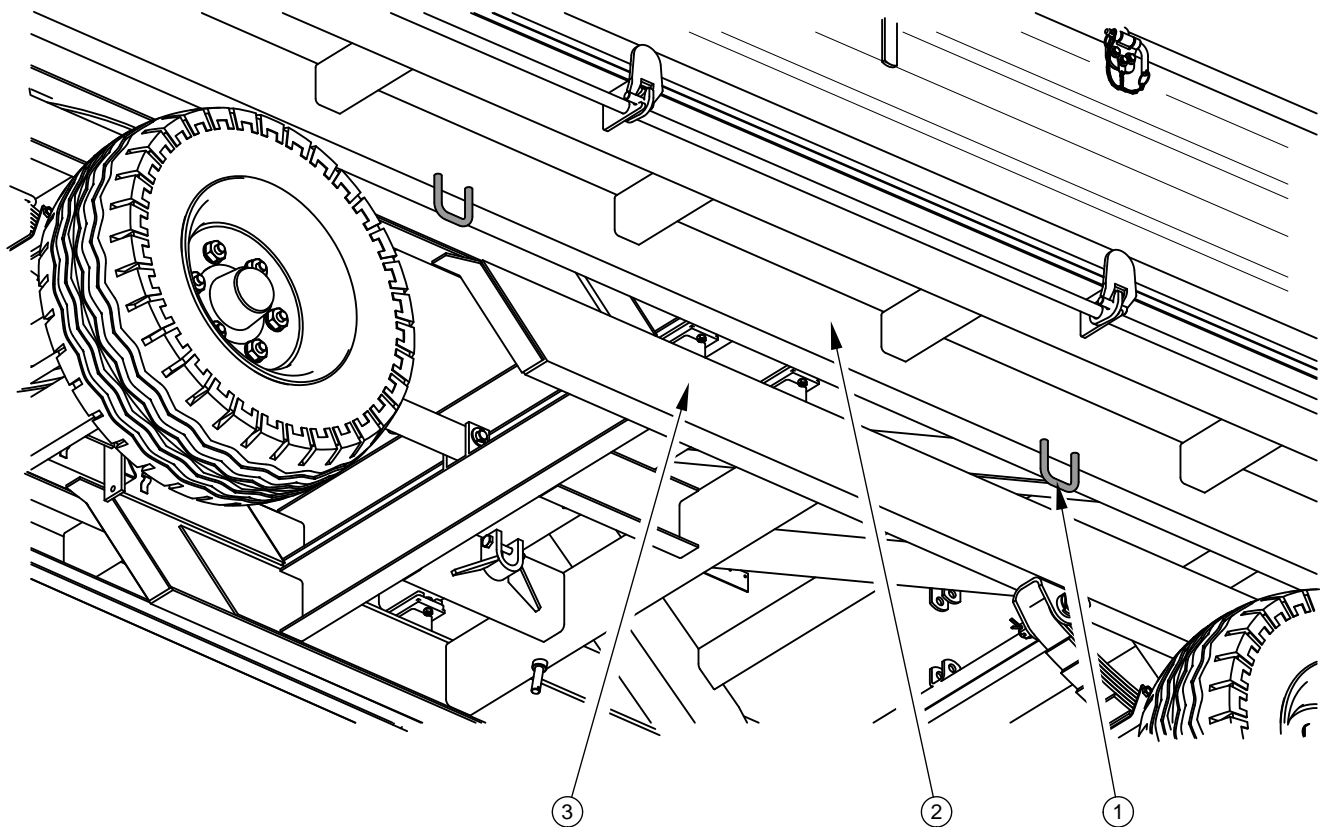

**FIGURE 1.3** Positioning of transport lugs

*(1) transport lug, (2) upper longitudinal frame, (3) lower longitudinal frame*

### 1.5.2 INDEPENDENT TRANSPORT BY THE USER.

In the event of independent transport by the user after purchase of the trailer, the user must read the trailer Operator's Manual and adhere to the recommendations contained therein. Independent transport involves towing the trailer with own agricultural tractor to destination. During transport adjust travel speed to the prevailing road conditions, but do not exceed the maximum design speed.



#### **IMPORTANT!**

When transporting independently, the user must carefully read this operator's manual and observe its recommendations.

## 1.6 ENVIRONMENTAL HAZARDS

A hydraulic oil leak constitutes a direct threat to the natural environment owing to its limited biodegradability. Because of the low solubility of oil in water, it is not highly toxic to living organisms. An oil leak into water reservoirs may however lead to a reduction of the oxygen content. While carrying out maintenance and repair work which involves the risk of an oil leak, this work should take place on an oil resistant floor or surface. In the event of oil leaking into the environment, first of all contain the source of the leak, and then collect the leaked oil using available means. Remaining oil should be collected using sorbents, or by mixing the oil with sand, sawdust or other absorbent materials. The oil pollution, once gathered up, should be kept in a sealed, marked, hydrocarbon resistant container. The container should be kept away from heat sources, flammable materials and food.



### **DANGER**

Used hydraulic oil or gathered remains mixed with absorbent material should be stored in a precisely marked container. Do not use food packaging for this purpose.

Oil which has been used up or is unsuitable for further use owing to a loss of its properties should be stored in its original packaging in the conditions described above. Waste oil should be taken to the appropriate facility dealing with the re-use of this type of waste. Waste code: 13 01 10. Detailed information concerning hydraulic oil may be found on the product's Material Safety Data Sheet.



### **TIP**

The hydraulic system of the trailer is filled with L-HL32 Lotos hydraulic oil.



### **IMPORTANT!**

Waste oil should only be taken to the appropriate facility dealing with the re-use of this type of waste. Do NOT throw or pour oil into sewerage or water tanks.



## 1.7 WITHDRAWAL FROM USE

In the event of decision by the user to withdraw the trailer from use, comply with the regulations in force in the given country concerning withdrawal from use and recycling of machines withdrawn from use. Before commencing dismantling, totally remove the oil from the hydraulic system and reduce air pressure completely in the pneumatic brake system (e.g. using air tank drain valve).



### **DANGER**

During dismantling personal protection equipment shall be used i.e. protective clothing, boots, gloves and protective goggles etc.

Avoid contact of skin with oil. Do not allow used hydraulic oil to spill.

When spare parts are changed, worn out or damaged parts that cannot be reclaimed should be taken to a collection point for recyclable raw materials. Hydraulic oil should be taken to the appropriate facility dealing with the re-use of this type of waste.



**SECTION**

**2**

---

**SAFETY  
IN USE**

## 2.1 BASIC SAFETY RULES

### 2.1.1 USE OF TRAILER

- Before using the trailer, the user must carefully read this Operator's Manual and the *WARRANTY BOOK*. When operating the machine, the operator must comply with the recommendations.
- The trailer may only be used and operated by persons qualified to drive agricultural tractors and agricultural machines and trained in the use of the machine.
- If the information contained in the Operator's Manual is difficult to understand, contact a seller, who runs an authorised technical service on behalf of the manufacturer, or contact the manufacturer directly.
- Careless and improper use and operation of the trailer, and non-compliance with the recommendations given in this operator's manual is dangerous to your health.
- Be aware of existence of a minimal risk, and for this reason the fundamental basis for using this trailer should be the application of safety rules and sensible behaviour.
- The machine must never be used by persons, who are not authorised to drive agricultural tractors, including children and people under the influence of alcohol or other drugs.
- Non-compliance with the safety rules of this Operator's Manual can be dangerous to the health and life of the operator and others.
- The trailer must not be used for purposes other than those for which it is intended. Anyone who uses the trailer other than the way intended takes full responsibility for himself for any consequences of this potentially improper use. Use of the machine for purposes other than those for which it is intended by the Manufacturer may invalidate the guarantee.
- Assembly and disassembly of extension walls, the frame and tarpaulin cover, can only be carried out with the use of appropriate platforms, ladders or from a ramp. These fittings must be in good condition to fully protect the persons working on

them against falling. The above procedure should be performed by at least two persons.

- In the final phase of folding the tarpaulin cover, at all times hold with one hand the top of the front frame or other permanent structural element. Non-compliance with this rule can put the user at risk of falling.

### **2.1.2 HITCHING AND DISCONNECTING FROM TRACTOR**

- Do NOT hitch trailer to tractor, if it does not fulfil the requirements made by the Manufacturer (minimal tractor power requirement, lack of required tractor hitch etc.) – compare table (1.2) *AGRICULTURAL TRACTOR REQUIREMENTS*. Before hitching trailer make certain that oil in external hydraulic system of tractor may be mixed with the hydraulic oil of the trailer.
- Before hitching trailer to tractor check that tractor and trailer are in good technical condition.
- During hitching only use the upper transport hitch of the tractor. After completing the coupling of the machine check the safety of the hitch. Carefully read the tractor Operator's Manual. If the tractor is equipped with an automatic hitch, make certain that the coupling operation is completed.
- Be especially careful when attaching the machine.
- When attaching, there must be nobody between the trailer and the tractor.
- Do NOT proceed with disconnecting trailer from the tractor when load box is raised.
- Coupling and uncoupling the trailer may only take place when the machine is immobilised by use of the parking brake.

### **2.1.3 COUPLING AND UNCOUPLING SECOND TRAILER**

- Do NOT connect a second trailer, if it does not fulfil the requirements made by the Manufacturer of (lack of required drawbar eye, exceeding permissible total weight etc.) – compare table (1.2) *REQUIREMENTS FOR SECOND TRAILER*. Before connecting machines make certain that the oil in both trailers may be mixed.

- Only machines built on a double axle chassis with permissible total weight described in table (1.3) may be hitched to the trailer. Permissible total weight of linked vehicle is dependent upon the trailer version.
- Before hitching trailer to tractor check that both machines are in good technical condition.
- After completing the coupling of the machine check the safety of the hitch.
- Be especially careful when attaching the machine.
- When attaching, there must be nobody between the trailers. Person assisting hitching up machines should stand outside the area of danger and be visible to the tractor driver at all times.
- Do NOT proceed with disconnecting the second trailer from the tractor when load box is raised.

#### **2.1.4 HYDRAULIC AND PNEUMATIC SYSTEMS**

- When operating, the hydraulic and pneumatic systems are under high pressure.
- Regularly check the technical condition of the connections and the hydraulic and pneumatic leads. There must no oil or air leaks.
- Cut-off valve in the hydraulic tipping system limits the tipping angle of the load box when tipped to the sides and to the rear. The length of the control cable controlling this valve is factory adjusted by the Manufacturer and must not be changed when the trailer is used.
- In the event of malfunction of the hydraulic or pneumatic system, do not use the trailer until the malfunction is corrected.
- When connecting the hydraulic conduits to the tractor, make sure that the tractor's hydraulic system and trailer are not under pressure. If necessary reduce residual pressure in the system.
- In the event of injuries being caused by pressurised hydraulic oil, contact a doctor immediately. Hydraulic oil may find its way under the skin and cause infections. In the event of contact of oil with eye, rinse with large quantity of water and in the event of the occurrence of irritation consultant a doctor. In the event of contact of

oil with skin wash the area of contact with water and soap. Do not apply organic solvents (petrol, kerosene).

- Use the hydraulic oil recommended by the manufacturer.
- After changing the hydraulic oil, the used oil should be properly disposed of. Used oil or oil, which has lost its properties, should be stored in original containers or replacement containers resistant to action of hydrocarbons. Replacement containers must be clearly marked and appropriately stored.
- Do not store hydraulic oil in packaging designed for storing food or foodstuffs.
- Rubber hydraulic conduits must be replaced every 4 years regardless of their technical condition.

### **2.1.5 LOADING AND UNLOADING**

- Before raising load box the tipping pins should be placed on the intended unloading side. Check if the pins are correctly inserted.
- Unloading and loading of trailer may only take place when the machine is positioned on level and hard surface and connected to tractor. Tractor and trailer must be placed to drive forwards.
- Use only original tipping pins with a handle. Using third-party pins could damage the trailer.
- Loading and unloading work should be carried out by someone experienced in this type of work.
- Before loading make certain that linking cables are laid and release mechanism is set in proper position and secured with the aid of linchpin. If the loaded material does not exert any pressure on the trailer sides it is permitted to dismantle clamping cable. If pressure is exerted it may cause damage to trailer sides.
- The load must be arranged in such a way that it does not threaten the stability of the trailer, and does not hinder driving.
- Trailer with net extensions may only be unloaded by tipping load box to the rear.
- Do NOT drive with the load box raised.


- Ensure that during unloading / loading raising the load box nobody is near the trailer. Before tipping load box ensure that there is visibility and make certain that there are no bystanders.
- The trailer is not intended for transporting people, animals or hazardous materials.
- Keep a safe distance from overhead electric power lines during unloading and when load box is raised.
- The arrangement of the load may not cause an overload on the axle of the trailer.
- When opening load box side wall locks take particular care, because of the pressure of the load on the wall.
- Do NOT tip of the load box in windy conditions.
- When closing or opening the rear grain chute gate or the walls and extensions take particular care to avoid crushing fingers.
- Bulk materials loaded in excess of 1 m can be unloaded by tipping the load box to the rear only.
- Incorrect load distribution and overloading the machine may cause the trailer to tip over or cause damage to its components.
- Do NOT go or place hand between open side and load box.
- If the load does not pour from the raised load box immediately cease unloading. The trailer may only be tipped again after removing the object, which prevented the load from pouring.
- During winter particular attention must be paid to loads, which may freeze during transport. When tipping the load box with frozen load the trailer may become unstable and tip over.
- Do NOT raise the load box if there is any danger whatsoever that the box will tip over.
- Do NOT jerk the trailer forwards if bulky or reluctant to pour load it is not unloaded.
- Do NOT climb on load box during loading and unloading.



- Do NOT tip the loaded load box when the sides are closed.
- Lower the load box before proceeding to deal with a malfunction. If it is necessary to raise the load box then secure it against dropping with the aid of supports. The load box may not be loaded, and the trailer must be connected to a tractor and secured with the aid of wedges and also immobilised with the parking brake.
- After completing unloading, ensure that the load box is empty.

### **2.1.6 TRANSPORTING THE MACHINE**

- During travel on public roads comply with the road traffic regulations and transport regulations in force in a given country, in which the trailer is used.
- Do not exceed the permitted speed arising from limitations of road conditions and construction limitations. Adjust travel speed to the prevailing road conditions, trailer load and road traffic regulations limits.
- The machine must NOT be left unsecured. When not connected to the tractor, the trailer must be immobilised with parking brake and protected against rolling with wedges or other objects without sharp edges placed under the front and back wheels.
- Before driving off make certain that the trailer is correctly hitched to the tractor.
- Do NOT move off or drive when load box is raised.
- Prior to moving off make sure that tipping pins connecting the loadbox and the lower frame and the side wall hinge pins are secured against falling out. Check if rear side pouring chute is secure. Check that all sides and extensions are properly closed. Check correctness of the securing of linking cables and a security of cable release mechanism.
- Before using the trailer always check its technical condition, especially in terms of safety. In particular, check the technical condition of the hitch system, the axle system, the brake system, indicator lights and the connective elements of the hydraulic, pneumatic and electrical systems.
- Wedges (1), should be placed only under one wheel (one in front of the wheel, the second behind the wheel - figure (2.1)). Wedges should not be placed under wheels of the front axle.

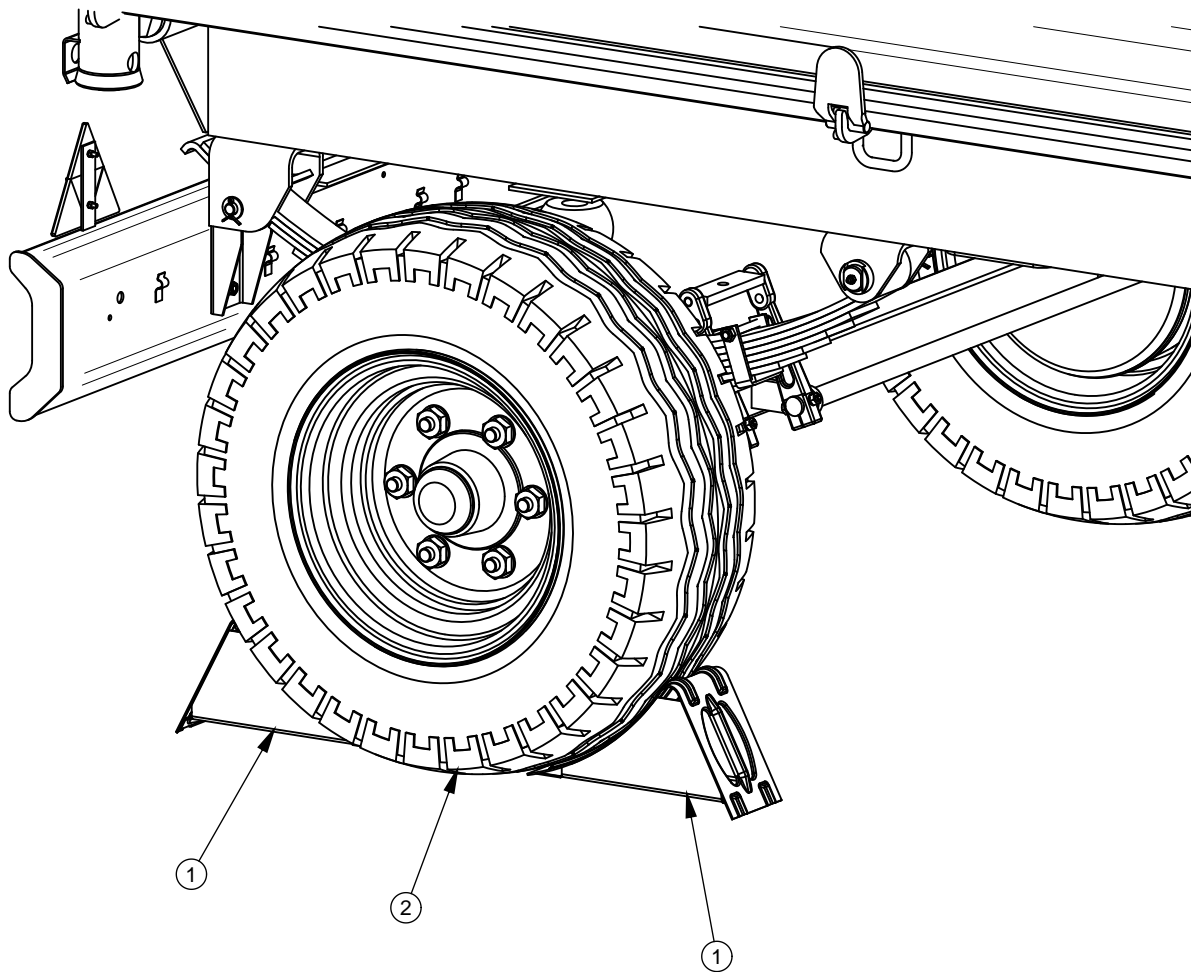


**FIGURE 2.1 Method of placing wedges**

(1) securing wedge, (2) wheel of rear axle

- Before driving off check that the parking brake is released, the braking force regulator is positioned in the proper position (applies to pneumatic systems with a manual three position regulator).
- The trailer is designed to operate on slopes up to 8°. Driving trailer across ground with steeper slopes may cause the trailer to tip over as a result of loss of stability.
- While driving on public roads the trailer must be fitted with a certified or authorised reflective warning triangle.
- Periodically drain water from the air tank in pneumatic system. During frosts, freezing water may cause damage to pneumatic system components.
- Reckless driving and excessive speed may cause accidents.

- A load protruding beyond the edge of the trailer should be indicated according to the road traffic regulations. Do NOT transport loads forbidden by the Manufacturer.

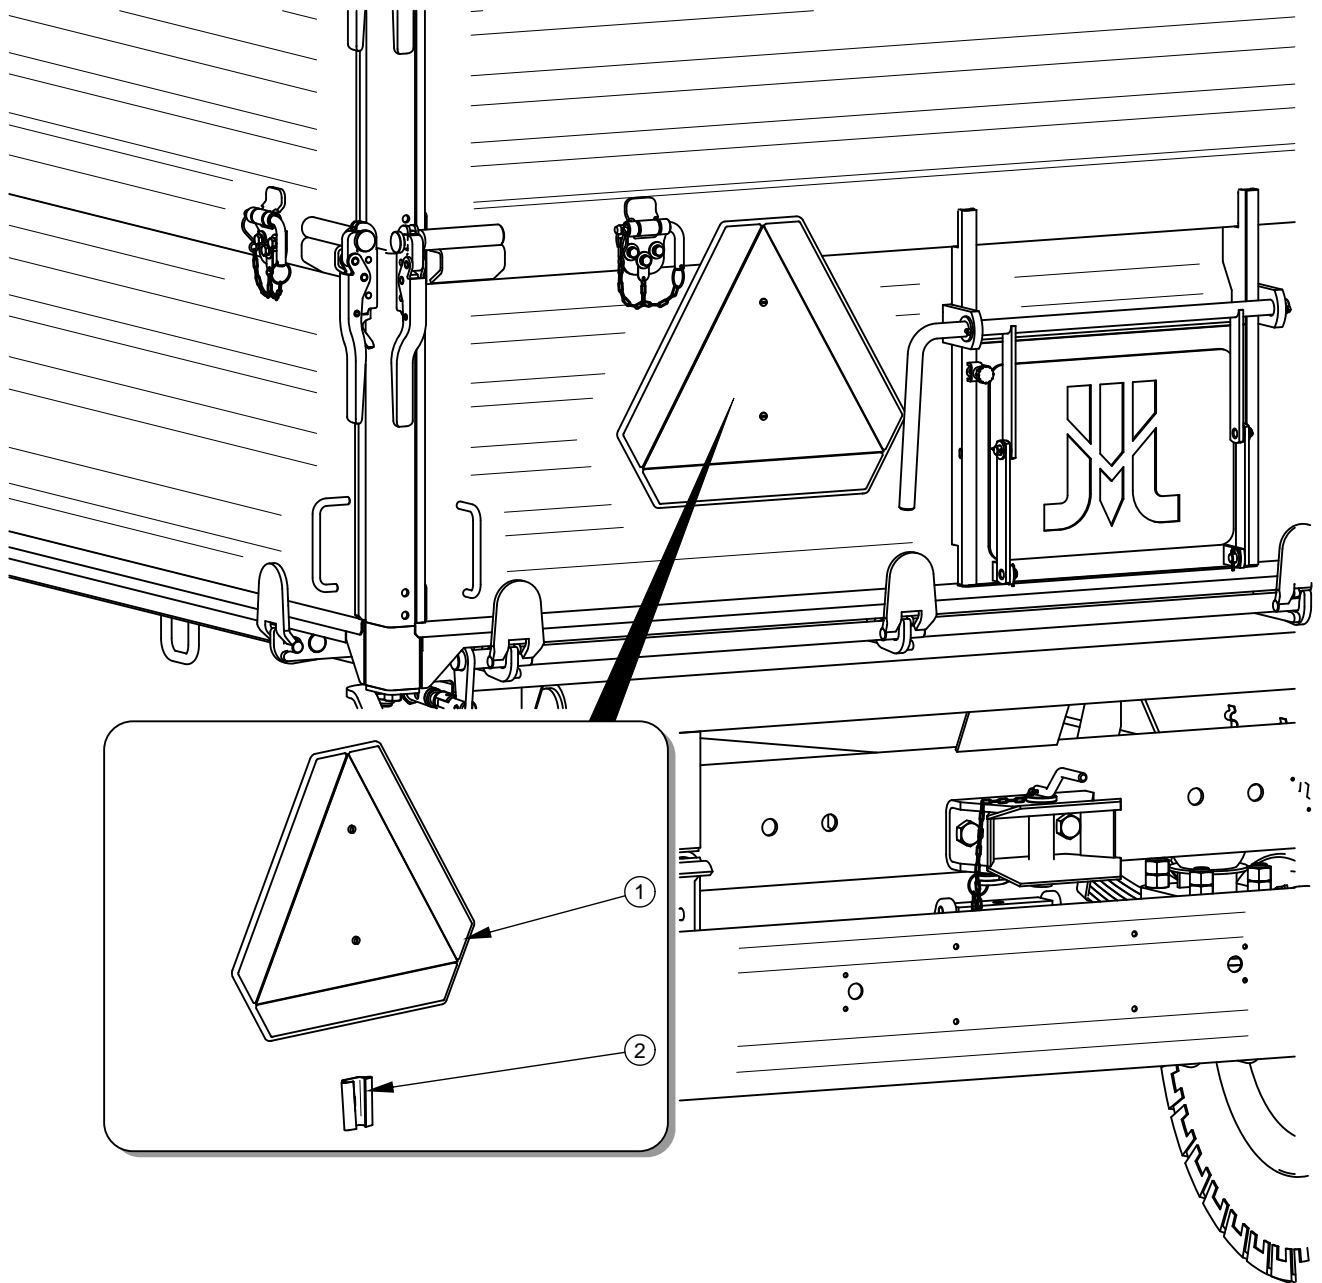

**FIGURE 2.2** Mounting place for slow-moving vehicle sign

(1) warning sign, (2) attachment point

- If the trailer is the last vehicle in the group, a slow-moving vehicle sign should be placed on the trailer's rear load box wall – (figure 2.2). The warning sign (1)

should be attached using the specifically prepared holder (2), riveted to the rear wall of the load box.

- The trailer's maximum carrying capacity must not be exceeded. Exceeding the carrying capacity may lead to damage to the machine, loss of stability while driving, scattering of the load and danger while driving. The brake system is adjusted to the gross weight of the trailer, exceeding the weight limit causes drastic reduction of basic braking effectiveness.
- Load must be uniformly distributed and it must not obstruct visibility or hinder driving. The load must be secured so that it cannot move or fall over.
- During reversing one should use the assistance of another person. During manoeuvring the person helping must stay at a safe distance from the danger zone and be visible all the time to the tractor driver.
- Do NOT attempt to board trailer while travelling.
- Do NOT park trailer on slope.

### **2.1.7 TYRES**

- When working with tyres, the trailer should be immobilised with parking brake and secured against rolling by placing wedges under wheel. The wheel can be taken off only when the trailer is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Inspection of nut tightening should be carried out after first use of trailer, after first travel with loading and then after 6 months use. In the event of intensive work checking the nut tightening should at least every 100 kilometres. The inspection should be repeated individually if a wheel has been removed from the wheel axle.
- Avoid potholes, sudden manoeuvres or high speeds when turning.
- Check the tyre pressure regularly. Pressure and tyres should be also checked after the whole day of intensive work. Please note that higher temperatures could raise tyre pressure by as much as 1 bar. At high temperatures and pressure, reduce load or speed. Do not release air from warm tyres to adjust the pressure or the tyres will be underinflated when temperatures return to normal.

- Protect valves using suitable caps to avoid soiling.

### **2.1.8 MAINTENANCE**

- During the warranty period, any repairs may only be carried out by Warranty Service authorised by the manufacturer. After the expiry of the warranty period it is recommended that possible repairs to the trailer be performed by specialised workshops.
- In the event of any fault or damage whatsoever, do not use the trailer until the fault has been fixed.
- During work use the proper, close-fitting protective clothing, gloves, protective goggles and appropriate tools.
- Any modification to the trailer frees the manufacturer from any responsibility for damage or detriment to health, which may arise as a result.
- The trailer can only be stood on when it is absolutely motionless and the tractor engine is switched off. Tractor and trailer should be secured using parking brake and in addition wedges should be placed beneath trailer wheel. Ensure that unauthorised persons do not have access to the tractor's cab.
- Regularly check the condition of nut and bolt connections, in particular connections of drawbar eye with drawbar and wheel nuts.
- Regularly service machine according to schedule defined by Manufacturer.
- Before beginning work requiring raising of load box, it must be emptied and secured by supports to prevent accidental falling. The trailer must at this time be hitched to the tractor and secured with wedges and parking brake.
- Before beginning repair works on hydraulic or pneumatic systems reduce oil or air pressure completely.
- Servicing and repair work should be carried out in line with the general principles of workplace health and safety. In the event of injury, the wound must be immediately cleaned and disinfected. In the event of more serious injuries, seek a doctor's advice.

- Repair, maintenance and cleaning work should be carried out with the tractor's engine switched off and the ignition key removed. Tractor and trailer should be secured using parking brake and in addition wedges should be placed beneath trailer wheel. Ensure that unauthorised persons do not have access to the tractor's cab.
- During maintenance or repair work trailer may be unhitched from tractor, but secured with wedges and parking brake. During this work the load box may not be raised.
- Should it be necessary to change individual parts, use only those parts indicated by the Manufacturer. Non-adherence to these requirements may put the user and other people's health and life at risk, and also damage the machine and invalidate the guarantee.
- Before welding or electrical work, the trailer should be disconnected from the power supply. The paint coating should be cleaned. Burning paint fumes are poisonous for people and animals. Welding work should be carried out in a well lit and well ventilated space.
- During welding work pay attention to flammable or fusible elements (parts of the pneumatic, electric and hydraulic systems, plastic parts). If there is a risk that they will catch fire or be damaged, they should be removed or covered with non-flammable material before commencing welding work. Before beginning work prepare a CO<sub>2</sub> or foam extinguisher.
- In the event of work requiring the trailer to be raised, use properly certified hydraulic or mechanical lifts for this purpose. After lifting the machine, stable and durable supports must also be used. Work must not be carried out under a trailer, which has only been raised with a lift or jack.
- The trailer must not be supported using fragile elements (bricks or concrete blocks).
- After completing work associated with lubrication, remove excess oil or grease. The trailer should be kept clean and tidy.
- Exercise caution when climbing on top of the load box. Climbing on top of the load box is possible by use of ladders placed on the front wall, extension and

draw bar and also folding steps inside the load box. Components not intended to aid access may not be used for this purpose. Before entering load box prevent trailer moving with parking brake and wedges.

- Do NOT make independent repairs of control valve, brake cylinders, tipping cylinder ram and braking force regulator. In the event of damage to these elements, repair should be entrusted to authorised service point or replace elements with new parts.
- Do NOT make repairs to drawbar (straightening, repairing or welding). A damaged drawbar must be replaced.
- Do NOT install additional appliances or fittings not according to the specifications defined by the Manufacturer.
- The trailer may only be towed when axles and wheels, lighting system and brakes are reliable.

## 2.2 DESCRIPTION OF MINIMAL RISK

Pronar Sp. z o. o. in Narew has made every effort to eliminate the risk of accidents. There is, however, a certain minimal risk, which could lead to an accident, and this is connected mainly with the actions described below:

- using the trailer for purposes other than those for which it is intended,
- being between the tractor and the trailer while the engine is running and when the machine is being attached or hitched to second trailer
- being on the machine during work,
- not keeping a safe distance during loading or unloading of trailer,
- operation of the trailer by persons under the influence of alcohol,
- making modifications to the machine without the consent of the Manufacturer,
- cleaning, maintenance and technical checks of the trailer.
- presence of persons or animals in areas invisible from the driver's position.

The minimal risk may be kept to a minimum by following the recommendations below:




- prudent and unhurried operation of the machine,
- sensible application of the remarks and recommendations contained in the Operator's Manual,
- keeping a safe distance from forbidden or dangerous places during unloading, loading and hitching trailer,
- carrying out repair and maintenance work in line with operating safety rules,
- carrying out repair and maintenance work by persons trained to do so,
- using strictly suited protective clothing, and appropriate tools,
- ensuring unauthorised persons have no access to the machine, especially children.
- keeping a safe distance from forbidden or dangerous places
- a ban on being on the machine during travel, loading or unloading.







## 2.3 INFORMATION AND WARNING DECALS

The trailer is labelled with the information and warning decals mentioned in table (2.1). The symbols are positioned as presented in figure (2.3). Throughout the time it is in use, the user of the machine is obliged to take care that notices and warning and information symbols located on the trailer are clear and legible. In the event of their destruction, they must be replaced with new ones. Safety decals are available from your PRONAR dealer or directly from PRONAR customer service. New assemblies, changed during repair, must be labelled once again with the appropriate safety signs. During trailer cleaning do not use solvents which may damage the coating of information label stickers and do not subject them to strong water jets.

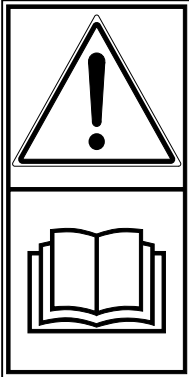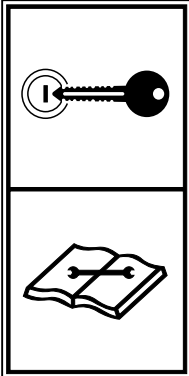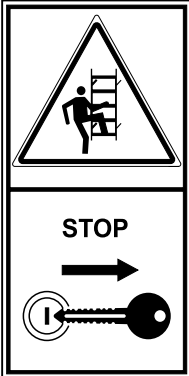

TABLE 2.1 Information and warning decals

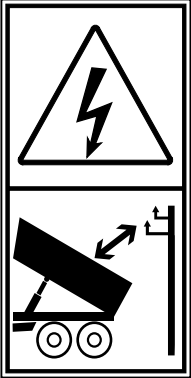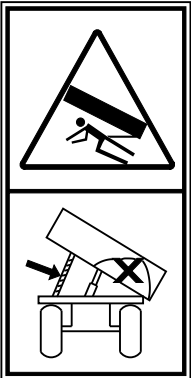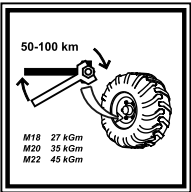ITEM	DECAL	MEANING OF SYMBOL
1	<div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 5px;"><b>T653 PRONAR</b></div> <div style="border: 1px solid black; padding: 5px; text-align: center; margin-bottom: 5px;"><b>T653/1 PRONAR</b></div> <div style="border: 1px solid black; padding: 5px; text-align: center;"><b>T653/2 PRONAR</b></div>	Trailer version.
2		<p>Note.</p> <p>Before starting work, carefully read the Operator's Manual.</p>
3		<p>Before beginning servicing or repairs, switch off tractor's engine and remove key from ignition. Ensure that unauthorised persons do not have access to the tractor's cab.</p>
4		<p>Before climbing onto the trailer, switch off tractor's engine and remove key from ignition.</p>


ITEM	DECAL	MEANING OF SYMBOL						
5		<p>Caution! Danger of electric shock.</p> <p>Keep a safe distance from overhead electric power lines during unloading.</p>						
6		<p>Danger of crushing</p> <p>Do NOT perform any maintenance or repairs on the load box that is loaded, raised or not supported.</p>						
7	 <table border="1" data-bbox="512 1339 598 1377"> <tr> <td>M18</td> <td>27 kGm</td> </tr> <tr> <td>M20</td> <td>35 kGm</td> </tr> <tr> <td>M22</td> <td>45 kGm</td> </tr> </table>	M18	27 kGm	M20	35 kGm	M22	45 kGm	<p>Regularly check if the nuts and bolts fixing the wheels and other components are properly tightened.</p>
M18	27 kGm							
M20	35 kGm							
M22	45 kGm							
8		<p>Grease the trailer according to the recommendations in the Operator's Manual</p>						
9		<p>Conduit supplying hydraulic brake system.</p>						
10		<p>Conduit supplying hydraulic tipping system.</p>						

ITEM	DECAL	MEANING OF SYMBOL
11	<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 2px;"><b>Ładowność 4000 kg</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 2px;"><b>Ładowność 5000 kg</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block;"><b>Ładowność 6000 kg</b></div>	Trailer carrying capacity (depends on vehicle version).
12	<div style="display: inline-block; border: 1px solid black; padding: 5px; margin-right: 5px;">1</div> <div style="display: inline-block; border: 1px solid black; padding: 5px;">2</div>	Positions of control valve controlling work of hydraulic tipping system (1 or 2 trailers).
13	<div style="border: 1px solid black; padding: 5px; text-align: center;"><b>Łączenie tylko z górnym zaczepem transportowym</b></div>	Trailer coupling information - exclusively with upper transport hitch.
14	<div style="border: 1px solid black; padding: 5px; text-align: center;"><b>350 kPa</b></div>	Air pressure in the tyres. <sup>(1)</sup>

<sup>(1)</sup> – pressure value should be adapted to tyres

Numbers in the item column correspond to labels in figure (2.3)

Decals – items (9) and (10) are placed on hydraulic conduits. Decal (12) is placed near the hydraulic valve.

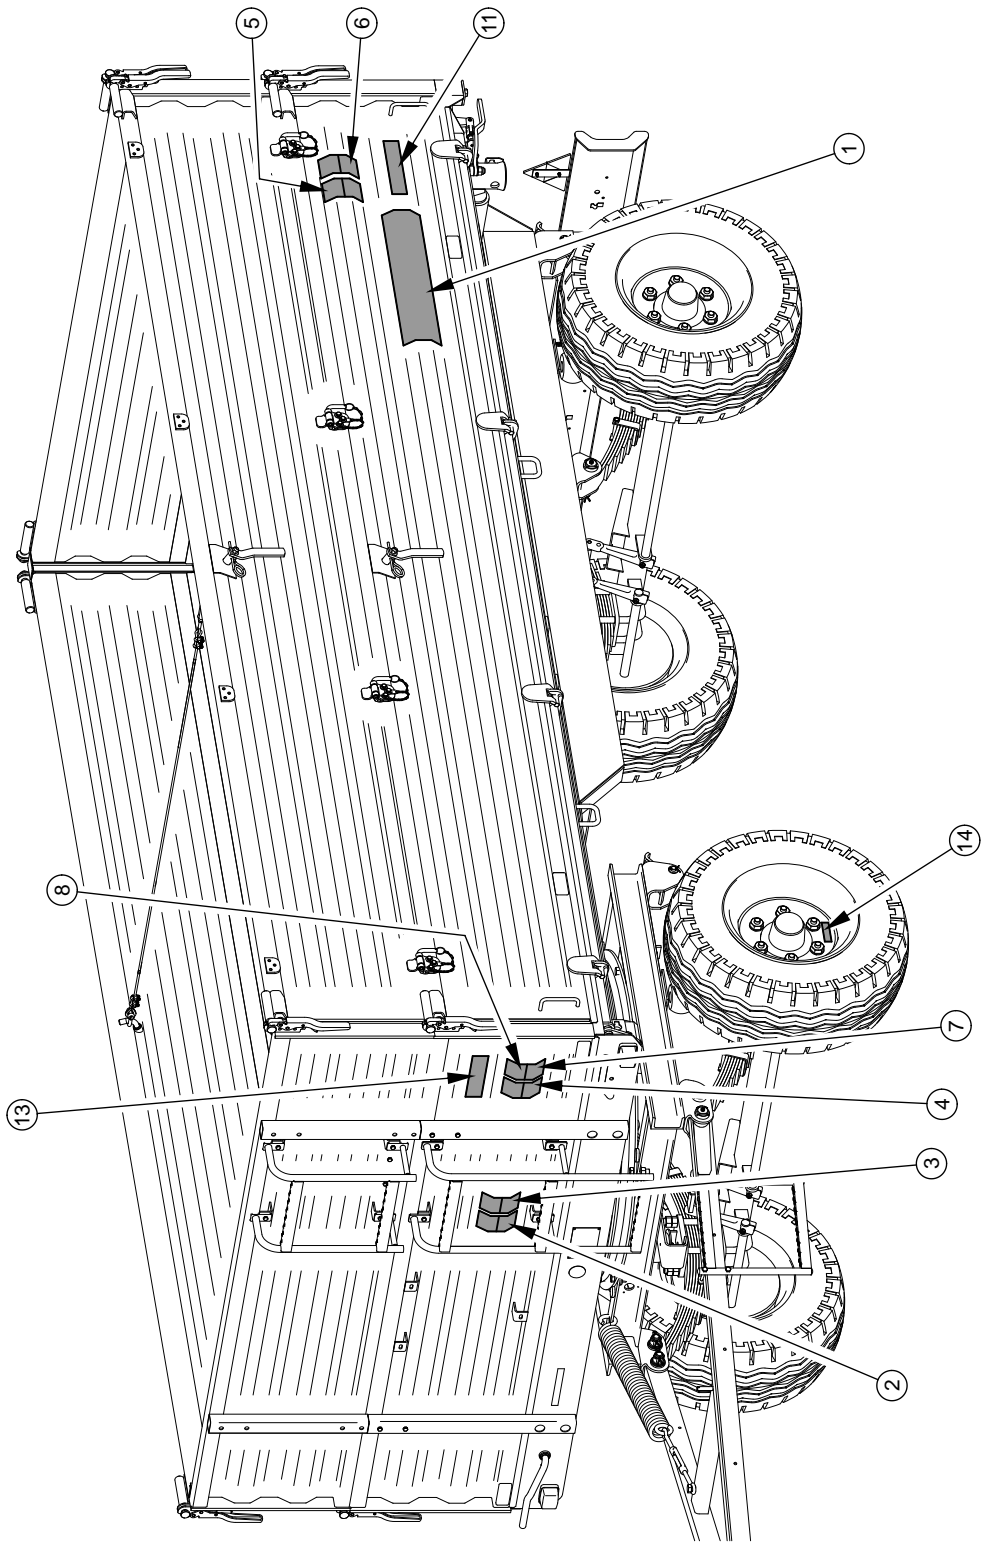

**FIGURE 2.3** Locations of information and warning decals.

***SECTION***

**3**

---

**DESIGN AND  
OPERATION**

## 3.1 TECHNICAL SPECIFICATION

**TABLE 3.1 Basic technical specification**

CONTENTS	UNIT	T653	T653/1	T653/2
<b>Trailer dimensions</b>				
Total length	mm	6 140	6 140	6 140
Total width	mm	2 230	2 230	2 230
Total height	mm	1 585	1 630(2 130)	1 630(2 130)
<b>Internal load box dimensions</b>				
Length	mm	4 010	4 010	4 010
Width (front)	mm	2 010	2 010	2 010
Width (rear)	mm	2 060	2 060	2 060
Height	mm	500	500(1 000)	500(1,000)
<b>Weight and carrying capacity</b>				
Tare weight	kg	1 950	1 925(2 105)	1 940(2 120)
Maximum gross weight	kg	5,950	7 105	8,120
Maximum carrying capacity	kg	4 000	5 180(5 000)	6 180(6 000)
<b>Other information</b>				
Axle track	mm	1,600	1,600	1,600
Axle base	mm	2,700	2,700	2,700
Load volume	m <sup>3</sup>	4.1	4.1(8.2)	4.1(8.2)
Load surface	m <sup>2</sup>	8.2	8.2	8.2
Lift of load surface	mm	1 050	1 095	1 135
Load box tipping angle				
- to the sides	(°)	46	46	46
- to the rear	(°)	42	42	42
Electrical system voltage	V	12	12	12
Maximum speed	km/h	30	30	30
Noise emission level	dB	below 70	below 70	below 70

*Technical data placed in brackets applies to trailer versions with sides and extensions of a height of 500 mm.*

## 3.2 TRAILER CONSTRUCTION


### 3.2.1 CHASSIS

Trailer chassis consists of subassemblies indicated on figure (3.1). Lower frame (1) of the load box is a structure welded from steel sections. The main support elements are two longitudinal rails connected with crossbars. In the middle section there are sockets (2) used for mounting of the tipping ram cylinder. In front of the sockets of the ram cylinder is mounted the load box support (14). At the rear part of the frame there is a beam (8) terminated with ball pins. The support structure of the upper frame and the interlocking method allows tipping of the load box to the side and to the rear. Brackets for mounting of the upper frame are welded on the left and right side of the front beam (9) of lower frame. Shapes of the holes are designed in such a way that pins connecting the upper frame with the lower frame are replaced in the correct sockets.

In the rear section of the chassis there is lights support beam (3), to which mounted are primarily all electrical systems elements as well as hydraulic and pneumatic system sockets which are used for connection of another trailer. The rear hitch (10) is mounted above the lighting support beam. The hitch is designed for coupling a second (two-axle) machine. A pin with diameter of  $\varnothing 33$  mm is adapted to connecting with drawbar eye of  $\varnothing 40$  mm.

The trailer suspension consists of the axles (4) and leaf springs (11), secured to the turntable frame (5) and the lower frame (1) using the leaf spring pins (12). Axles are secured to suspension springs using absorber plates and U bolts. Axles are made from square bars terminated with a pin, where wheel hubs are mounted on cone bearings. The wheels are single, equipped with brake shoes activated through mechanical expander cams. In trailer version T653/2 with overrun brake, axles (standard) are replaced by overrun axles, equipped with safety mechanism blocking vehicle wheels during movement to the rear.

Drawbar (6) with  $\varnothing 40$  mm eye is mounted on the turntable frame (5). The drawbar height may be adjusted by adjustment of spring tensioner (7), connected to drawbar pin (13). In optional equipment a drawbar with eye diameter of  $\varnothing 50$  mm is also available, designed for connection to upper transport hitch with pin diameter of  $\varnothing 46$  mm.

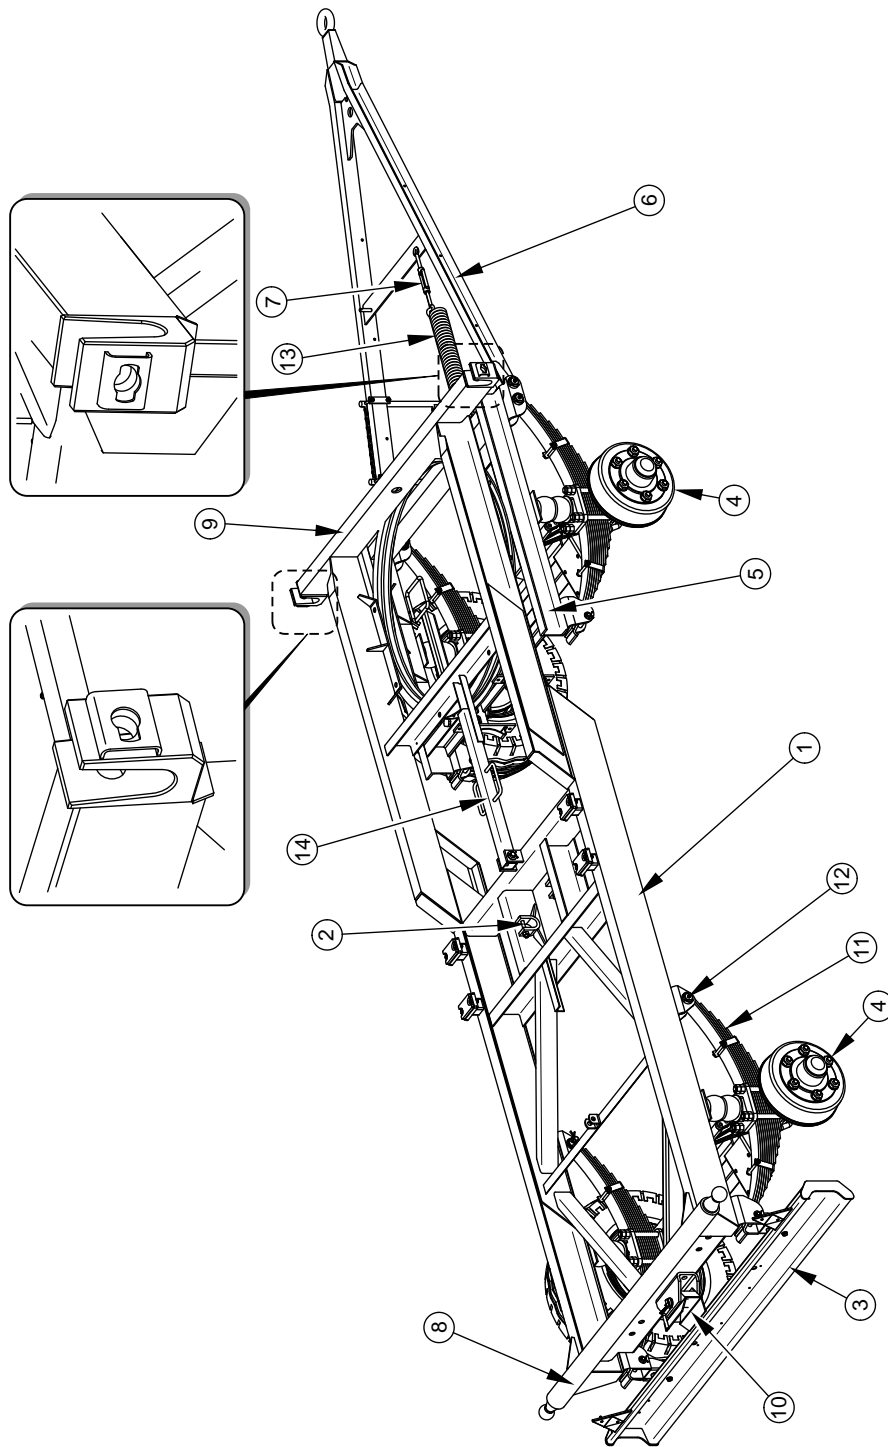

**FIGURE 3.1 Trailer chassis**

(1) lower frame, (2) tipping ram cylinder socket, (3) lighting support beam, (4) axle, (5) turntable frame, (6) drawbar, (7) tensioner, (8) rear beam, (9) front beam, (10) hitch, (11) suspension springs, (12) suspension spring pins, (13) spring, (14) load box support



### 3.2.2 LOAD BOX

Trailer's load box consists of: upper frame (1) – figure (3.2) with welded steel floor, side walls (2) front side (3) and rear side (4). As standard, the trailer (does not apply to version T653) is also equipped with side wall extensions of steel sheet profile and height of 500 mm.


The load box is mounted on sockets of the rear and front lower beam - compare with figure (3.1). The chosen tipping direction is achieved by positioning the pin in the appropriately profiled socket opening, the construction of which prevents their inappropriate placing by trailer operator.

Load box rear and side walls are secured using pins in front side locks and locks welded to rear stakes (5) of side housing. In the lower part they are locked using bolting hooks placed in the left and right longitudinal beam and also in the rear upper frame beam. Closing and opening the sides is performed using two levers (6) placed on the front beam and in the case of the rear side - levers (7) on the left side of the load box.

Extensions are secured in the same way as the load box sides. Upper extension pins are secured in extension front locks and rear stake locks (8). In the rear part the closure is formed by lug (9) bolted to the side edge. All lugs are equipped with pins with linchpins preventing them from falling out.

Walls and wall extensions are connected with each other using linking cable (10), placed in cable release mechanism (11). Mechanisms are equipped with spring linchpins, locking lifters in the same position and securing mechanism against accidental release.


Access ladders (12) are secured to front walls and extensions. An additional step facilitating entrance to load box is screwed from the inside of the front extension.

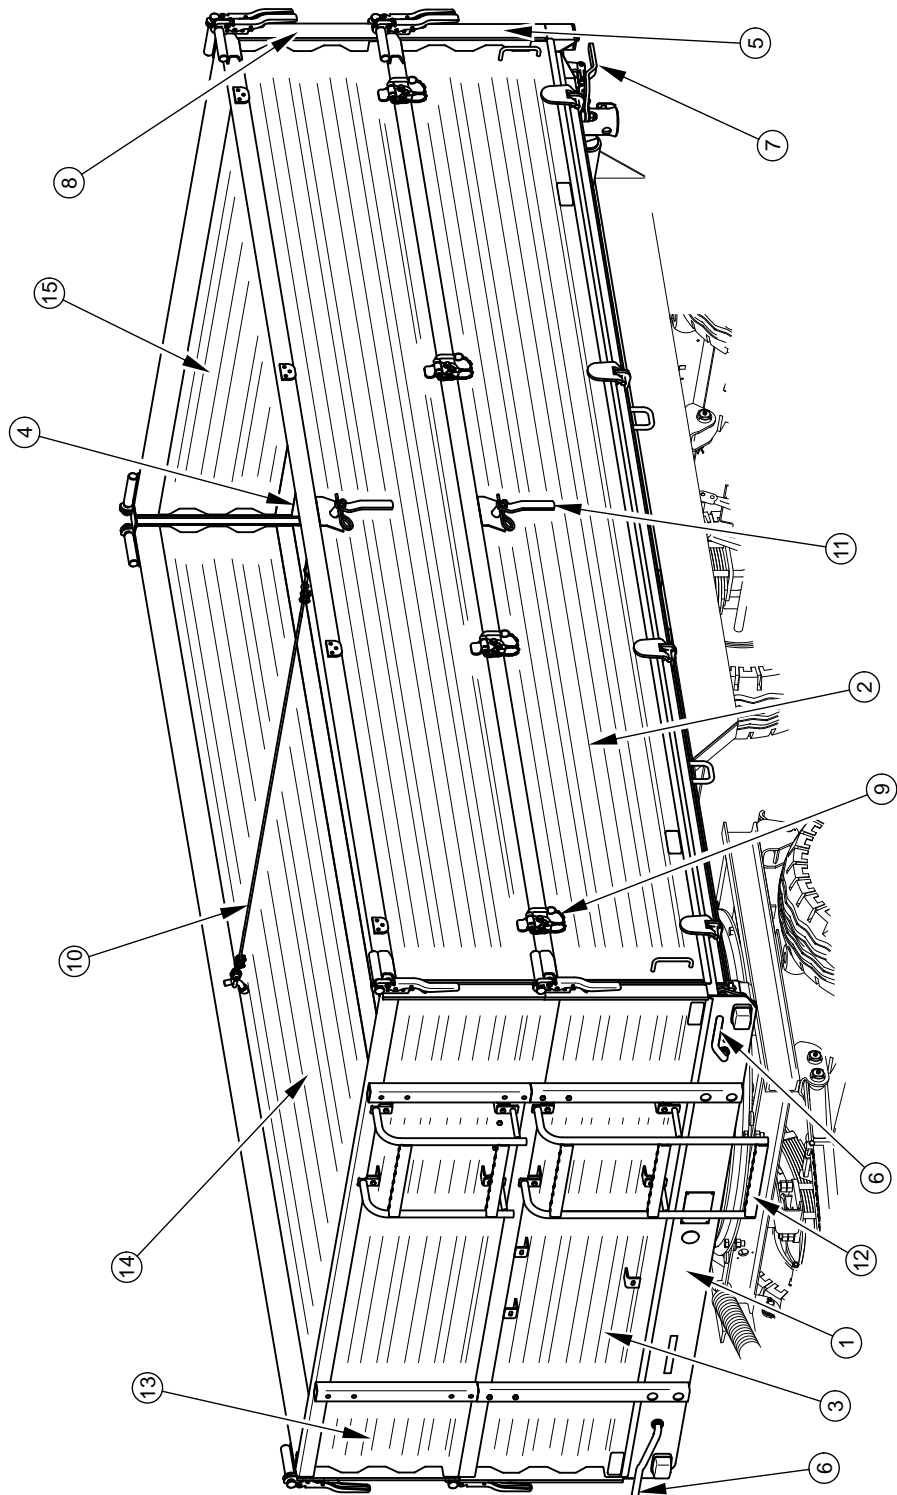

**FIGURE 3.2** Load box

(1) upper frame, (2) side wall, (3) front side, (4) rear side, (5) rear side stake, (6) lever of side wall closures, (7) lever, (8) rear extension stake, (9) lug, (10) linking cables, (11) cable release mechanism, (12) ladder, (13) front extension, (14) side extension, (15) rear extension

In order to enable very precise unloading of loose materials there is a slide opening placed in the rear side (1) – figure (3.3), which is raised using lever (2). When in upper position and also during transport the slide must be secured by tightening the locking screw (3). A chute for the trailer, secured under the lower edge of the slide opening may be supplied as additional equipment.

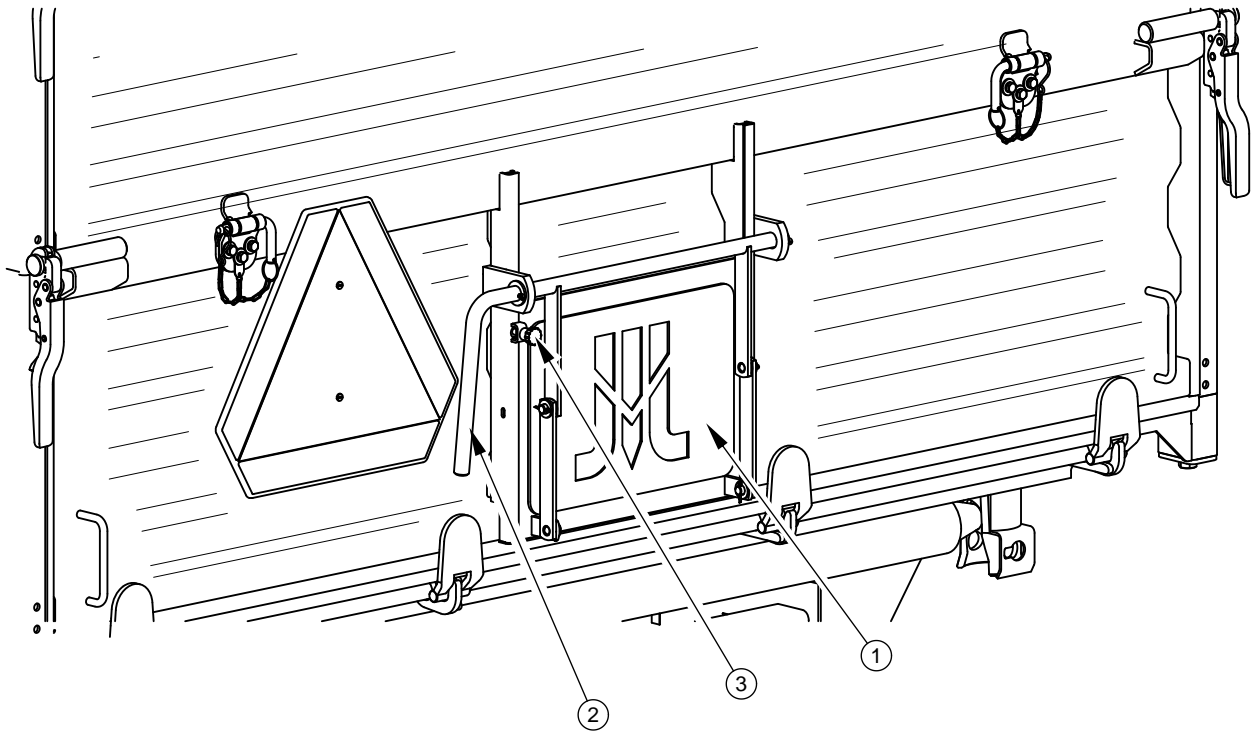

**FIGURE 3.3** Rear wall slide gate


(1) slide, (2) lever, (3) locking screw

### 3.2.3 NET EXTENSIONS

The extensions may be made in two versions differentiated by the density of the netting:

- 8x8 mm
- 30x30 mm.

Both net extension versions are available as optional equipment (for mounting in the place of 500 mm extensions).

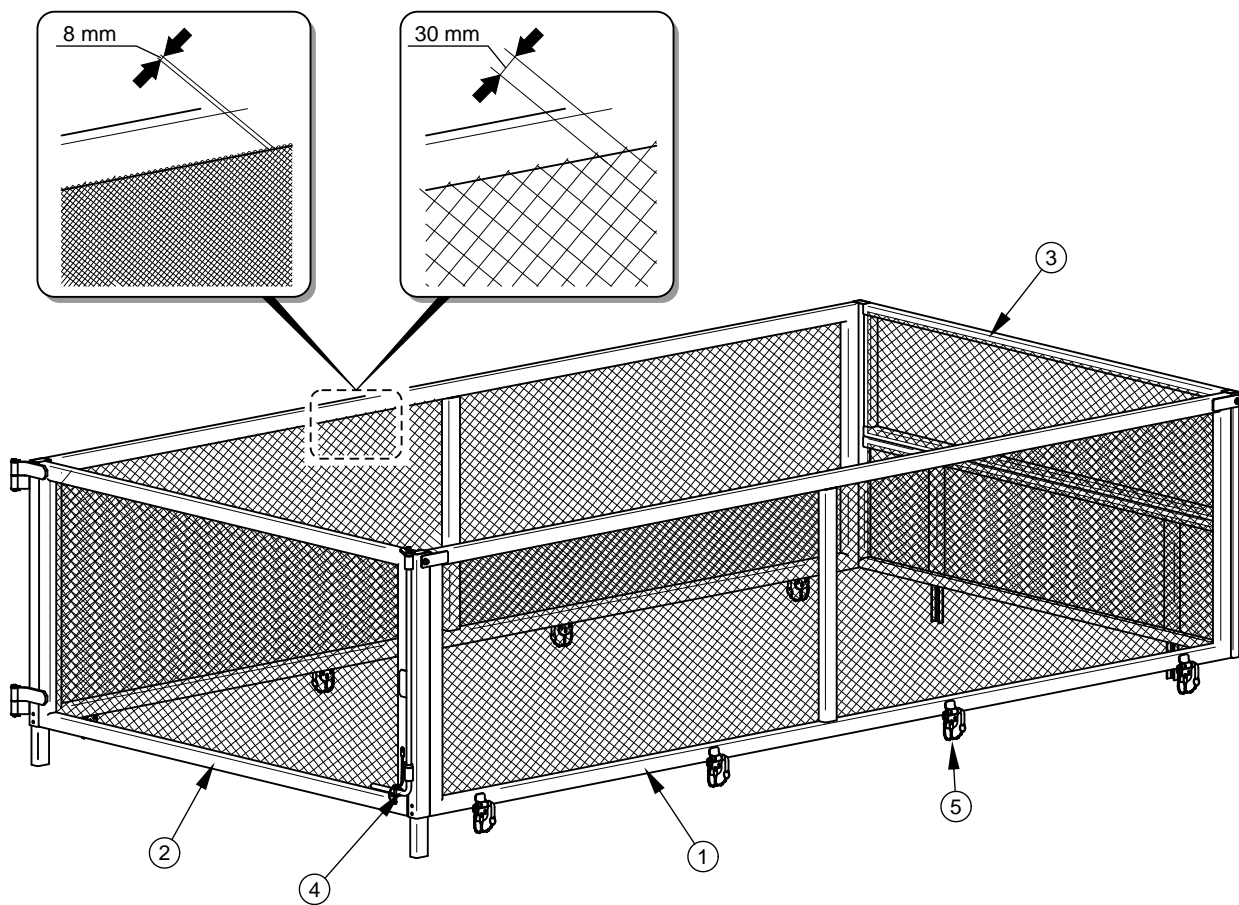

**FIGURE 3.4** Net extensions 1,000 mm.


(1) side extension, (2) rear extension, (3) front divided extension, (4) closure lever, (5) lug

Extensions are secured to load box, to rear box stakes and front side stakes. Net side extensions are secured to side walls in an identical manner to box side extensions. Front net extension is also available in undivided version.

### 3.2.4 MAIN BRAKE


The trailer is equipped with one of four types of main brake:

- double conduit pneumatic brake system with three position regulator, figure (3.5),
- single conduit pneumatic system with three position regulator, figure (3.6),
- hydraulic brake system, figure (3.7),
- overrun brake, figure (3.8).

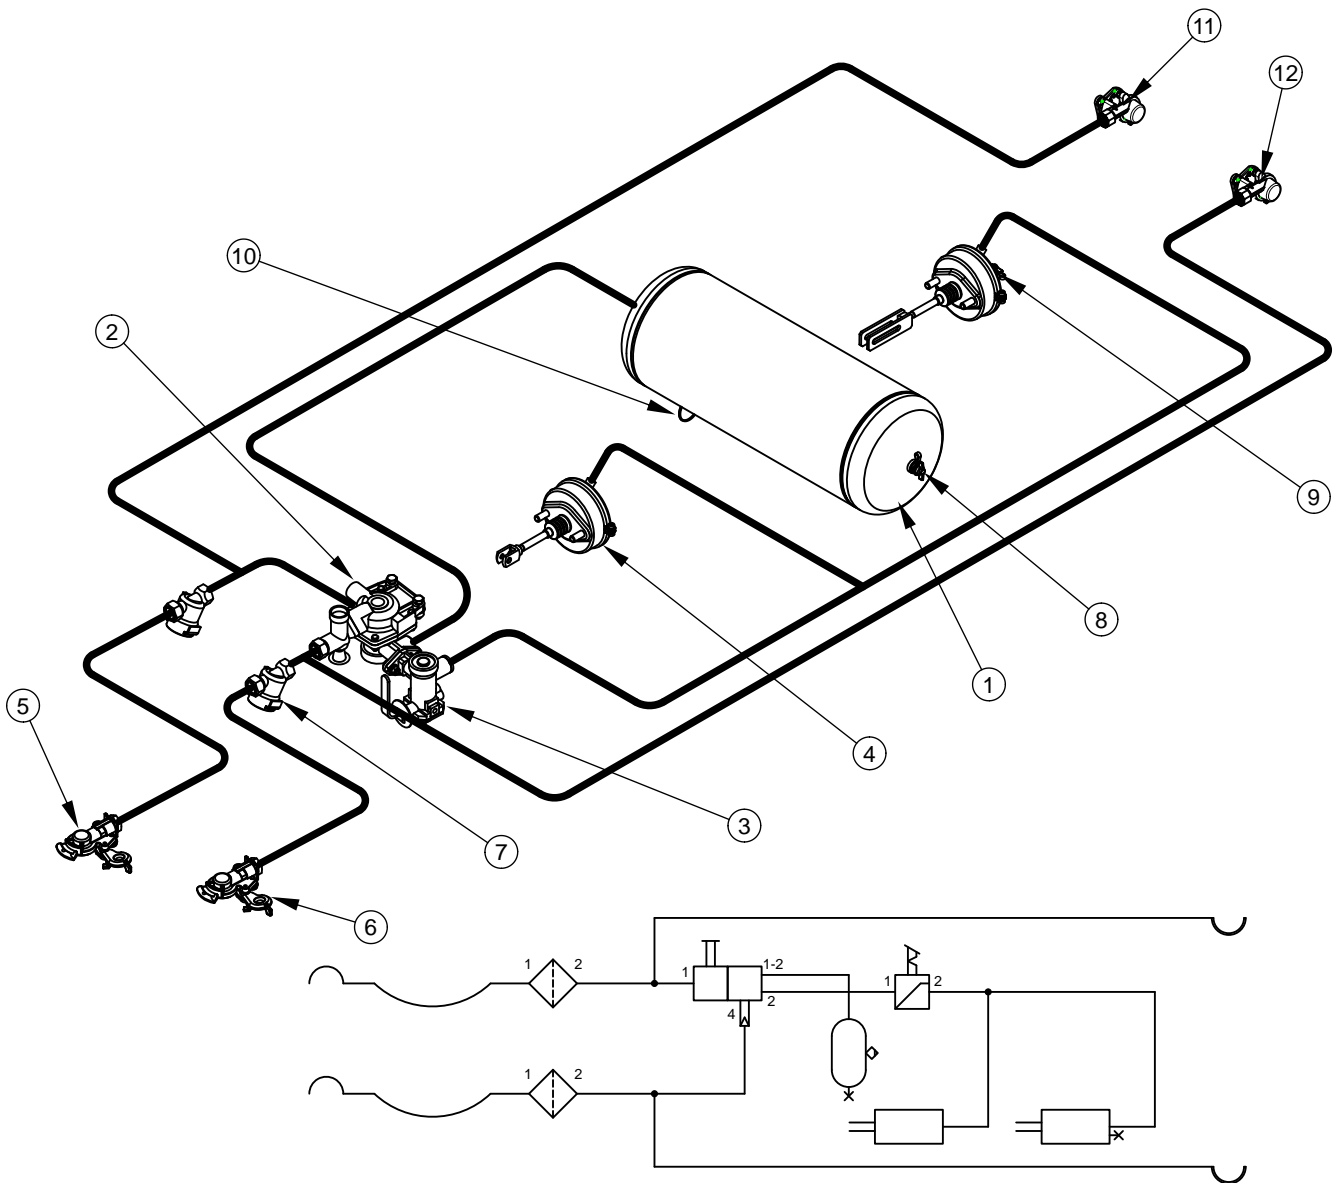

**FIGURE 3.5 Double conduit pneumatic brake construction and system diagram**

(1) air tank, (2) control valve, (3) braking force regulator, (4) pneumatic ram cylinder, (5) conduit connector (red), (6) conduit connector (yellow), (7) air filter, (8) air tank control connector, (9) pneumatic ram cylinder control connector, (10) drain valve, (11) socket (red), (12) socket (yellow)

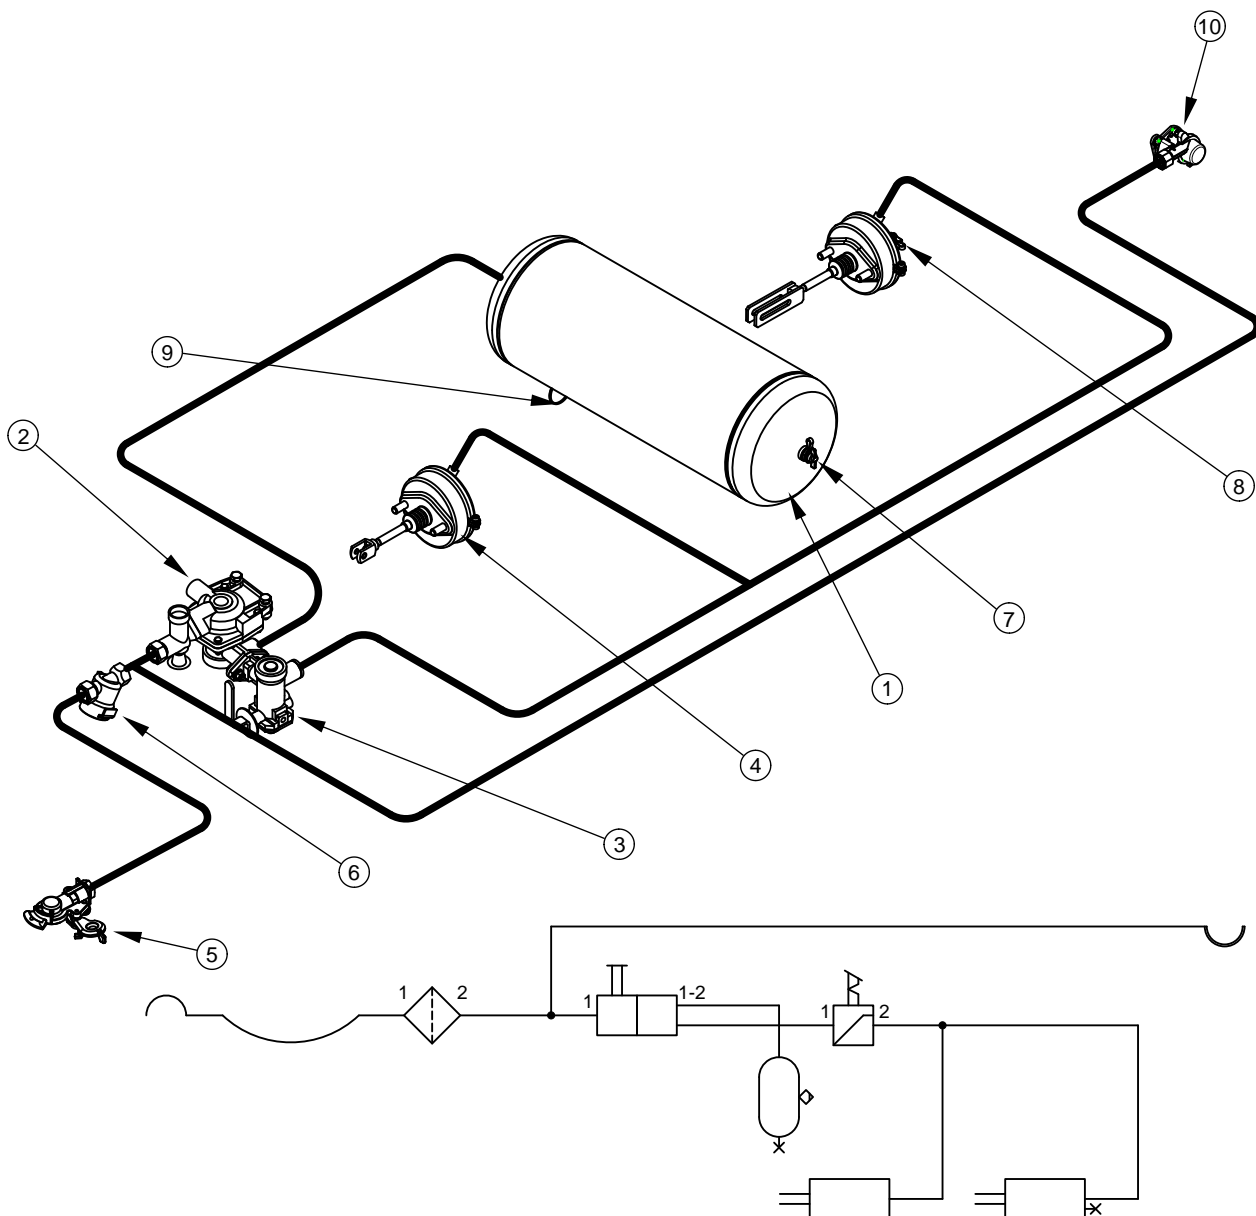


**FIGURE 3.6 Single conduit pneumatic brake construction and system diagram**

(1) air tank, (2) control valve, (3) brake force regulator, (4) pneumatic ram, (5) conduit connectors, (6) air filter, (7) pneumatic ram control connectors, (8) pneumatic ram piston control connector, (9) drain valve, (10) socket (black)

The pneumatic or hydraulic brakes are activated from the tractor driver's cab by pressing on the brake pedal. The function of the control valve (2) - figure (3.5) and (3.6), is the operation of the trailer's brakes simultaneously when tractor's brakes are applied. Furthermore, in case of an inadvertent disconnection of the conduit between the trailer and the tractor, the control valve will automatically activate trailer's brakes. Valve used in the system is equipped with a circuit causing the brakes to be applied when trailer is disconnected from the tractor,


compare with figure (3.9). When compressed air conduit is connected to the tractor, the device automatically applying the brakes now changes its position to allow normal brake operation.

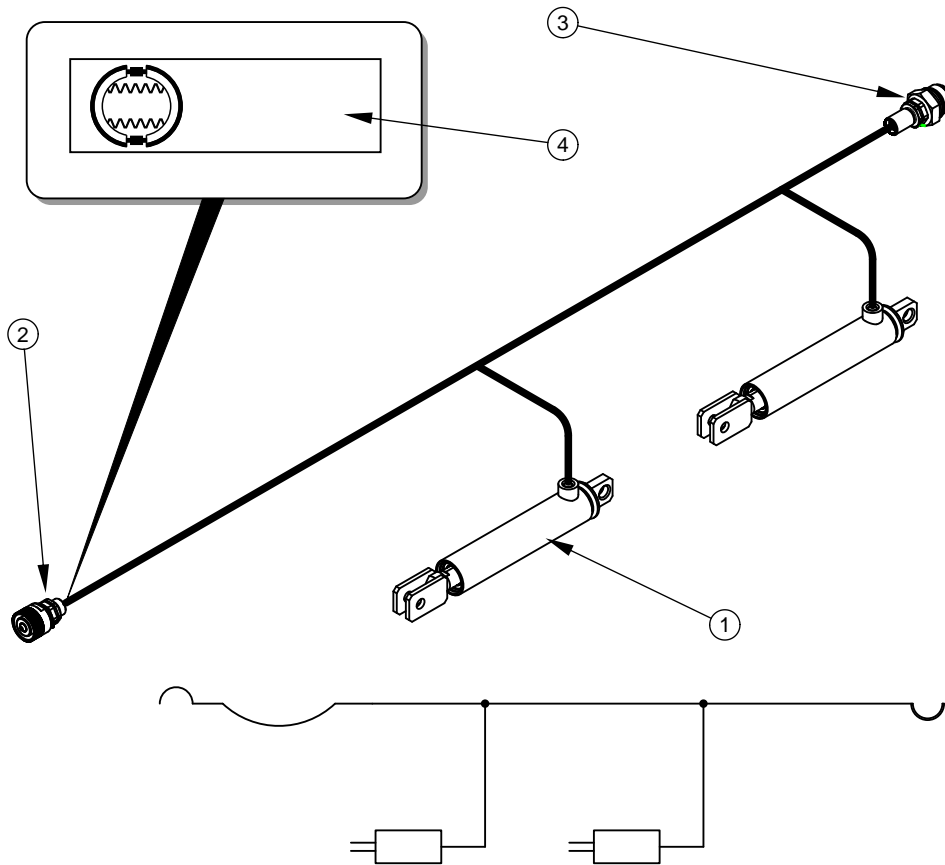

**FIGURE 3.7 Hydraulic brake construction and system diagram**

*(1) hydraulic cylinder, (2) hydraulic quick coupler, (3) hydraulic socket, (4) information decal*

Overrun brake system design is shown in figure (3.8). Drawbar (1) with mobile pull rod as standard is secured to the trailer turntable frame. Pull rods connected with set of cables to front and rear axle which are available in overrun version. At the moment of activating the brake in the tractor, the trailer exerts pressure on the tractor hitch, as a result of which the drawbar pull rod moves in the body and draws the cable. Steel cables are connected with axle expander levers, which activate trailer brakes. Overrun axles or equipped with mechanism preventing blocking while reversing trailer.

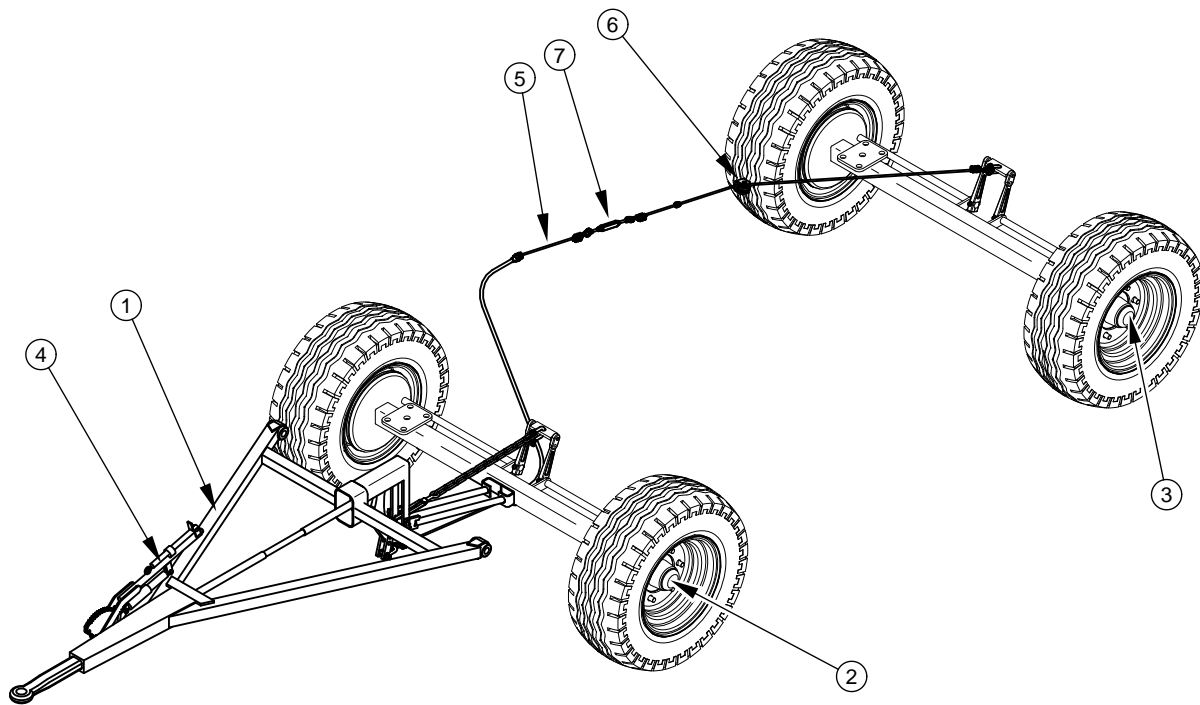


**FIGURE 3.8**    **Overrun brake**

(1) – overrun drawbar, (2) – wheel axle with overrun brake, front, (3) – wheel axle with overrun brake, rear, (4) – handbrake lever, (5) – steel cable, (6) – guide roller, (7) – cable tensioner

Three-step brake force regulator (2)- figure (3.9), adjusts braking force depending on setting. Switching to a suitable working mode is done manually by machine operator using the lever (4) prior to moving off. Three working positions are available: A - "no load", B - "half load" and C - "full load".



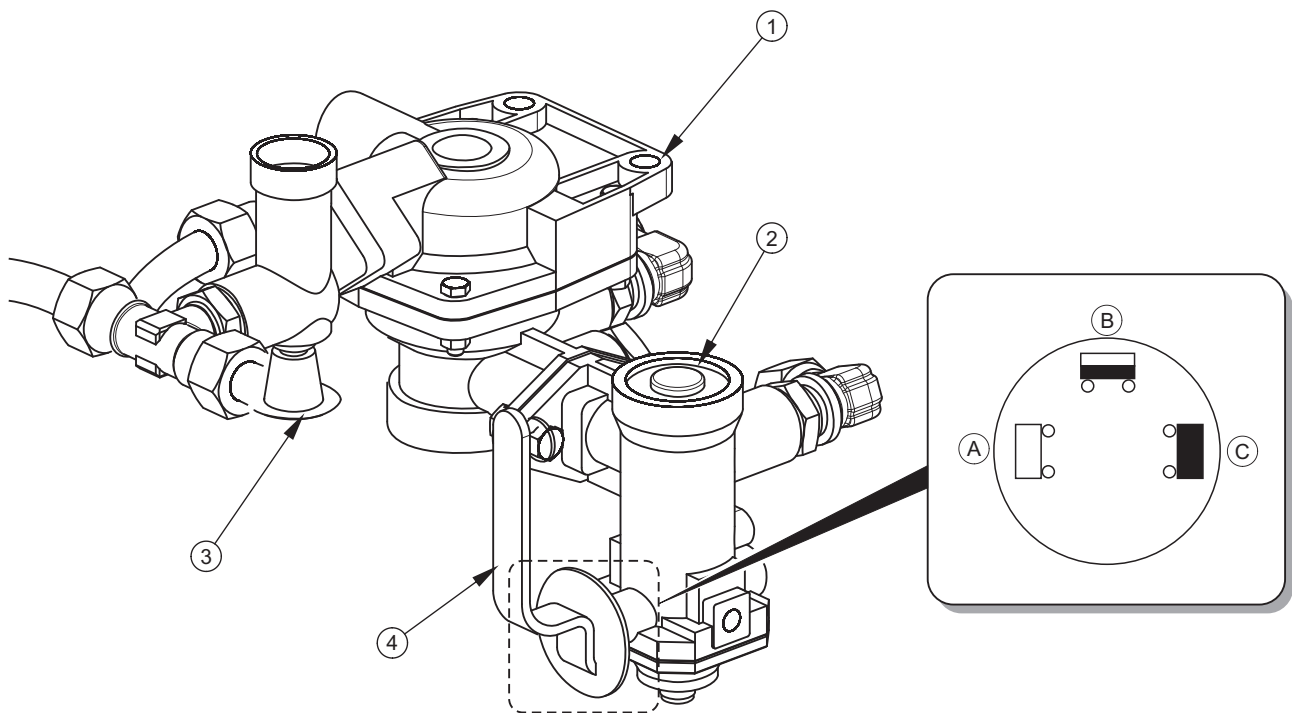

**FIGURE 3.9 Control valve and brake force regulator**


(1) control valve, (2) brake force regulator, (3) trailer parking brake release button, (4) work selection regulator lever, (A) position "NO LOAD", (B) position "HALF LOAD", (C) position "FULL LOAD"

### 3.2.5 HYDRAULIC TIPPER SYSTEM

Hydraulic tipping system serves in automatic unloading of trailer by tipping the load box to the rear or sideways. The hydraulic tipping system is supplied with oil from the tractor's hydraulic system. Hydraulic oil manifold of the tractor's external hydraulic system is used to control the load box tipping mechanism.

The trailer system consists of two independent circuits:

- circuit (A) - to supply the trailer's hydraulic ram cylinder,
- circuit (B) - to supply of the second trailer's hydraulic ram cylinder (if two trailers are hitched to the tractor).

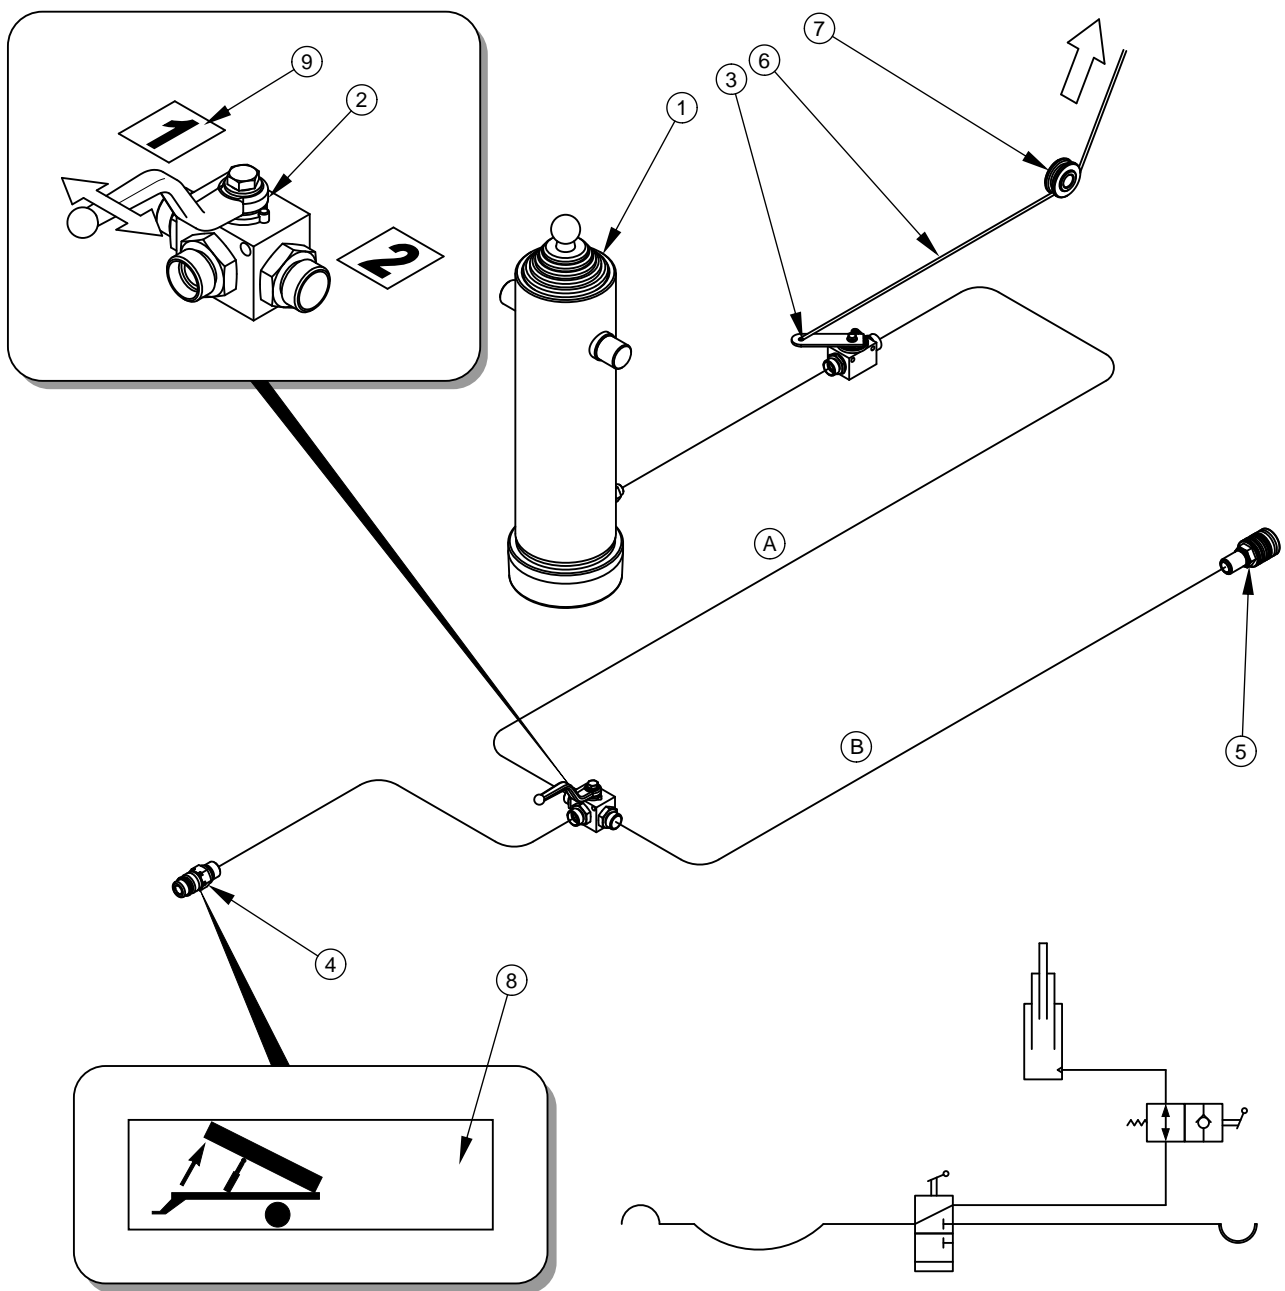

**FIGURE 3.10 Hydraulic tipping system construction and diagram**

(1) telescopic cylinder, (2) three-way valve, (3) cut-off valve, (4) quick coupler, (5) socket, (6) control cable, (7) guide roller, (8), (9) information decal

Three-way valve (2) – figure (3.10) is used to activate these circuits. This valve's lever can be placed in two positions:

- 1 - trailer's tipping circuit opened - circuit (A),
- 2 - second trailer's tipping circuit opened – circuit (B).

On the connection conduit, in the vicinity of socket (4) there is a decal (8) identifying the supply conduit of the hydraulic system tipping circuit .



### IMPORTANT!


Cut-off valve (3) – figure (3.10) limits the tipping angle of the load box when tipped to the sides and to the rear. The length of the control cable (6) controlling this valve is factory adjusted by the Manufacturer and must not be changed when the trailer is used.



### TIP

The hydraulic system of the trailer is filled with L-HL32 Lotos hydraulic oil.

### 3.2.6 PARKING BRAKE

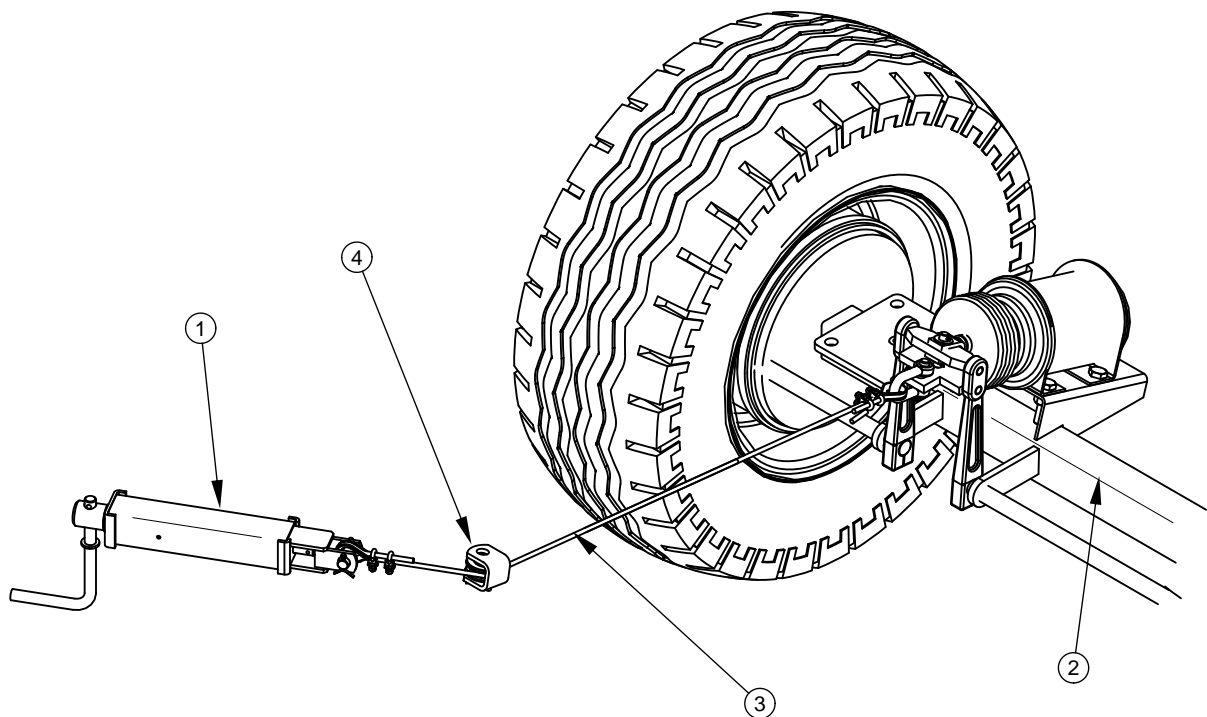

**FIGURE 3.11** Parking brake housing with crank mechanism


(1) crank mechanism, (2) rear axle, (3) cable, (4) guide roller

The parking brake is for immobilising trailer while standing motionless. The brake crank mechanism (1), is welded on the right lower longitudinal frame. Steel cable (3), routed through guide roller (4), is connected with expanded levers of rear axle (2) by crank

mechanism. Tightening the cable (turning the crank clockwise) causes tilting of the expander lever, which parts the jaws of the brake shoes immobilising the trailer.

In the case of the trailer version with overrun brake, the parking brake is activated by cable tension using brake lever (4) – figure (3.8). The lever is secured to the overrun drawbar of the trailer.

### 3.2.7 LIGHTING SYSTEM

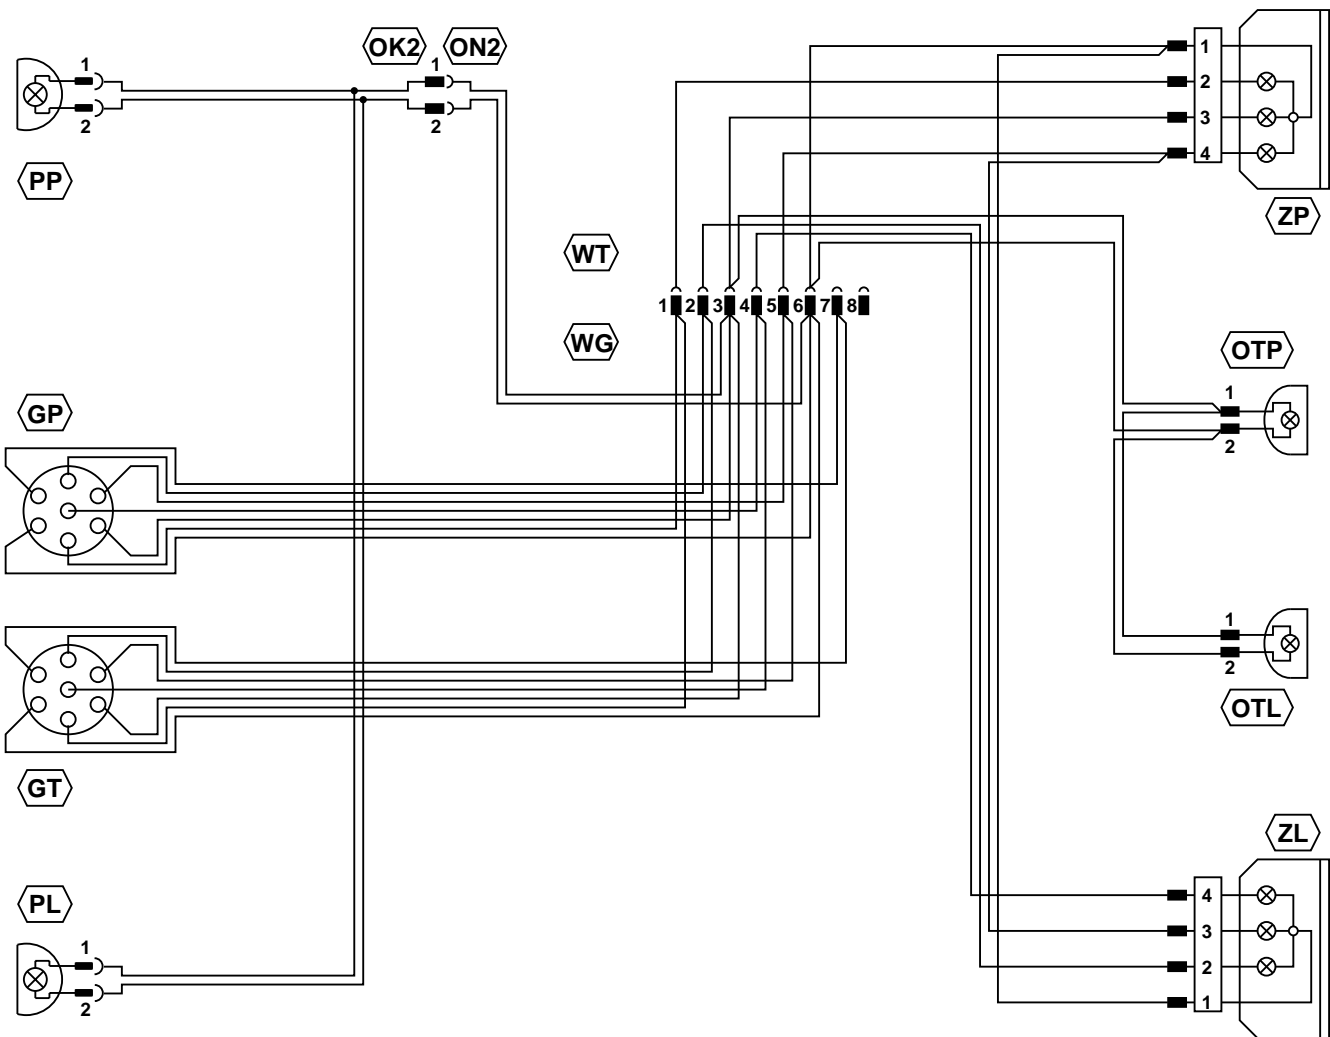

**FIGURE 3.12 Electrical system diagram**

*Marking according to table (3.2)*

The trailer's electrical system is designed for supply of 12 V DC. Connection of the trailer's electrical system with the tractor should be made through an appropriate connection lead.

**TABLE 3.2 List of electrical component markings**

<b>SYMBOL</b>	<b>FUNCTION</b>
ZP	Rear right light combination group
ZL	Rear left light combination group
GP	Front seven pin socket
GT	Rear seven pin socket
OTP	Right registration plate light
OTL	Left registration plate light
PP	Front right parking light
PL	Front left parking light

**TABLE 3.3 Marking of connections of GT and GP sockets**

<b>MARKING</b>	<b>FUNCTION</b>
31	Weight
+	Power supply +12V (not used)
L	Left indicator
54	STOP light
58L	Rear left parking light
58R	Rear right parking light
R	Right indicator



***SECTION***

**4**

---

**CORRECT USE**

## 4.1 PREPARING FOR WORK BEFORE FIRST USE

### 4.1.1 CHECKING THE TRAILER AFTER DELIVERY

The manufacturer guarantees that the trailer is fully operational and has been checked according to quality control procedures and is ready for normal use. This does not release the user from an obligation to check the machine's condition after delivery and before first use. The machine is delivered to the user completely assembled.

Before commencing work, machine operator must inspect the technical condition of the trailer and prepare it for test start-up. The user must carefully read this Operator's Manual and observe all recommendations, understand the design and the principle of machine operation.



#### **IMPORTANT!**

Before proceeding to hitching to tractor the user must carefully read this Operator's Manual and additional publications attached to machine and observe all recommendations.

#### **External inspection**

- ➔ Check completeness of machine (standard and optional equipment).
- ➔ Check condition of protective paint coat,
- ➔ Inspect trailer's individual components for mechanical damage resulting from incorrect transport (dents, piercing, bent or broken components).
- ➔ Check technical condition of tyres and tyre pressure.
- ➔ Check technical condition of elastic hydraulic conduits,
- ➔ Check technical condition of pneumatic conduits,
- ➔ Check that there are no hydraulic oil leaks.
- ➔ Check electric lamps.
- ➔ Check tipping ram cylinder for hydraulic oil leaks.



## 4.1.2 PREPARE A TRAILER FOR FIRST HITCHING TO TRACTOR

### Preparation

- ➔ Check all the trailer's lubrication points, lubricate the machine as needed according to recommendations provided in section 5.
- ➔ Check if the nuts and bolts fixing the wheels are properly tightened.
- ➔ Drain air tank of the brake system.
- ➔ Ensure that pneumatic, hydraulic and electric connections in agricultural tractor are according to the requirements, if not the trailer should not be hitched to the tractor.
- ➔ Adjust the height of the drawbar setting or location of higher transport hitch.
  - ⇒ A detailed description can be found in section 5.

### Test drive

If all the above checks have been performed and there is no doubt as to the trailer's good technical condition, it can be connected to tractor. Start the tractor, check all systems and conduct test run of trailer without load (no load in load box). It is recommended that the inspection is conducted by two people, one of which should always remain in the tractor's cabin. Test start should be conducted according to the sequence shown below.

- ➔ Connect trailer to appropriate hitch on agricultural tractor.
- ➔ Connect brake, electrical and hydraulic system conduits.
- ➔ Switch on individual lights, check correct operation of electrical system.
- ➔ Turn hydraulic system return valve to position 1. Conduct test tipping of load box sideways and backwards.
- ➔ When moving off check if the main brakes operate correctly.
- ➔ Perform test drive.

**TIP**

Service operation: hitching/unhitching from tractor, adjustment of draw bar position, tipping of load box etc. are described in detail in further parts of the instructions in sections 4 and 5.

The trailer may be hitched only when all preparatory activities including inspection of technical condition have been completed satisfactorily. If during test run worrying symptoms occur such as:

- noise and abnormal sounds originating from the abrasion of moving elements of the trailer design,
- hydraulic oil leak,
- pressure drop in brake system,
- incorrect operation of hydraulic and/or pneumatic cylinders

or other faults, find the cause of the problem. If a fault cannot be rectified or the repair could void the guarantee, please contact retailer for additional clarifications or to perform repair.

**DANGER**

Careless and improper use and operation of the trailer, and non-compliance with the recommendations given in this operator's manual is dangerous to your health.

The trailer must never be used by persons who are not authorised to drive agricultural tractors, including children and people under the influence of alcohol or other drugs.

Non-compliance with the safety rules of this Operator's Manual can be dangerous to the health and life of the operator and others.

After completion of test drive check tightness of wheel nuts.

## 4.2 HITCHING AND DISCONNECTING FROM TRACTOR

Ensure that pneumatic, hydraulic and electric connections and the hitch of agricultural tractor are according to the Manufacturer's requirements, if not the trailer should not be hitched to the tractor.

In order to hitch the trailer to the tractor perform the actions below in the sequence presented. Machine must be immobilised by parking brake.

### Connection

- ➔ Immobilise trailer with parking brake.
  - ⇒ Pull brake mechanism to resistance in direction (A) – figure (4.1) – if trailer is equipped with standard parking brake.
  - ⇒ Pull brake mechanism (placed on draw bar) to resistance in direction (A) – if trailer is equipped with overrun brake.
- ➔ Position agricultural tractor directly in front of drawbar eye.
- ➔ Set drawbar eye or height of upper transport hitch at such a height to enable hitching the trailer.
  - ⇒ Read section 5.
- ➔ Reverse tractor, hitch trailer, check coupling lock protecting machine against accidental unhitching.
  - ⇒ If the agricultural tractor is equipped with an automatic coupler, ensure that the hitching operation is completed and that drawbar eye is secured.
- ➔ Turn off tractor ignition. Ensure that unauthorised persons do not have access to the tractor's cab.
- ➔ Connect pneumatic system conduits (applies to two conduit systems):
  - ⇒ Connect pneumatic conduit marked yellow with yellow socket in tractor.
  - ⇒ Connect pneumatic conduit marked red with red socket in tractor.
- ➔ Connect pneumatic system conduits (applies to single conduit systems):
  - ⇒ Connect pneumatic conduit marked black with black socket in tractor.
- ➔ Connect hydraulic brake system (applies to trailer version with hydraulic brake).
  - ⇒ Hydraulic brake system conduit is marked with information decal (9) – table (2.1).

- ➔ Connect hydraulic tipping system conduit.
  - ⇒ Hydraulic brake system conduit is marked with information decal (10) – table (2.1).
- ➔ Connect main conduit supplying electric lighting system.

## **DANGER**




When hitching, there must be nobody between the trailer and the tractor. When hitching the machine, tractor driver must exercise caution and make sure that nobody is present in the hazard zone.

When connecting the hydraulic conduits to the tractor, make sure that the tractor's hydraulic system and trailer are not under pressure.

Ensure sufficient visibility during hitching.

During connection of braking system conduits (pneumatic double conduit) the correct sequence of conduit connection is very important. First connect the yellow connector to yellow socket in the tractor and only then connect the red connector to the red socket in the tractor. Once the 2nd conduit is connected, the braking system will switch to normal mode of operation (disconnection or interruption of the conduits causes the trailer's braking system control valve to automatically apply brakes). Conduits are marked with coloured protective covers, which identify the appropriate system conduit.

In the case of hitching a trailer with overrun brake it is required to set the height of the drawbar exclusively with regard to the transport hitch when connecting hydraulic tipping system and electrical system conduit.

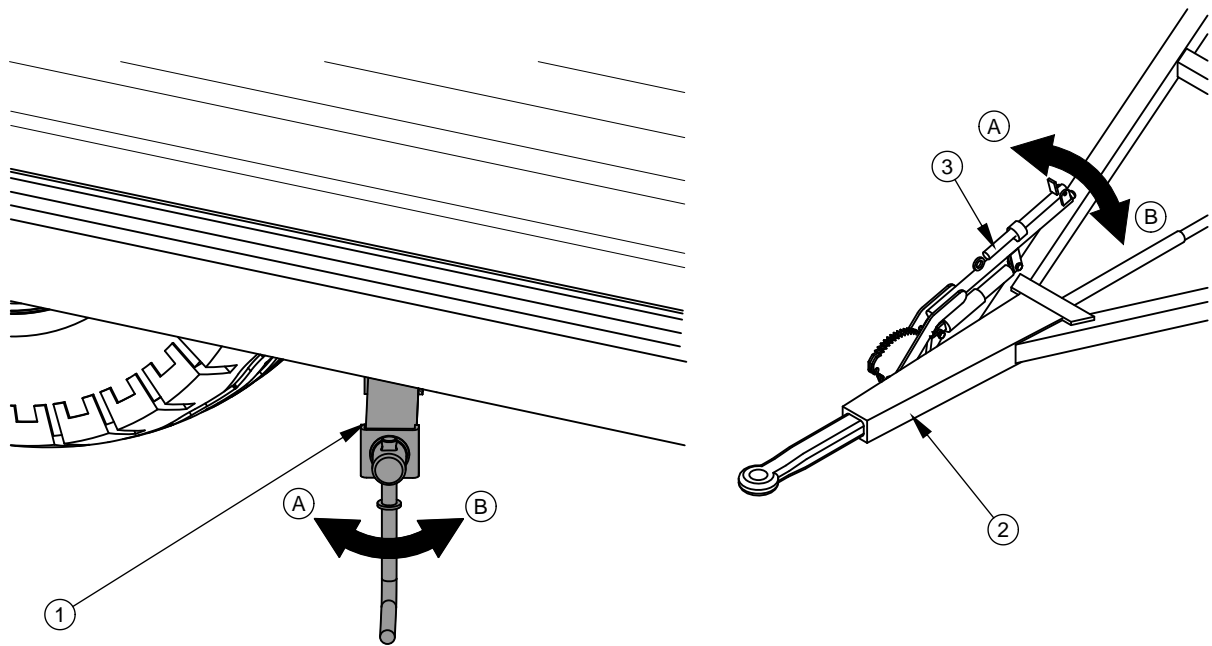

**FIGURE 4.1** Parking brake

(1) parking brake mechanism, (2) overrun drawbar, (3) parking brake lever, (A), (B) movement direction of crank / parking brake lever

### IMPORTANT!



Trailer may only be hitched to a tractor, which has the appropriate transport hitch, connection sockets for braking, hydraulic and electrical systems, and hydraulic oil in both machines is the same type and may be mixed.

When hitching is completed, secure the electrical leads and hydraulic and braking system conduits in such a way that they do not become entangled in tractor's moving parts and are not at the risk of breaking or piercing when making turns.



### IMPORTANT!

Ensure compatibility of oils in tractor hydraulic system and in the trailer hydraulic tipping system.

## Disconnecting the trailer

In order to disconnect the trailer from the tractor carry out the following actions in the following sequence:

- ➔ Immobilise tractor and trailer with parking brake.
- ➔ Turn off tractor ignition. Ensure that unauthorised persons do not have access to the tractor's cab.
- ➔ Disconnect all hydraulic tipping system conduits from tractor.
- ➔ Disconnect electric lead.
- ➔ Disconnect pneumatic system conduits (applies to double conduit systems):
  - ⇒ Disconnect pneumatic conduit marked red.
  - ⇒ Disconnect pneumatic conduit marked yellow.
- ➔ Disconnect pneumatic system conduits (applies to single conduit systems):
  - ⇒ Disconnect pneumatic conduit marked black.
- ➔ Disconnect hydraulic brake system (applies to trailer version with hydraulic brake).
- ➔ Protect terminal ends with covers, Place conduit terminals in appropriate sockets.
- ➔ Disengage transport hitch and disconnect trailer drawbar from tractor hitch and drive tractor away.
- ➔ Place securing wedges under trailer wheel.
  - ⇒ Wheel wedges shall be so placed that one is in front of the wheel and the second is behind wheel of rear axle - see section 2.



### **DANGER**

Exercise caution when disconnecting trailer from the tractor. Ensure good visibility. Unless it is necessary, do not go between tractor and trailer.

Before disconnecting conduits and drawbar eye, close tractor cab and secure it against access by unauthorised persons. Turn off tractor ignition.

## 4.3 COUPLING AND UNCOUPLING SECOND TRAILER

A second trailer may only be connected, if it is a machine built on a dual axle chassis and if it fulfils all the requirements specified in section 1. Coupling a second trailer to the assembly requires experience in driving an agricultural tractor with a trailer. It is recommended while coupling the second trailer to use the help of another person to guide the tractor driver.




### **DANGER**

When hitching, there must be nobody between the trailers. Person assisting hitching up machines should stand outside the area of danger and be visible to the tractor driver at all times.

### **Coupling second trailer**

- ➔ The tractor with the coupled first trailer is positioned directly in front of the drawbar of the second trailer.
- ➔ Immobilise second trailer with parking brake.
- ➔ Remove pin from the hitch of the first trailer.
- ➔ Adjust the height of the drawbar of the second trailer in such a manner to enable coupling the machines.
- ➔ Reversing tractor, drive the rear hitch of the first trailer onto the drawbar of the second trailer.
- ➔ Insert drawbar pin and securing linchpin.
- ➔ Connect conduits of pneumatic, hydraulic and electrical connections according to instructions contained in section (4.2)

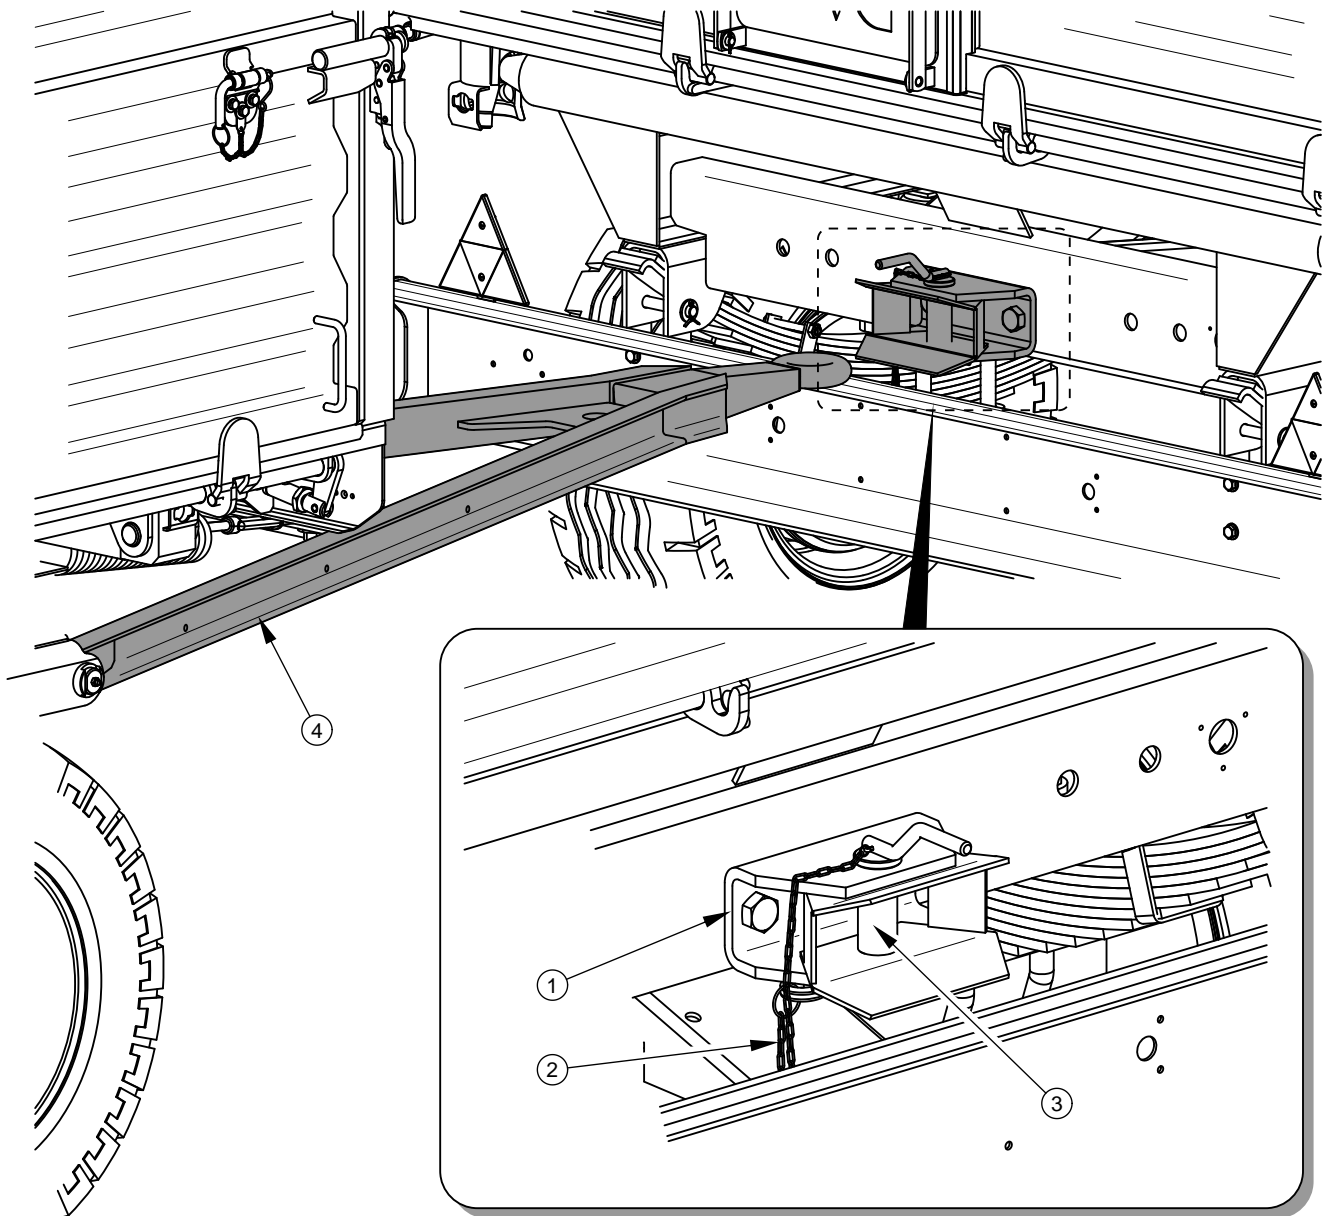

**FIGURE 4.2** Coupling second trailer

(1) trailer rear hitch, (2) chain with linchpin securing pin, (3) hitch pin  $\varnothing 40$  mm, (4) drawbar of second trailer

### Disconnecting the second trailer

- ➔ Immobilise tractor and trailer with parking brake.
- ➔ Turn off tractor ignition. Ensure that unauthorised persons do not have access to the tractor cab.
- ➔ Disconnect conduits of pneumatic, hydraulic and electrical connections according to instructions contained in section (4.2)



- ➔ Remove linchpin from pin of the hitch of the first trailer. Remove drawbar pin and drive tractor away.

**IMPORTANT!**

Do NOT hitch a second trailer constructed on any chassis except dual axle.  
Do NOT couple a second machine with trailer version T653/2 with overrun brake.

## 4.4 LOADING AND SECURING LOAD

### 4.4.1 GENERAL INFORMATION CONCERNING LOAD

Before beginning loading make certain that the load box side walls and slide gate are properly closed and secured. The trailer must be positioned to travel forwards and be hitched to the tractor. Loading should only take place, when trailer is placed on flat level surface and hitched to tractor. If the trailer is equipped with tarpaulin cover, it should be rolled. If load does not exert pressure on the side walls or extension walls, the linking cable can be disengaged. In other cases it must be installed in cable release mechanism installed in the side walls and extensions. Load box walls can be damaged if there is no linking cable.

Regardless of the type of load carried, the user is obliged to secure it in such a manner that the load is unable to spread and cause contamination of the road. If this is impossible, do NOT transport this type of load.

Materials, which in contact with painted or steel surfaces may cause damage, should be transported in sealed packaging (sacks, boxes, barrels etc.), and after completing transport, thoroughly wash out load box with water jet.

If the transported materials exert high local pressure on the load box platform it should be protected against damage using thick planks, plywood or other materials of similar properties.

**IMPORTANT!**

Always aim at distributing the load uniformly in the load box.  
The trailer's maximum carrying capacity must not be exceeded.

With regard to the various densities of materials, using the total load box capacity may cause exceeding permissible carrying capacity of the trailer. Guideline specific weight of selected materials shown in table (4.1). It is necessary to pay particular attention not to overload the trailer.

**TABELA 4.1 Guideline weights volume of selected loads**

TYPE OF MATERIAL	VOLUME WEIGHT kg/m <sup>3</sup>
<b>Root crops:</b> raw potatoes steamed crushed potatoes dried potatoes sugar beet - roots fodder beet - roots	700 - 820 850 - 950 130 - 150 560 - 720 500 - 700
<b>Organic fertilisers:</b> old manure mature manure fresh manure compost dry peat	700 - 800 800 - 900 700 - 750 950 – 1 100 500 - 600
<b>Mineral fertilisers:</b> ammonium sulphate potash salt super phosphate basic slag phosphate potassium sulphate kainite milled lime fertiliser	800 - 850 1,100 – 1,200 850 – 1,440 2,000 – 2,300 1,200 – 1,300 1,050 – 1,440 1,250 - 1,300
<b>Building materials:</b> cement dry sand wet sand solid bricks	1,200 – 1,300 1,350 – 1,650 1,700 – 2,050 1,500 – 2,100

TYPE OF MATERIAL	VOLUME WEIGHT kg/m <sup>3</sup>
hollow bricks	1,000 – 1,200
stones	1,500 – 2,200
soft wood	300 - 450
hard sawn timber	500 - 600
impregnated timber	600 - 800
steel structures	700 – 7,000
milled burnt lime	700 - 800
cinders	650 - 750
gravel	1,600 – 1,800
<b>straw litter and bulk feeds</b>	
meadow hay dried in the swath	10 - 18
hay wilted in the swath	15 - 25
hay in gathering trailer (dry wilted)	50 - 80
wilted cut hay	60 - 70
dry baled hay	120 - 150
wilted baled hay	200 - 290
stored dry hay	50 - 90
stored cut hay	90 - 150
clover (lucerne) wilted in the swath	20 - 25
clover (lucerne) cut wilted on trailer	110 - 160
clover (lucerne) wilted on gathering trailer	60 - 100
dry stored clover	40 - 60
cut dry stored clover	80 - 140
dry straw in round bales	8 - 15
damp straw in round bales	15 - 20
cut damp straw in bulk trailer	50 - 80
cut dry straw in bulk trailer	20 - 40
cut dry straw in gathering trailer	50 - 90
cut dry straw in stack	40 - 100
baled straw (lightly crushed)	80 - 90
baled straw (heavily crushed)	110 - 150
cereal mass in round bales	20 - 25

TYPE OF MATERIAL	VOLUME WEIGHT kg/m <sup>3</sup>
cut cereal mass in bulk trailer	35 - 75
cut cereal mass in gathering trailer	60 - 100
green fodder in swath	28 - 35
cut green fodder in bulk trailer	150 - 400
green fodder in gathering trailer	120 - 270
fresh beet leaves	140 - 160
cut fresh beet leaves	350 - 400
beet leaves in gathering trailer	180 - 250
<b>concentrated feeds and mixed feeds:</b>	
stored chaff	200 - 225
pressed cake	880 – 1 000
milled dry feed	170 - 185
mixed feeds	450 - 650
mineral mixtures	1,100 – 1 300
ground oats	380 - 410
wet sugar beet pulp	830-1 000
pressed sugar beet pulp	750 - 800
dry sugar beet pulp	350 - 400
bran	320 - 600
bone meal	700 – 1 000
pasture salt <sup>(1)</sup>	1,100 – 1 200
molasses	1,350 – 1 450
silage (pit silo)	650 – 1 050
hay silage (tower silo)	550 - 750
<b>Seeds and grains:</b>	
beans	750 - 850
mustard	600 - 700
peas	650 - 750
lentils	750 - 860
runner beans	780 - 870
barley	600 - 750
clover	700 - 800

TYPE OF MATERIAL	VOLUME WEIGHT kg/m <sup>3</sup>
grass	360 - 500
maize	700 - 850
wheat	720 - 830
oil seed rape	600 - 750
linseed	640 - 750
lupins	700 - 800
oats	400 - 530
lucerne	760 - 800
rye	640 - 760
<b>Others:</b> dry soil wet soil fresh peat garden soil	1,300 – 1 400 1,900 – 2 100 700 - 850 250 - 350

Source: "Technology of machine work in agriculture", PWN, Warszawa 1985

Loading should be carried out by a person experienced in this type of work and having appropriate authorisation for operating equipment (if required).

### DANGER



The trailer is also designed for transport of harvested crops and agricultural products (volumetric or poured). It is permissible to transport other loads (timber, building materials packed loads), on the condition of securing the load box against damage (abrasion of paint covering, corrosion etc.).

### DANGER



Load on trailer must be secured against moving or contaminating road during travel. If it is impossible to properly secure the load, do NOT transport this type of material.

### **Loose bulk material**

Loading bulk materials is normally conducted with the use of loaders or conveyors and possibly loading manually. Bulk materials may not protrude beyond the outline of sides or extensions. On completion of loading, the load should be evenly spread over the whole surface of the load box. During loading materials sides and extensions should be connected with linking cable. Secure cable release mechanism with linchpin.

Oilseed rape or seeds of other plants of very small size or powder materials can be transported provided the load box is properly sealed in places where gaps are bigger than the seed diameter or other carried material. Profiled rubber seals, silicone sealers, plastic wrap, rope or textile materials are recommended materials to provide sealing of the load box.

Additionally it is essential to protect load with tarpaulin cover. It protects the load against spilling during travel, being blown away by the wind and also protects load against moisture, which is particularly dangerous in the case of bulk materials. They may absorb a significant amount of water, which may increase the bulk of the load during travel. In extreme cases the gross weight of the trailer may exceed the permissible vehicle gross weight.

Some bulk loads (e.g. building materials, such as gravel or slag) may cause more rapid damage to paintwork.

### **Loads of pieces or solid lumps**

Loads of pieces or solid lumps are generally hard materials of significantly greater dimensions than bulk loads (stones, coal, bricks and ballast). These materials without prior preparation of the load box may cause indentation of the floor or sidewalls and abrasion of paintwork. In order to protect it, lay thick plywood, hard particle board, thick planks or other materials of similar properties on the load box platform and shield sides and extensions. Non-compliance with the instructions provided could invalidate the guarantee. Loading of material in pieces or solid lumps must be from a low height. The load must not fall with great force on the floor of the load box, even if it is protected.

### **Hazardous loads**

According to the European ADR agreement concerning the international road transport of hazardous materials, the transport of this type of load (defined in detailed by this agreement) is forbidden with the use of agricultural trailers. The only exception are plant protection materials and artificial fertilisers, which may be transported on agricultural trailers on the

condition that they are transported in the appropriate packaging and in quantities envisaged by the ADR agreement.

## **DANGER**



If it is necessary to carry permitted hazardous materials, acquaint yourself with the regulations concerning transport of hazardous materials in force in the given country and also the regulations of the ADR agreement.

It is absolutely essential to carefully read the information leaflets provided by the load manufacturer, and to observe the instructions for transporting and handling the load. Ensure whether during loading work it is necessary to apply additional personal protection (masks, rubber gloves etc.)

### **High volume loads**

High-volume loads (light with a high volume), such as hay, straw bales - rectangular or round, green fodder etc, are recommended to be loaded with the aid of the appropriate mechanical fittings: bail grabs, forks etc. The load may be loaded even higher than the load box extensions but taking care about trailer stability and proper securing and protection of load. Remember that higher loading has a negative effect on trailer stability.

### **Loads in packaging**

Loads transported in packaging (boxes, sacks), must be laid closely side-by-side beginning from the front side of the trailer. If it is essential to lay several layers, particular groups should be stacked alternately (in block system). The load must be laid tightly together and on the whole surface of the trailer floor. Otherwise, during travel the load will move. With regard to the trailer construction (adaptation of the load box to the transport of agricultural crops and products, lack of load securing points), materials in packaging may not be loaded above the top of the walls or extensions of load box. If the trailer is equipped with net extensions, the height of the load layer may not be higher than 500 mm, that is it may not exceed the upper edge of the sides. A higher load level may move during travel and cause significant damage to the net extensions and the load may spill.

**DANGER**

If there is a danger of load packaging moving, do NOT transport this type of material. A moving load constitutes a serious hazard during travel for the tractor driver and other road users.

Materials which may cause corrosion of steel, chemical damage or react in any other way negatively affecting the trailer structure may be transported only on condition of appropriate load preparation. Materials must be tightly packed (in plastic foil sacks, plastic containers etc.). During transport packaging contents may not come into contact with load box therefore ensure the appropriate tightness of containers.

With regard to the diversity of materials, tools, means of securing and getting a load it is impossible to describe all means of loading. While working be guided by caution and own experience. The trailer user must carefully read the regulations concerning road transport and comply with them.

**DANGER**

Overloading the trailer, erroneous loading and securing of the load is the most frequent cause of accidents during transport.

The load must be arranged in such a way that it does not threaten the stability of the trailer, and does not hinder driving.

Ensure that during unloading / loading or raising the load box nobody is near the trailer. Before tipping load box ensure that there is visibility and make certain that there are no bystanders.

**DANGER**

The trailer is not intended to transport people, animals or hazardous materials (with the exception of loads specified in section 4.4).

The arrangement of the load may not cause an overload on the axle of the trailer.



## 4.5 TRANSPORTING LOADS

When driving on public or private roads, respect the road traffic regulations, exercise caution and prudence. Listed below are the key guidelines for driving the tractor and trailer combination.

- Before moving off make sure that there are no bystanders, especially children, near the trailer or the tractor. Take care that the driver has sufficient visibility.
- Make sure that the trailer is correctly attached to the tractor and tractor's hitch is properly secured.
- The trailer must not be overloaded, loads must be uniformly distributed so that the maximum permissible axle loads are not exceeded. The trailer's maximum carrying capacity must not be exceeded as this can damage the trailer and pose a risk to the operator or other road users.
- Permissible design speed and maximum speed allowable by road traffic law must not be exceeded. The towing speed should be adapted to the current road conditions, load carried by the trailer, road surface conditions and other relevant conditions.
- Trailer may be towed on slopes of up to 8° and unloading must take place only on a level surface.
- When not connected to the tractor, the trailer must be immobilised using parking brake and possibly also with wedges or other objects without sharp edges placed under the front and back wheels. Do NOT leave unsecured trailer. In the event of machine malfunction, pull over on the hard shoulder avoiding any risk to other road users and position reflective warning triangle according to traffic regulations.
- When driving on public roads trailer must be marked with a slow-moving vehicle warning sign attached to the rear wall of load box, if the trailer is the last vehicle in the group.
- While driving on public roads the trailer must be fitted with a certified or authorised reflective warning triangle.
- When driving, comply with all road traffic regulations, indicate an intention to turn using indicator lamps, keep all road lights and indicator lights clean at all times

and ensure they are in good condition. Any damaged or lost lamps or indicator lights must be immediately repaired or replaced.

- Avoid ruts, depressions, ditches or driving on roadside slopes. Driving across such obstacles could cause the trailer or the tractor to suddenly tilt. This is of special importance because loaded trailer's centre of gravity is higher (especially a high volume load), which reduces safety. Driving near ditches or channels is dangerous as there is a risk of the wheels sliding down the slope or the slope collapsing.
- Speed must be sufficiently reduced before making a turn or driving on an uneven road or a slope.
- When driving, avoid sharp turns especially on slopes.
- Please note that the braking distance of tractor and trailer combination is substantially increased at higher speeds and loads carried in the trailer.
- Monitor trailer's behaviour when travelling on an uneven terrain, and adjust driving speed to road conditions, slow down early enough when turning.

### **IMPORTANT!**




Prior to moving off with the trailer hitched, check the following:

- pins connecting the load box with the lower frame are secured against falling out,
- side wall hinge pins are protected against falling out.

Travel with a high-volume load by ruts, ditches roadside slopes etc. constitutes a great risk of overturning the trailer. Exercise caution when working.

## 4.6 UNLOADING

The trailer is equipped with hydraulic tipping system and suitable frame structure and the load box allowing tipping sideways and to the rear. Tipping of the load box is controlled from driver's cab using external tractor hydraulic system manifold.

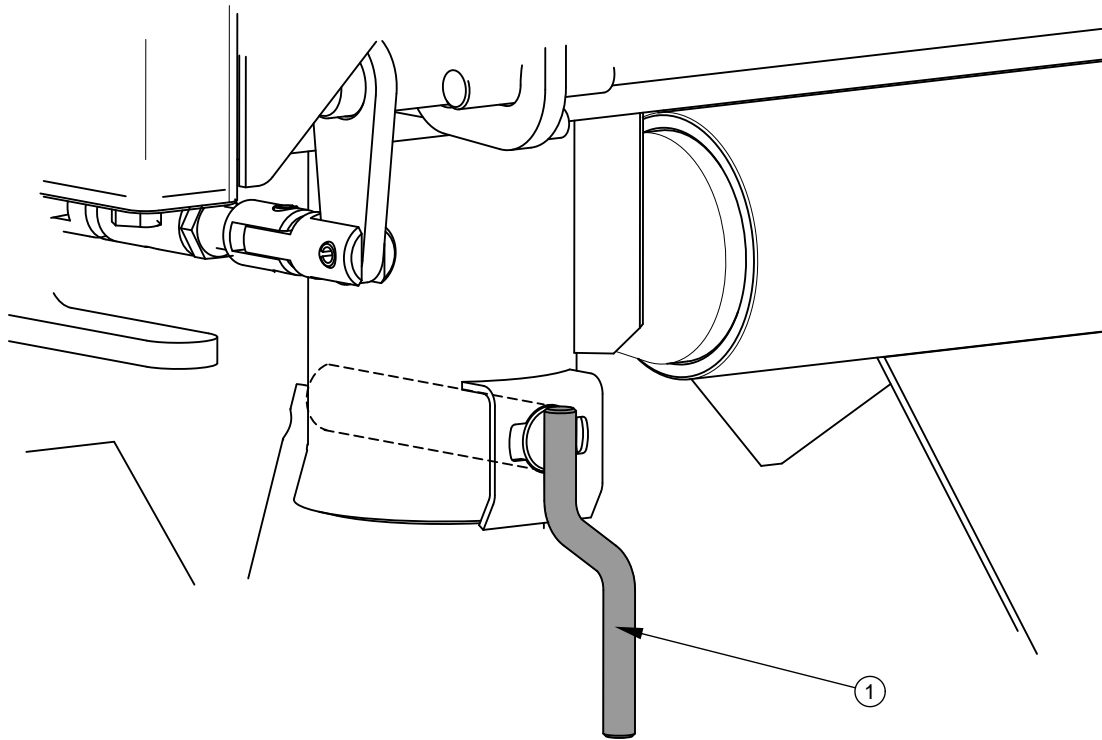


**FIGURE 4.3 Bolting tipping pins**

*(1) tipping pin lug*

Unloading trailer is performed in the following sequence:

- ➔ tractor and trailer must be placed to drive forwards on flat and hard ground,
- ➔ immobilise tractor and trailer with parking brake,
- ➔ tipping pins (connecting load box and lower frame) should be placed and properly interlocked on the side, which will be used to unload;
  - ⇒ Pins and individual sockets are designed so it is impossible to place them on the opposite diagonal side of the load box, which would damage the trailer,

⇒ lug (1) correct bolting of pin is directed vertically (downwards) – figure (4.3),

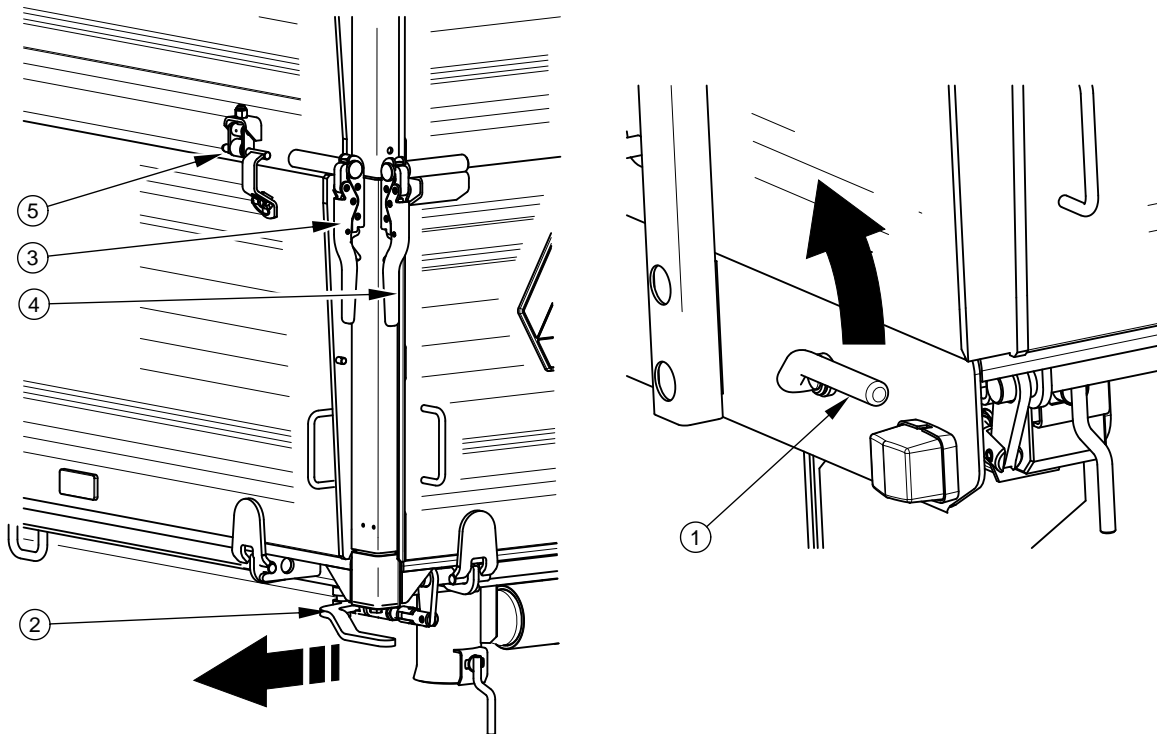

**FIGURE 4.4 Locks of box sides and extensions**

(1) left wall locking lever, (2) rear wall locking lever, (3) side wall lock (rear left), (4) rear wall lock (left), (5) lateral lock

- open appropriate closures of sides and/or extensions and side wall or rear wall locks or open rear chute sliding gate (depending on the direction in which unloading should take place);
  - ⇒ during opening exercise caution, because the load may exert great pressure on the sides.
- Place the control lever controlling the hydraulic tipping system circuits in position 1 -- tipping of the first trailer,
- Using the manifold lever in the operator's cabin to initiate tipping of the load box,
- after unloading, lower load box, clean the residual material from the load box edges and walls,

- ➔ close and secure the walls and wall extensions or chute opening,
- ➔ before moving off make sure that tipping pins are in correct position, i.e. with the handle facing downward.

If a second trailer is hitched, it should be unloaded only when the load box of the first trailer has been lowered and the hydraulic tipping system control lever is placed in position 2 -- tipping of the second trailer.

## **DANGER**




Tipping the load box must be done on hard and level ground.

Use only original pins with a lug or handle. Using third-party pins could damage the trailer. Tipping pins must be correctly interlocked.

When opening load box side wall locks take particular care, because of the pressure of the load on the wall.

Rear load box wall is equipped with chute slide gate (1) – figure (4.5) and chute opening (2) (optional equipment) which is used for unloading of loose materials. Chute design allows very accurate dosing of the material to packaging (sacks, boxes etc). The opening gap can be controlled using lever (3). In order to do that loosen the bolt interlocking slide gate (4), open the slide as required and lock again using the bolt. When unloading through the chute do not open wall locks or wall extension locks and tipping of the load box must be done very slowly and without jerking. Raising the load box quickly will exert large pressure on the rear part of the load box due to displacement of the carried material and could compromise trailer's stability.

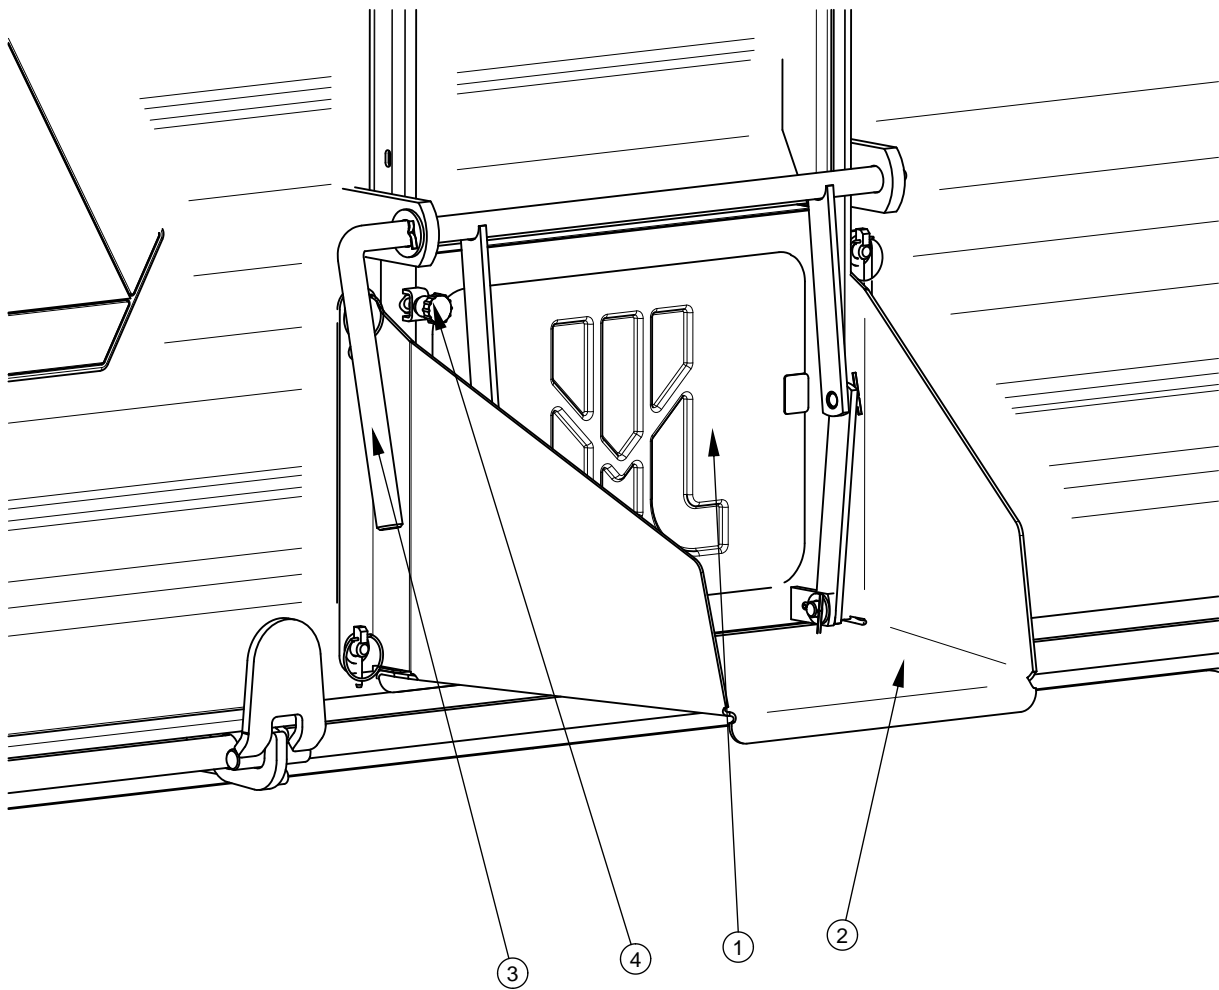

**FIGURE 4.5 Chute**

*(1) chute slide gate, (2) chute, (3) lever, (4) locking bolt*



**DANGER**

When closing the rear grain chute gate or the walls take particular care to avoid crushing fingers.

Trailer with net extensions may only be unloaded by tipping load box to the rear.

**DANGER**

Bulk materials loaded in excess of 1 m can be unloaded by tipping the load box to the rear only.

Do NOT jerk the trailer forwards if load is bulky or reluctant to pour and does not unload.

Ensure that during unloading nobody is near tipped load box or load material pouring out.

Tipping may only be performed when trailer is hitched to tractor.

Do NOT tip load box in strong gusty winds conditions.

Do NOT move off or drive when load box is raised.

While unloading bulky materials be especially careful. Do NOT tip load box on uneven or wet ground and move and jerk trailer during unloading. Bulky materials are normally difficult to unload therefore proceed cautiously and patiently. Careless operation of trailer may pose a danger to operators and bystanders can also cause damage to the machine.

## 4.7 PROPER USE AND MAINTENANCE OF TYRES

- When working on the tyres, wedges or other objects without sharp edges should be placed under the wheels of the trailer to prevent it from rolling. The wheel can be taken off only when the trailer is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Inspection of nut tightening should be carried out after first use of trailer, after first travel with loading and then after 6 months use. In the event of intensive work checking the nut tightening should be done not less frequently than each 100 kilometres. The above actions should be repeated individually if a wheel has been removed from the wheel axle.
- Regularly check and maintain correct pressure in tyres according to Operator's Manual (especially if trailer is not used for a longer period).
- Pressure and tyres should be also checked after the whole day of intensive work. Please note that higher temperatures could raise tyre pressure by as much as 1 bar. At high temperatures and pressure, reduce load or speed.

- Do not release air from warm tyres to adjust the pressure or the tyres will be underinflated when temperatures return to normal.
- Protect valves using suitable caps to avoid soiling.
- Do not exceed the trailer's maximum design speed.
- When trailer is operated all day, stop working for a minimum of one hour in the afternoon.
- Adhere to 30 minutes rest for cooling tyres after driving 75 km or after 150 minutes continuous travel depending on which occurs first.
- Avoid potholes, sudden manoeuvres or high speeds when turning.



***SECTION***

**5**

---

**TECHNICAL  
OPERATION**

## 5.1 PRELIMINARY INFORMATION

When using the trailer, regular inspections of its technical condition are essential and the performance of maintenance procedures, which keep the machine in good technical condition. In connection with this the user of the trailer is obliged to perform all the maintenance and adjustment procedures defined by the Manufacturer.

Repairs during the guarantee period may only be performed by authorised service points.

Detailed procedures and extents of functions are described in this section, which the user may perform with his own resources. In the event of unauthorised repairs, changes to factory settings and other actions, which are not regarded as possible for the trailer operator to perform, the user shall invalidate the guarantee.

## 5.2 SERVICING BRAKES AND AXLES

### 5.2.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of axle and brakes elements should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the user are limited to:

- initial inspection of axle brakes,
- inspection and adjustment of loose play of axle bearings,
- mounting and dismounting wheel inspection of wheel tightening,
- checking air pressure, evaluating technical condition of wheels and tyres,
- mechanical brakes adjustment,
- change of parking brake cable and adjustment of cable tension.

Procedures connected with:

- changing grease in axle bearings,
- changing bearings, hub seals,
- changing brake linings, repairing brake,

may be performed by specialist workshops.




## **DANGER**

Do NOT use the trailer when brake system is unreliable.

### **5.2.2 INITIAL INSPECTION OF AXLE BRAKES,**

After purchasing trailer, the user is responsible for general checking of brake system of trailer axles.

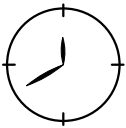


Initial inspection of axle brakes must be conducted:

- after first use,
- after first travel with load.

#### **Inspection procedures**

- ➔ Hitch trailer to tractor and place wedges under rear trailer wheel.
- ➔ Engage and release in turn the main brake and then the trailer parking brake.
  - ⇒ Main brake and parking brake should be engaged and released without great resistance and severity.
- ➔ Check means of securing cylinder and return springs.
- ➔ Check cylinder movement and correct return of piston to start position.
  - ⇒ The help of a second person is required, who shall engage trailer brake.
- ➔ Check if axle elements are in place, (cotter pins in castellated nuts, expansion rings etc.).
- ➔ Check hydraulic cylinders or pneumatic cylinders for tightness - compare sections 5.3.2 and 5.4.2.

### 5.2.3 CHECK WHEEL AXLE BEARINGS LOOSENESS

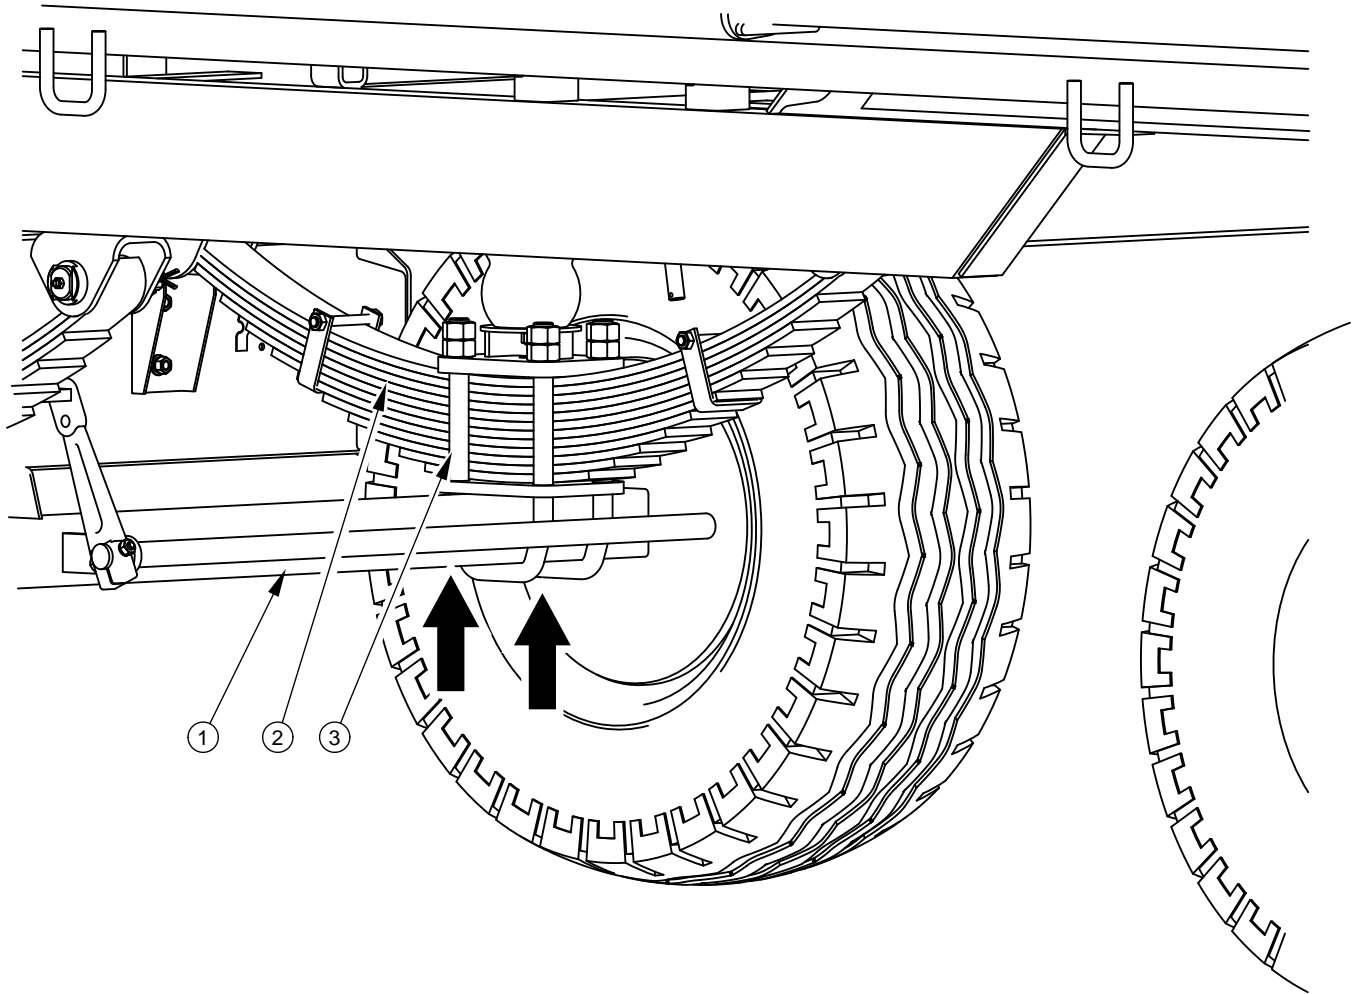

**FIGURE 5.1 Lifting jack support point**

(1) axle, (2) leaf spring shock absorber, (3) U bolt.

#### Preparation procedures

- Hitch trailer to tractor, braking tractor with parking brake.
- Park tractor and trailer on hard level ground.
  - ⇒ Position tractor to drive straight forward (front trailer axle may not be turned).
- Place securing wedges under trailer rear wheel. Ensure that trailer shall not move during inspection.
- Raise front wheel (opposite to the side where wedges are placed).

- ⇒ The lifting jack should be placed under the axle between U bolts (3) figure (5.1) securing axle (1) to shock absorber leaf springs (2), or as near as possible to leaf spring mounting. Recommended support points are marked with arrows. Lifting jack must be suited to weight of trailer.

### Check wheel axle bearings looseness

- ➔ Turning the wheel slowly in both directions check that movement is smooth and that the wheel rotates without excessive resistance.
- ➔ Turn the wheel so that it rotates very quickly, check that the bearing does not make any unusual sounds.
- ➔ Turning the wheel try to detect looseness.
  - ⇒ You may use a lever placed under the wheel supporting the other end on the floor.
- ➔ Repeat procedure to each wheel individually, remembering that the jack must be on the side opposite to the wedges.

If slack is felt, adjust bearing. Unusual sounds coming from bearing may be symptoms of excess wear, dirt or damage. In such an event the bearing, together with sealing ring, should be replaced with new parts, or cleaned and greased again. During inspection of bearings ensure that possibly detected looseness comes from the bearing and not from the suspension system (e.g. looseness of leaf spring pins etc.).




#### TIP

Damaged hub cover or lack of hub cover causes penetration of contamination and dampness to hub, which causes significantly faster wear of bearing and hub seals.

Bearing life is dependent on working conditions of trailer, loading, speed of travel and lubrication conditions.

Check condition of hub cover, if necessary replace with new cover. Inspection of bearing looseness may only and exclusively be conducted, when the trailer is hitched to a tractor, and the load box is empty.

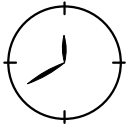

#### Check wheel axle bearings looseness

- after travelling the first 1,000 km,
- after intensive use of trailer,
- every six months use or every 25,000 km.



### **DANGER**

Before commencing work the user must read the instructions for lifting and adhere to the manufacturer's instructions.

The lifting jack must be stably supported by the ground and the axle.

Ensure that trailer shall not move during inspection of bearing looseness of axles.


## **5.2.4 ADJUSTMENT OF WHEEL AXLE BEARINGS LOOSENESS**

### **Preparation procedures**

- ➔ Prepare tractor and trailer for adjustment procedures according with description provided in section 5.2.3.

### **Adjustment of road wheel axle bearings**

- ➔ Take off hub cover (1) - figure (5.2).
- ➔ Take out split cotter pin (3) securing castellated nut (2).
- ➔ Tighten castellated nut in order to eliminate looseness.
  - ⇒ Wheel should rotate with insignificant resistance.
- ➔ Unscrew nut (not less than 1/3 rotation) to cover the nearest thread groove with alignment to opening in wheel stub axle. Wheel should rotate with insignificant resistance.
  - ⇒ Nut may not be excessively tightened. Do not apply excessive pressure with regard for deterioration of bearing working conditions.
- ➔ Secure castellated nut with cotter pin and mount hub cap.
- ➔ Delicately tap hub cap with rubber or wooden hammer.

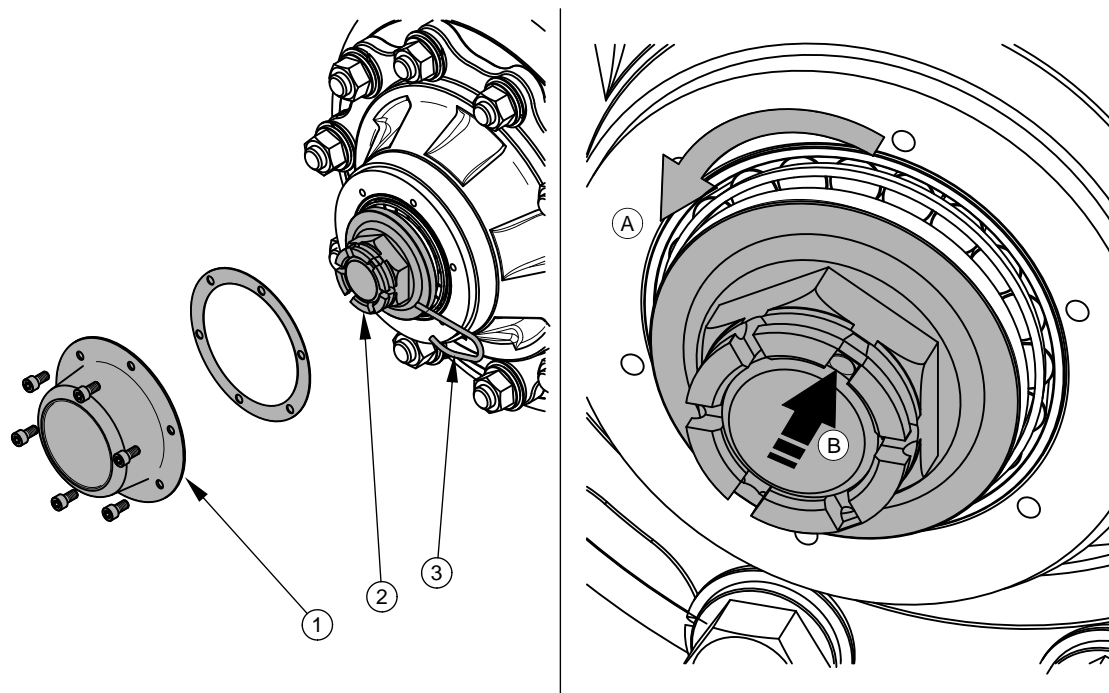

**FIGURE 5.2 Adjustment of road wheel axle bearings**

(1) hub cover, (2) castellated nut, (3) securing split cotter pin

The wheel should turn smoothly without stiffness or detectable resistance not originating from abrasion of brake shoes in brake drum. Adjustment of bearing looseness may only and exclusively be conducted, when the trailer is hitched to a tractor, and the load box is empty.



**TIP**

If the wheel is dismantled, bearing looseness is easy to check and adjust.

### 5.2.5 MOUNTING AND DISMOUNTING WHEEL, INSPECTION OF WHEEL NUT TIGHTENING.

#### Dismounting wheel

- ➔ Immobilise trailer with parking brake.
- ➔ Place securing wedges under trailer rear wheel.
- ➔ Ensure that trailer shall not move during wheel dismounting.

- ➔ Loosen wheel nuts according to sequence given in figure (5.3).
- ➔ Place lifting jack and lift trailer.
- ➔ Dismount wheel.

### Mount wheel

- ➔ Clean axle pins and nuts of dirt contamination.
  - ⇒ Do not grease thread of nuts and pins.
- ➔ Check condition of pins and nuts, if necessary replace.
- ➔ Place wheel on hub, tighten nuts so that adjoins hub exactly.
- ➔ Lower trailer, tighten nuts according to recommended torque and given sequence.




#### TIP

Wheel nuts should be tightened using a torque of 270 Nm - nuts M18x1.5.

### Tightening nuts

Nuts should be tightened gradually diagonally, (in several stages, until obtaining the required tightening torque) using a torque spanner. If a torque spanner is not available, one may use an ordinary spanner. The arm of the spanner (L) figure (5.3) should be selected according to the weight of the person (F) tightening the nut. Remember that this method of tightening is not as accurate as the use of a torque spanner.




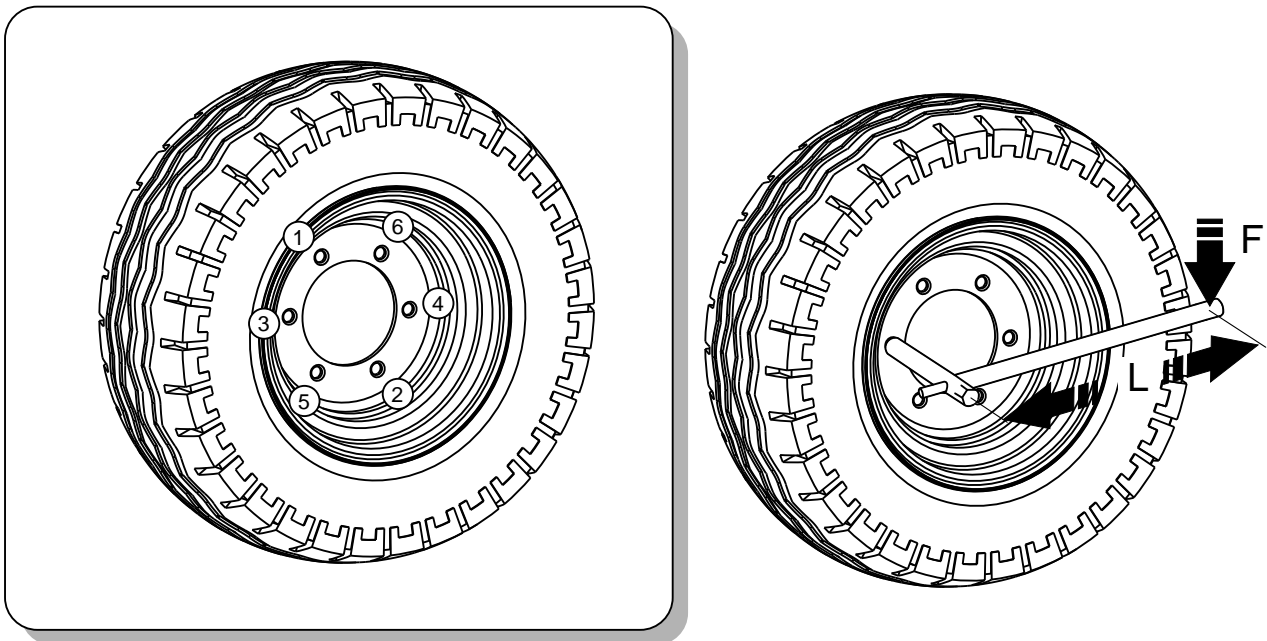

**FIGURE 5.3** Sequence of nut tightening

(1) - (6) sequence of nut tightening, (L) spanner length, (F) user weight

Checking wheel axle tightening:

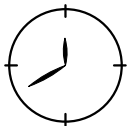

- after first use,
- after first travel with load,
- after travelling the first 1,000 km,
- every six months use or every 25,000 km.

In the event of intensive work checking the nut tightening should be done at least every 100 kilometres. The above actions should be repeated individually if a wheel has been removed from the wheel axle.

### IMPORTANT!



Axle nuts may not be tightened with impact wrench, because of danger of exceeding permissible tightening torque, the consequence of which may be breaking the thread connection or breaking off the hub pins.

The greatest precision is achieved by use of a torque spanner. Before commencing work, ensure that correct tightening torque value is set.

**TABLE 5.1 Spanner arm**

<b>WHEEL TIGHTENING TORQUE</b>	<b>BODY WEIGHT (F)</b>	<b>ARM LENGTH (L)</b>
<b>[Nm]</b>	<b>[kg]</b>	<b>[m]</b>
270	90	0.30
	77	0.35
	67	0.40
	60	0.45

**5.2.6 CHECK AIR PRESSURE, EVALUATE TECHNICAL CONDITION OF WHEELS AND TYRES,**

Tyre pressure should be checked each time after changing spare wheel and not less than every month. In the event of intensive use it is recommended to check air pressure more frequently. During this time trailer must be unloaded. Checking should be done before travelling when tyres are not heated, or after an extended period of parking.



**TIP**

Tyre pressure values are specified in information decal, placed on wheel or on upper frame above trailer wheel.



**DANGER**


Damaged tyres or wheels may be the cause of a serious accident.

While checking pressure pay attention to technical condition of wheels and tyres. Look carefully at tyre sides and check the condition of tread.

In case of mechanical damage consult the nearest tyre service and check whether the tyre defect requires tyre replacement.

Wheels should be inspected with regard to distortion, breaking of material, breaking of welds, corrosion, especially in the area of welds and contact with tyre.

Technical condition and appropriate maintenance significantly extends the life of these elements and ensures appropriate level of safety to trailer users.

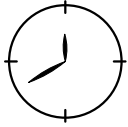

Checking tyre pressure and steel rims:

- every 1 month of use,
- if needed.

### 5.2.7 MECHANICAL BRAKES ADJUSTMENT,

During use of trailer abrasive friction covering of brake drums is subject to wear. Piston stroke extends, and exceeding braking force limiting value declines.


Adjustment must be made when:

- piston stroke amounts to 2/3 of maximum stroke,
- expansion levers are not set in parallel to each other during braking,
- repairs are made to braking system.

Trailer wheels must brake simultaneously. Brakes adjustment involves changing the setting of the expander arm (1) (*FIGURE 5.4*), in relation to expander shaft (2).

#### Required service actions

- ➔ Dismount cylinder fork mounted to expander arm (1).
- ➔ Dismantle expander ring (4) and washer (3).
- ➔ Mark position of expander arm (1) with regard to the shaft (2).
- ➔ Dismantle arm and set it in the appropriate position.
  - ⇒ in direction (A), if braking is too early,
  - ⇒ in direction (B), if breaking is too late.
- ➔ Position washer and expander ring. Check if elements are correctly positioned.

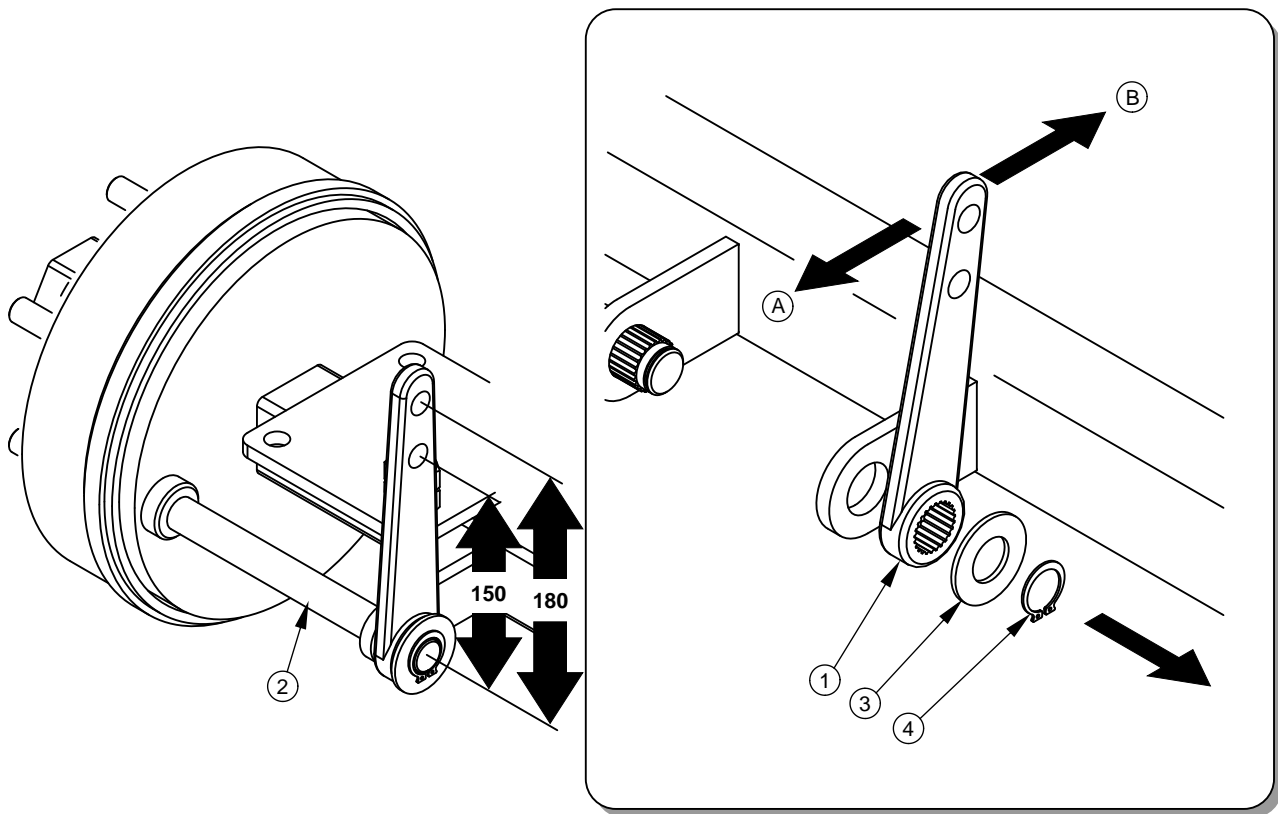

**FIGURE 5.4 Adjustment of axle mechanical brakes**

(1) expander arm, (2) expander shaft, (3) washer, (4) expander ring

Adjustment should be conducted separately for each wheel. Expander arm (1) should be moved by one notch in chosen direction. If the extent of cylinder action is still incorrect, move the lever again. After proper brake adjustment, at full braking the axle shaft expander should create an angle of 90° with the cylinder piston, and the stroke should amount to approximately half the length of the total stroke of the piston. After brake release expander arms may not be supported on any structural elements, because too little withdrawal of a piston ram may cause abrasion of brake shoes in drum and result in overheating trailer brakes. Expander arms, placed on one axle, must be positioned in parallel with regard to each other at full braking. If this is not so, adjust the position of the lever, which has the longer stroke.


During dismantling of cylinder fork remember or mark the original setting of the cylinder fork pin. The mounting position is selected by the Manufacturer and may not be changed.

**TABLE 5.2** Position of fork pin in expander arm

TRAILER VERSION.	PIN POSITION [mm]	
	FRONT AXLE	REAR AXLE
T653	150	150
T653/1	150	150
T653/2	180	150

### 5.2.8 ADJUSTMENT OF OVERRUN BRAKE CABLE TENSION


In the case of trailers with overrun brake when regulating cable tension it must be ascertained that the front axle brake operates simultaneously with the rear axle brake. If braking is too early or too late, adjust tension of cable (2) – figure (5.5).

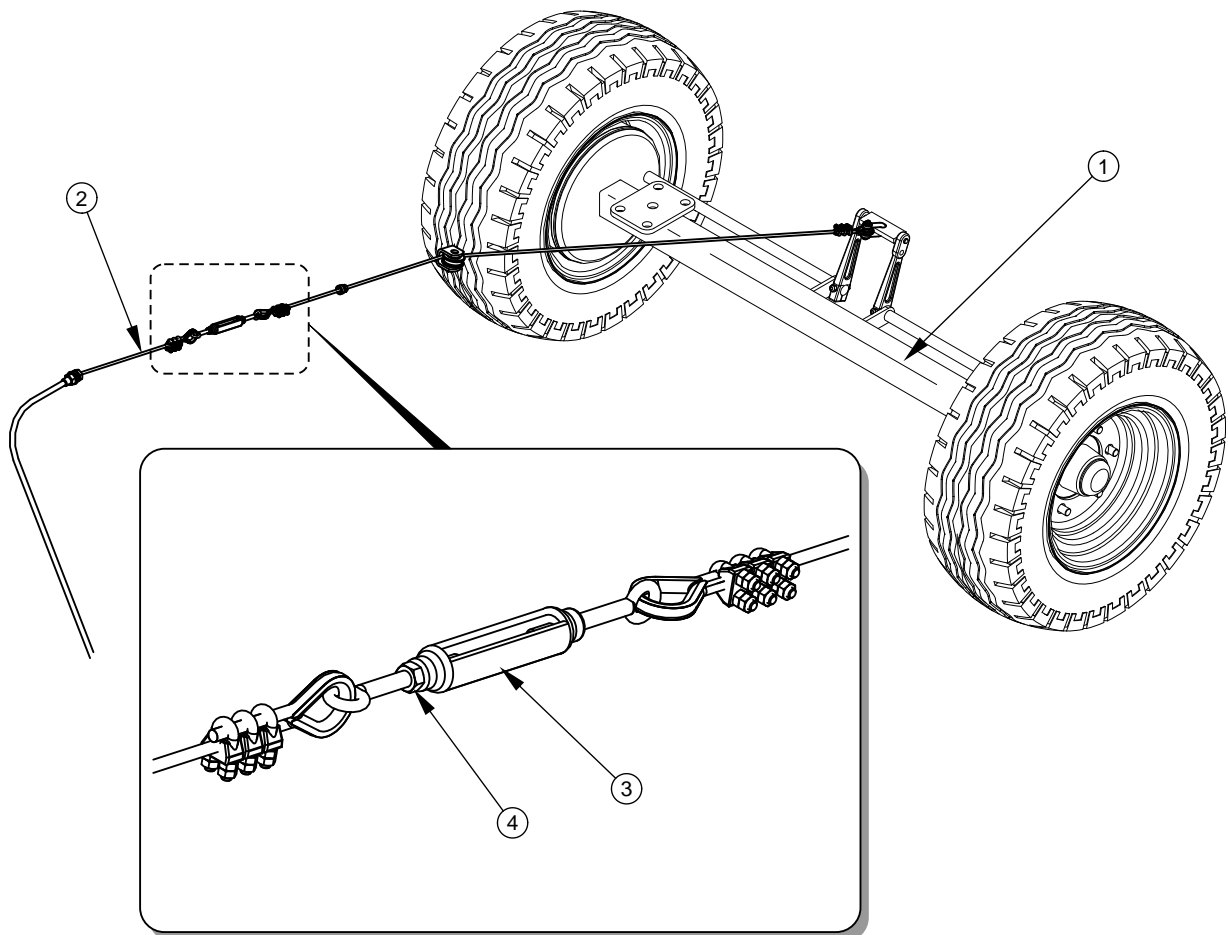**FIGURE 5.5** Regulation of overrun brake cable tension

(1) rear overrun axle, (2) overrun brake cable, (3) tensioner, (4) counter nut

### Required service actions

- ➔ Loosen counter nut (4) of tensioner.
- ➔ Adjust cable length (2)
  - ⇒ Tighten cable (2), if rear axle brake operates after front axle brake.
  - ⇒ Loosen cable (2), if rear axle brake operates before front axle brake.
- ➔ Tighten nut (4), check brake action.
  - ⇒ If problem continues repeat all actions.

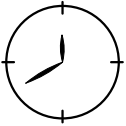

#### Checking and adjustment of main brake:

- every 12 months,
- if needed.


Brake repairs, changes of brake linings etc. may be only undertaken in authorised service points. Making unauthorised repairs and modifications by the user voids the guarantee. Among the service operations, which may be performed by the trailer user, there is only brake adjustment by changing the setting of expander arms.

### 5.2.9 CHANGE OF PARKING BRAKE CABLE AND ADJUSTMENT OF CABLE TENSION.

Proper operation of the parking brake is dependent on the effectiveness of the rear axle brake and the correct brake cable tension.

#### Change parking brake cable

- ➔ Hitch trailer to tractor. Park trailer and tractor on level surface.
- ➔ Place securing wedges under trailer rear wheel.
- ➔ Loosen nut (4) of cable clamps.
- ➔ Dismantle cable (2).
- ➔ Lubricate parking brake mechanism and pins of cable guide rollers.
- ➔ Install new cable, adjust cable tension.

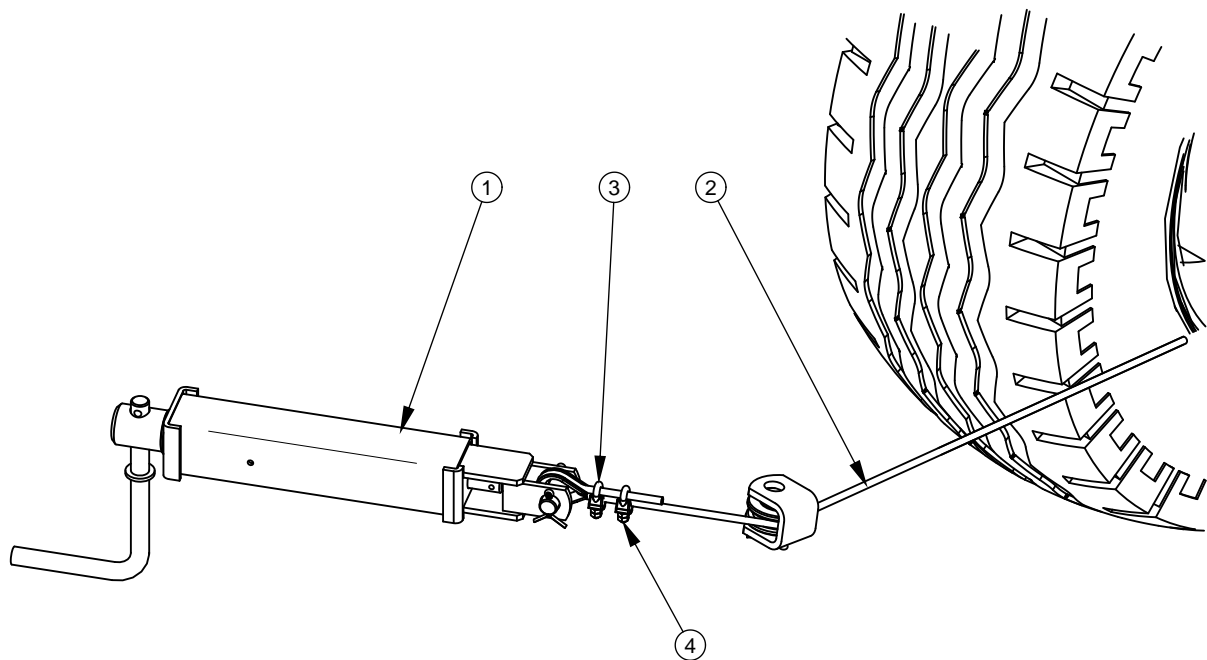

**FIGURE 5.6 Adjustment of parking brake cable tension**

(1) brake crank mechanism, (2) hand brake cable, (3) u-bolt clamp, (4) clamp nut

#### Adjustment of parking brake cable tension

- ➔ Hitch trailer to tractor. Park trailer and tractor on level surface.
- ➔ Place securing wedges under trailer rear wheel.
- ➔ Unscrew the brake bolt mechanism maximally (1) – figure (5.6), (anti clockwise).
- ➔ Loosen nut (4) of cable clamps (3) of handbrake cable (2).
- ➔ Tighten cable and tighten clamps.
  - ⇒ Length of parking brake cable should be so selected that at total release of working and parking brake the cable would be loose and hanging by 1 - 2 cm.


Adjustment of parking brake cable tension should be conducted in the event of:

- stretching of cable,
- loosening of parking brake cable clamps
- after adjustment of axle brakes,

- after repairs to axle brake system,
- after repairs in parking brake system.

Before commencing adjustment make certain that the main break is correctly regulated and is functioning properly.

Adjustment of parking brake (in trailer version with overrun brake), is unnecessary if the main brake (overrun) operates properly.

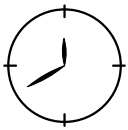

Checking and adjustment of parking brake:

- every 12 months,
- if needed.

## 5.3 PNEUMATIC SYSTEM OPERATION

### 5.3.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of system components (brake cylinders, conduits, control valve, braking force regulator etc.) should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the operator connected with the pneumatic system include:

- inspecting and checking air tightness of pneumatic system.
- cleaning the air filter (filters),
- draining water from air tank,
- cleaning drain valve,
- cleaning and maintaining pneumatic conduit connections,



### **DANGER**

Do NOT use the trailer when brake system is unreliable.




### 5.3.2 INSPECTING AND CHECKING AIR TIGHTNESS OF PNEUMATIC SYSTEM.

#### Checking hydraulic system tightness

- ➔ Hitch trailer to tractor.
- ➔ Immobilise tractor and trailer with parking brake. Place securing wedges under trailer rear wheel.
- ➔ Start tractor in order to supplement air in trailer brake system tank.
  - ⇒ In single conduit systems air pressure should amount to approx. 5.8 bar.
  - ⇒ In double conduit systems air pressure should amount to approx. 8 bar.
- ➔ Turn off tractor ignition.
- ➔ Check system components by releasing brake pedal in tractor.
  - ⇒ Give particular attention to conduit connections and brake cylinders.
- ➔ Repeat system check with depressed tractor brake pedal.
  - ⇒ The help of a second person is required.

In the event of the appearance of leaks, compressed air will reach places of damage on the exterior, with a characteristic hiss. Lack of system tightness may be exposed by covering checked elements with washing fluid or other foaming preparations, which will not react aggressively with system components. It is recommended to supply preparations commercially available designed to facilitate discovering air leaks. Damaged components should be replaced or repaired. If the leaks appear in connections, the user may tighten the connections. If air continues to escape replace connection component or seal.

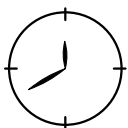


#### Check system tightness

- after travelling the first 1,000 km,
- each time after making repairs or changing system components,
- annually.

### Visual assessment of system

During tightness inspection attention should additionally be given to technical condition and degree of cleanness of the system components. Contact of pneumatic conduit seals etc. with oil, grease, petrol etc. may cause damage and accelerate the ageing process. Bent conduits, permanently deformed, cut or worn should be replaced.

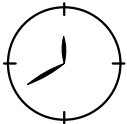

#### Visual assessment of system

- Conduct inspection of system at the same time as when checking tightness.



#### **IMPORTANT!**

Repair, exchange or regeneration of pneumatic system components may only be performed in a specialised workshop.


### 5.3.3 CLEANING THE AIR FILTERS

Depending on trailer working conditions, but not less than once in three months, take out and clean air filter inserts, which are placed in pneumatic system connection conduits. Inserts are used many times and are not subject to changing unless they are mechanically damaged.



#### **DANGER**

Before proceeding to dismantle filter, reduce pressure in supply conduit. While disengaging filter slide gate, hold cover with other hand. Stand away from filter cover vertical direction.

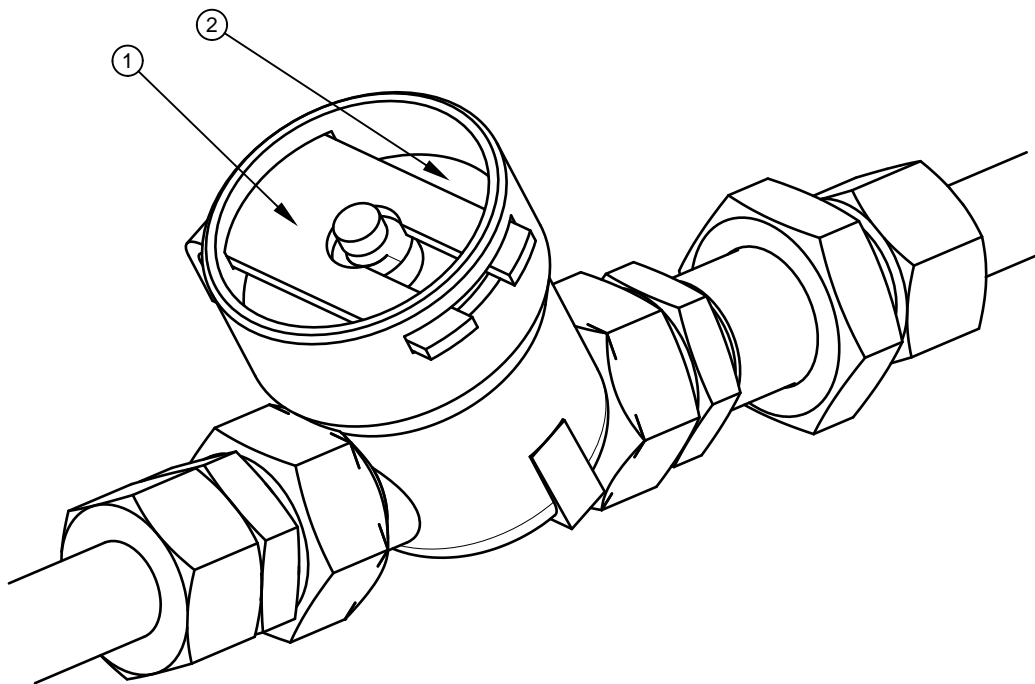


**FIGURE 5.7 Air filter**

*(1) securing slide lock, (2) air filter cover*

#### **Required service actions**


- ➔ Reduce pressure in supply conduit.
  - ⇒ Reduction of pressuring conduit may be achieved by pressing the head of the pneumatic connection to resistance point.
- ➔ Remove securing slide (1) – figure (5.7).
  - ⇒ Hold the filter cover (2) with the other hand. After removing slide lock, the cover is pushed off by the spring, in the filter housing.
- ➔ The insert and the filter body should be carefully washed out and blown through with compressed air. Assembly should be done in reverse order.

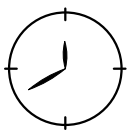

**Cleaning the air filter (filters):**

- every 3 months of use,

### 5.3.4 DRAINING WATER FROM AIR TANK

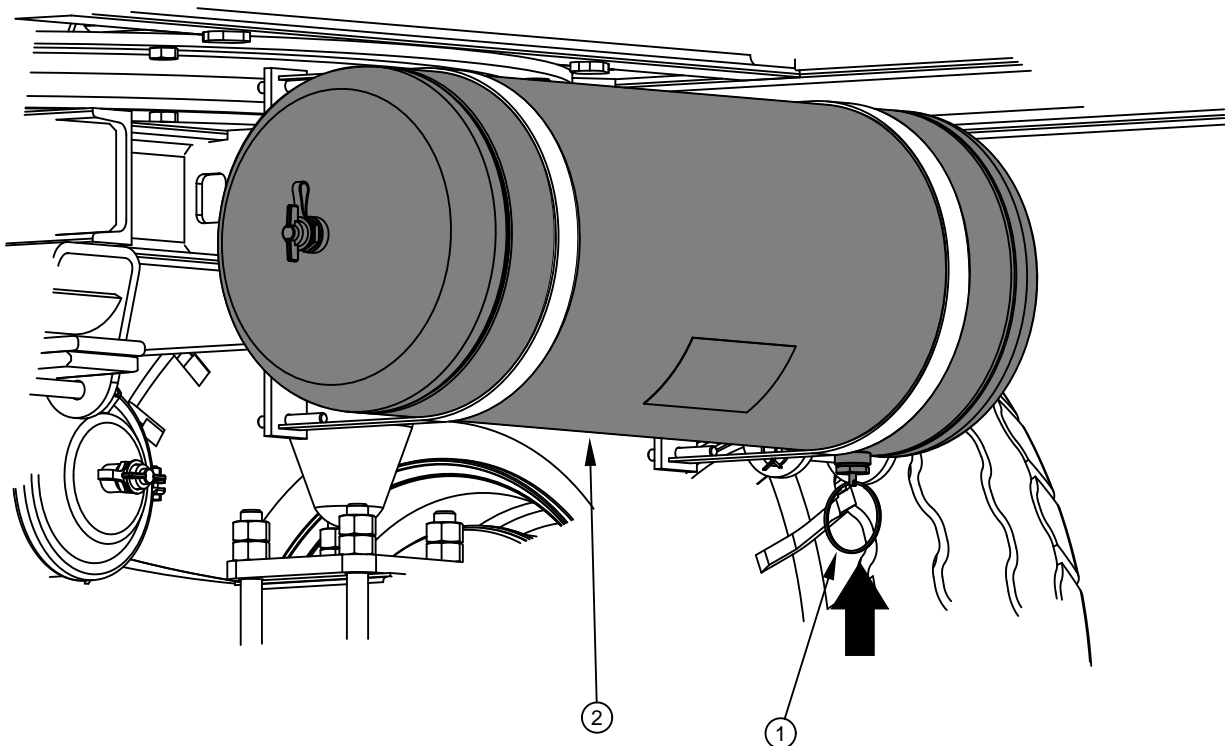


**FIGURE 5.8** Draining water from air tank

(1) drain valve, (2) air tank,

#### Required service actions

- Open drain valve (1) placed in lower part of tank (2) - tank is placed in rear part of turntable frame
  - ⇒ The compressed air in the tank causes the removal of water to the exterior.
- After release valve pin should automatically close and stop airflow from tank.
  - ⇒ In the event, that the valve pin resists returning to its setting, then the whole drain valve must be unscrewed and cleaned, or replaced (if it is damaged) - see section 5.3.5.

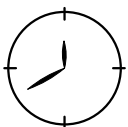

Draining water from air tank:

- every seven days of use.

### 5.3.5 CLEANING DRAIN VALVE




#### **DANGER**

Before dismantling drain valve release air from tank.

#### **Required service actions**

- ➔ Reduce pressure in air tank.
  - ⇒ Reduction of pressure in tank is achieved by tilting the drain valve mandrel.
- ➔ Unscrew valve.
- ➔ Clean valve, purge with compressed air.
- ➔ Change copper seal.
- ➔ Screw in valve, fill air tank, and check tank tightness.

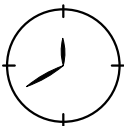

Cleaning valve:

- every 12 months (before winter period).

### 5.3.6 CLEANING AND MAINTAINING PNEUMATIC CONDUIT CONNECTIONS AND PNEUMATIC SOCKETS,




#### **DANGER**

Unreliable and dirty trailer connections may cause unreliability and faulty functioning of braking system.

Damaged connection body or connection socket to second trailer should be replaced. In event of damage to cover or seal, change these elements for new reliable elements. Contact of pneumatic connector seals with oils, grease, petrol etc. may cause damage and accelerate ageing process.

If the trailer is unhitched from the tractor, contact should be protected by cover or placed in its designated socket. Before the winter period it is recommended to preserve the seal with special preparations (e.g. silicon grease for rubber elements).

Each time before connection of the machine inspect technical condition and cleanness of contacts and sockets in tractor. If necessary clean or repair tractor socket.

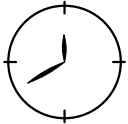

Inspect trailer connections:

- connection should be inspected every time before connecting trailer to tractor or second trailer.

## 5.4 HYDRAULIC SYSTEM OPERATION

### 5.4.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of hydraulic system components (tipping cylinder, valves etc.) should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the operator connected with the hydraulic system include:

- inspecting and checking air tightness of pneumatic system.
- Checking technical conditions of hydraulic connections.



### **DANGER**

Do NOT tip trailer with unreliable hydraulic tipping system.

Do NOT use the trailer if hydraulic brake system is unreliable.


### 5.4.2 CHECKING HYDRAULIC SYSTEM TIGHTNESS

#### Required service actions

- ➔ Hitch trailer to tractor.
- ➔ Connect all hydraulic system conduits according to service instructions.

- ➔ Clean connections and cylinders (tipping cylinder and possibly hydraulic brake cylinders).
- ➔ Conduct test tipping of load box sideways and backwards.
- ➔ Press tractor brake pedal several times
  - ⇒ If trailer is equipped with hydraulic brake system.
- ➔ Check tightness of hydraulic system, inspect cylinders and hydraulic conduits.

In the event of confirmation of oil on hydraulic ram cylinder bodies ascertain origin of leak. Inspect hydraulic seals when ram cylinder is completely extended. Minimum leaks are permissible with symptoms of "sweating", however in the event of noticing leaks in the form of "droplets" stop using the trailer until faults are remedied. If unreliability is evident in brake cylinders do NOT use trailer with damaged system until faults are remedied.

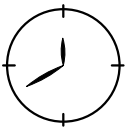


Checking tightness:

- After a week of use
- every 12 months of use.

### 5.4.3 CHECKING TECHNICAL CONDITION OF HYDRAULIC CONNECTIONS AND SOCKETS.

Hydraulic connections and sockets designed for connection with second trailer must be in good working condition and kept clean. Each time before connecting check if socket in tractor or connection of second trailer are maintained in good working condition. Tractor and trailer hydraulic systems are sensitive to the presence of permanent contamination, which may cause damage to precision system components (contamination may cause scratching of hydraulic valves, abrasion of piston surfaces etc.)

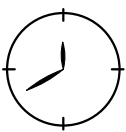


Inspection of hydraulic connections and sockets:

- connection should be inspected every time before connecting trailer to tractor or second trailer.

#### 5.4.4 CHANGE OF HYDRAULIC CONDUITS

Hydraulic conduits must be changed every 4 years regardless of their technical condition. This should be entrusted to specialised workshops.

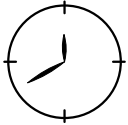

Change of hydraulic conduits:

- every 4 years,

### 5.5 OPERATION OF ELECTRICAL SYSTEM AND WARNING ELEMENTS

#### 5.5.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of electrical system components should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the user are limited to:

- technical inspection of electrical and reflective light system,
- Changing bulbs



#### **IMPORTANT!**


Do NOT travel with unreliable lighting system. Damaged lamp lenses, and burned-out bulbs must be replaced immediately before travelling. Lost or damaged reflective lights must be replaced.

#### **Required service actions**

- ➔ Hitch trailer to tractor with appropriate connection lead.
  - ⇒ Check if the connection lead is reliable. Check connection sockets in tractor and trailer.
- ➔ Check completeness and technical condition of trailer lights.



- ➔ Check completeness of all reflective lights.
- ➔ Check correct mounting of triangular slow-moving vehicle sign.
- ➔ Before driving on to public road check that the tractor is equipped with warning reflective triangle.

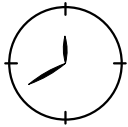

Checking technical condition of electrical system:

- each time while connecting trailer.




### TIP

Before driving away make certain that all lamps and reflective lights are clean.

## 5.5.2 CHANGE BULBS

Bulb set is presented in table (5.3). All light lenses are secured by screws and it is not necessary to dismantle whole lamp or trailer subassemblies.

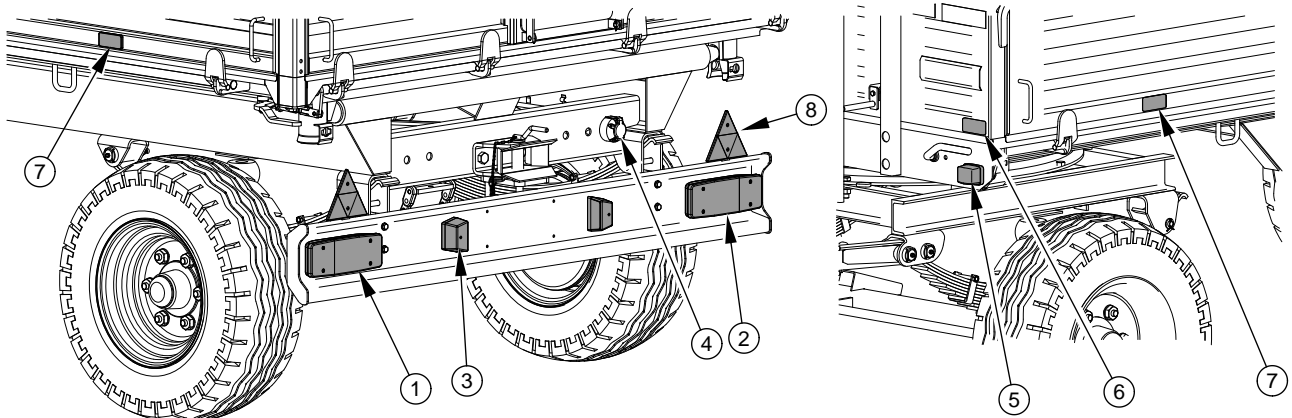

**FIGURE 5.9** Electrical equipment and reflective lights.

(1) rear left lamp group, (2) rear right lamp group, (3) registration number illumination lamp, (4) 7 pole socket, (5) front parking lights, (6) white reflector light, (7) orange reflector light, (8) triangular reflector light

**TABLE 5.3 List of bulbs**

LAMP	LAMP TYPE	BULB / QUANTITY IN 1 LAMP	NUMBER OF LAMPS
Rear left lamp group	WE 549L	R10W / 1 unit P21W / 2 units	1
Rear right lamp group	WE 549P	R10W / 1 unit P21W / 2 units	1
Licence plate illumination light	LT-120	C5W / 1 unit	2
Front parking lamp	LO-110PP	C5W / 1 unit	2

## 5.6 TRAILER LUBRICATION

**TABLE 5.4 Trailer lubrication schedule**

ITEM	LUBRICATION POINT	NUMBER OF LUBRICATION POINTS	TYPE OF GREASE	FREQUENCY
1	Hub bearing	4	A	24M
2	Drawbar eye	1	B	14D
3	Expander shaft sleeve in drum hub	4	A	3M
4	Leaf spring shock absorbers	4	C	6M
5	Overrun drawbar components	1	B	1M
6	Sockets for installation of tipping ram and cylinder suspension	4	B	1M

ITEM	LUBRICATION POINT	NUMBER OF LUBRICATION POINTS	TYPE OF GREASE	FREQUENCY
7	Tipping ram cylinder ball bearing	1	B	3M
8	Parking brake mechanism	1	A	6M
9	Parking brake guide roller pins <sup>(1)</sup>	1	A	6M
10	Leaf spring absorber sliding surfaces	4	A	3M
11	Absorber spring pins	4	A	3M
12	Drawbar pins	2	A	3M
13	Turntable	2	A	24M
14	Articulated joints and sockets for installation of load box.	4	B	2M
15	Side extension lug	10	A	1M
16	Linking cable release mechanism lever pin	4	D	6M
17	Slide gate guides	2	D	1M
18	Slide gate pull shaft pins	6	D	1M
19	Wall pins and locks	8	A	1M

Greasing periods – M months, D – days

<sup>(1)</sup> – not shown in figure

**TABLE 5.5 Recommended lubricants**

LISTED ON TAB. (5.4)	DESCRIPTION
A	permanent machine general-purpose grease (lithium, alkaline),
B	permanent grease for heavily loaded elements with addition of $MOS_2$ or graphite
C	anticorrosion preparation in aerosol
D	ordinary machine oil, silicon grease in aerosol

Trailer lubrication should be performed with the aid of a manually or foot operated grease gun, filled with generally available permanent grease. Before commencing work insofar as is possible remove old grease and other contamination. Remove and wipe off excess oil or grease.

Before beginning to grease leaf springs remove contamination, wash with water and leave to dry. Do not use pressure washers, which may cause moisture penetration between individual leaf springs. Absorber plates should be lubricated using an agent having both anticorrosion and lubricating properties, it is recommended to apply on outer leaf spring surfaces very thin layer of lithium or lime alkali grease. For this purpose, silicone spray (for lubricating of guides, lock etc. see table) can be used. Sliding surfaces shock absorber and shock absorber pin should be lubricated according to recommendations contained in table (5.4).

Parts, which should be lubricated with machine oil, should be wiped with dry cleaning cloth and then a small quantity of oil should be applied do surfaces (with oil can or brush). Wipe off excess oil.

Change of grease in hub bearings should be entrusted to specialised service points, equipped with the appropriate tools. According to the recommendations of the axle Manufacturer, dismantle the entire hub, remove the bearing and individual sealing rings. After careful washing and inspection mount lubricated elements. If necessary, bearing and seals should be replaced with new parts. Lubrication of axle bearings shall be performed at least once in 2 years or every 50 000 km. In the event of intensive use, lubrication should be performed more frequently.

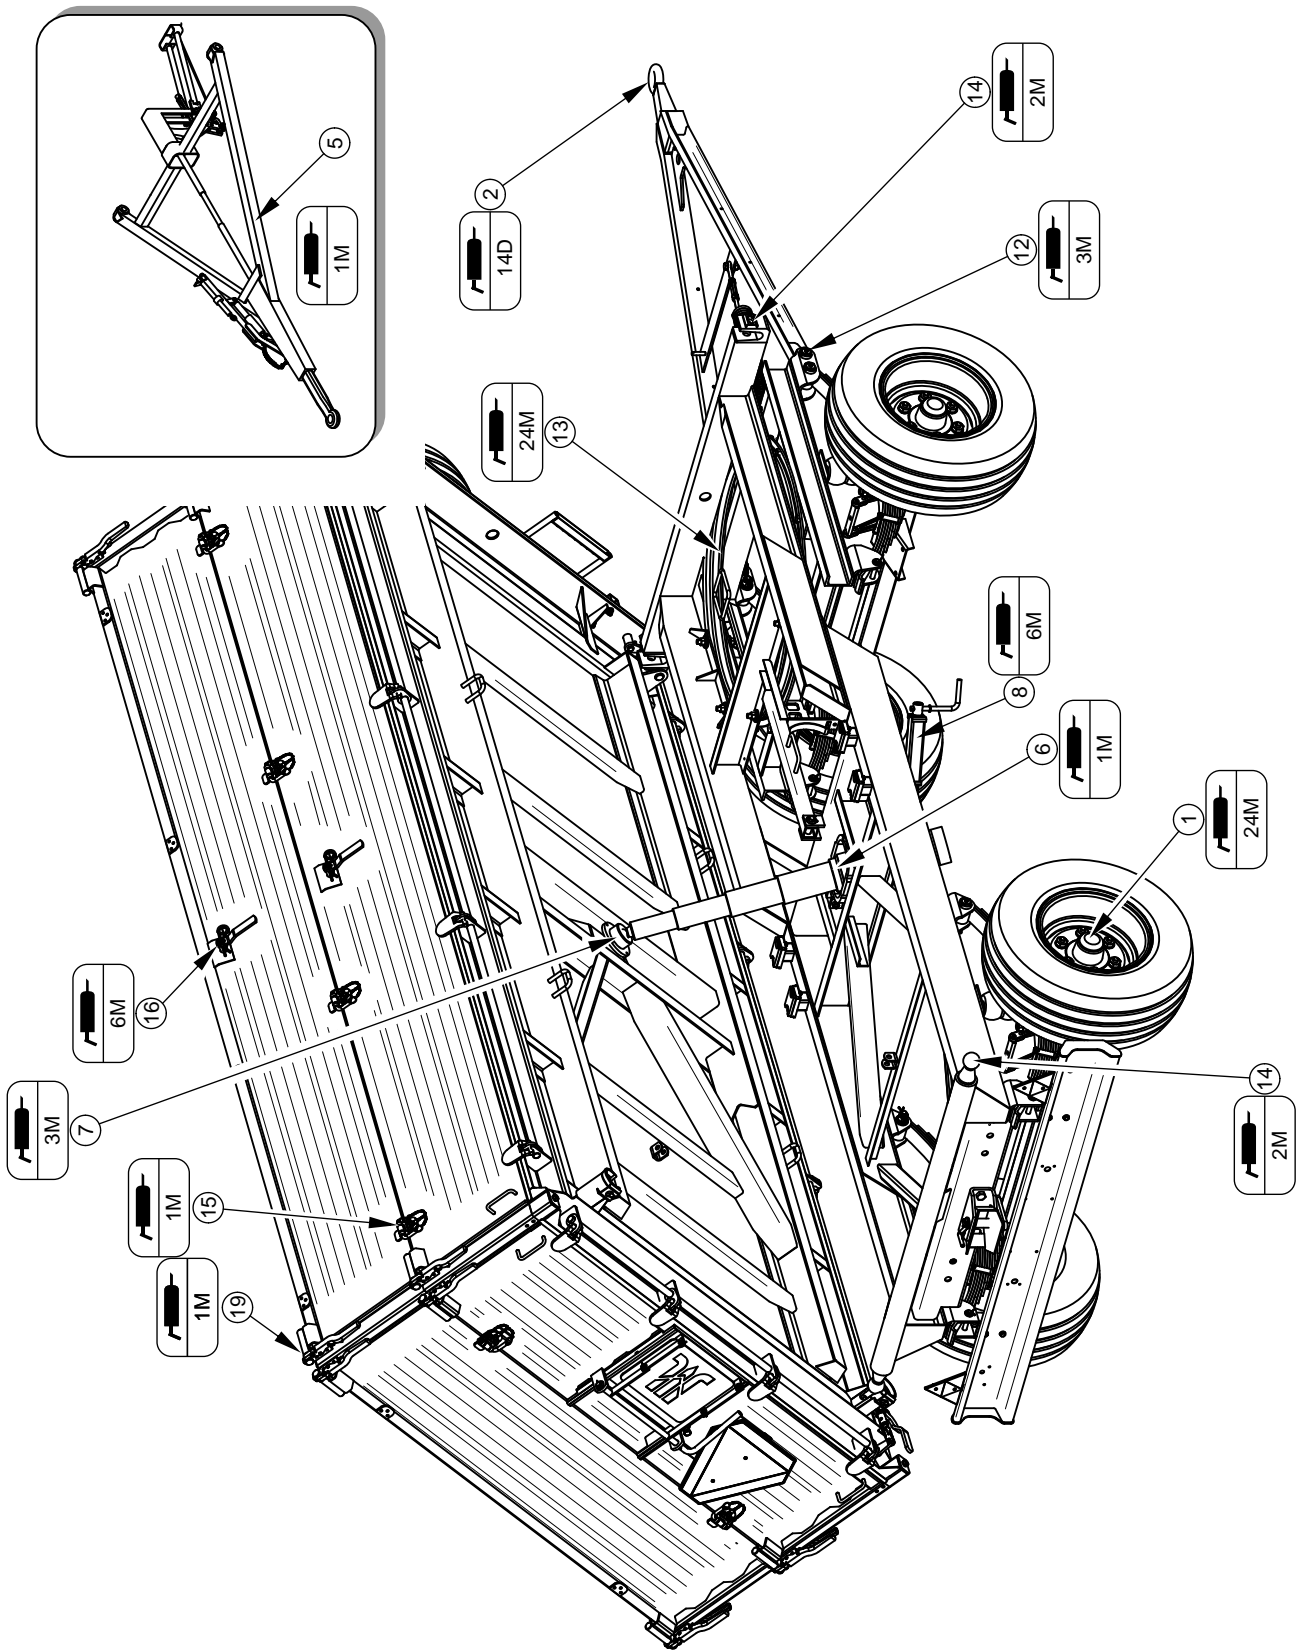


FIGURE 5.10 Trailer's lubrication points, part 1


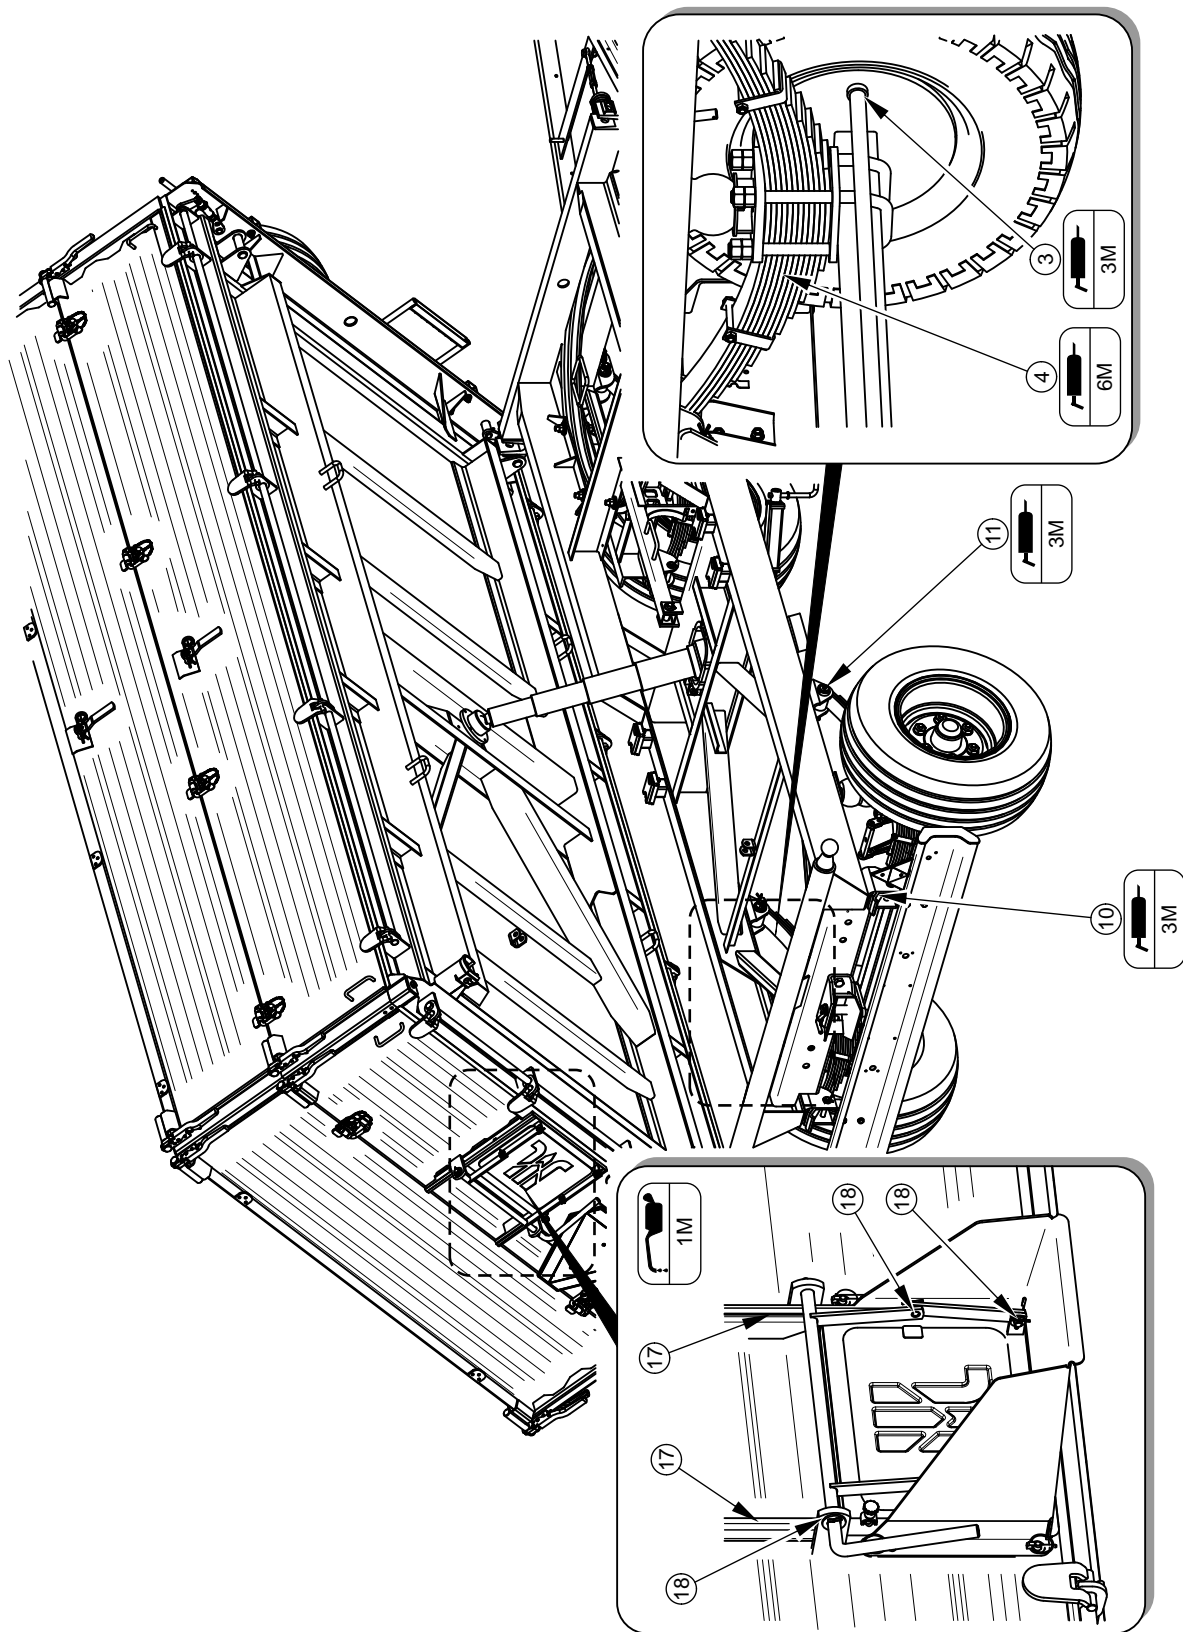


FIGURE 5.11 Trailer's lubrication points, part 2

Empty grease or oil containers should be disposed of according to the recommendations of the lubricant Manufacturer.

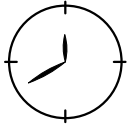

During trailer use the user is obliged to observe lubrication instructions according to attached lubrication schedule.

## 5.7 CONSUMABLES

### 5.7.1 HYDRAULIC OIL

Always adhere to the principle that the oil in the trailer hydraulic system and in the tractor hydraulic system are the same type. In the event of application of different types of oil make certain that both hydraulic substances may be mixed together. Application of different oil types may cause damage to trailer or tractor. In a new machine system is filled with L HL32 Lotos hydraulic oil.

**TABLE 5.6 L-HL 32 Lotos hydraulic oil characteristics**

ITEM	NAME	UNIT	VALUE
1	ISO 3448VG viscosity classification	-	32
2	Kinematic viscosity at 40°C	mm <sup>2</sup> /s	28.8 – 35.2
3	ISO 6743/99 quality classification	-	HL
4	DIN 51502 quality classification	-	HL
5	Ignition temperature	C	230

In the event of necessity of changing hydraulic oil for another oil, check the recommendations of the oil manufacturer very carefully. If it is recommended to flush the system with the appropriate preparation, then comply with these recommendations. Attention should be given, so that chemical substances used for this purpose do not damage the materials of the hydraulic system. During normal trailer use change of hydraulic oil is not necessary, but if required, this operation should be entrusted to a specialist service point.

The oil applied because of its composition is not classified as a dangerous substance, however long-term action on the skin or eyes may cause irritation. In the event of contact of

oil with skin wash the place of contact with water and soap. Do not apply organic solvents (petrol, kerosene). Contaminated clothing should be changed to prevent access of oil to skin. In the event of contact of oil with eye, rinse with large quantity of water and in the event of the occurrence of irritation consult a doctor. Hydraulic oil in normal conditions is not harmful to the respiratory tract. A hazard only occurs when oil is strongly atomised (oil vapour), or in the case of fire during which toxic compounds may be released. Oil fires should be quenched with the use of carbon dioxide, foam or extinguisher steam. Do not use water to quench oil fires.

### **5.7.2 RECOMMENDED GREASE**

For parts under great load it is recommended to apply lithium grease with molybdenum disulphide ( $\text{MOS}_2$ ) or graphite additive. In the case of less loaded sub-assemblies the application of general purpose machine greases is recommended, which contain anticorrosion additive and are resistant to being washed away by water to a considerable degree. Similar characteristics should typify aerosol preparations (Silicon greases and anticorrosive lubricant substances).

Before starting to use greases acquaint oneself with the content of the information leaflet for the chosen product. Particularly relevant are safety rules and handling procedures for given lubricant product and waste utilisation (used containers, contaminated rags etc). Information leaflet (material safety data sheet) should be kept together with grease.

## **5.8 CLEANING TRAILER**

Trailer should be clean depending on requirements and before longer idle periods (e.g. before winter period). Before using pressure washer the user is obliged to acquaint himself with the operating principles and recommendations concerning safe use of this equipment.

### **Trailer cleaning guidelines**

- Before washing trailer open all sides and extensions. Carefully clean load remains from the load box (sweep out or blow out with compressed air), especially where sides and extensions join and.
- To clean trailer only use clean running water or water with a cleaning detergent additive with neutral pH.



- Using pressure washer increases washing effectiveness, but particular care must be taken during work. During washing washer nozzle may not be closer than 50 cm from the surface being cleaned.
- Water temperature shall not exceed 55°C.
- Do not direct water stream directly at system and equipment elements of trailer i.e. control valve, braking force regulator, brake cylinders, hydraulic cylinders, pneumatic, electric and hydraulic plugs, lights, electrical connections, information and warning decals, identification plates, conduit connections, leaf springs and trailer lubrication points etc. Great water jet pressure may damage these elements.
- For cleaning and maintenance of plastic coated surface it is recommended to use clean water or special preparations designed for this purpose.
- Do not apply organic solvents, preparations of unknown origin or other substances, which may cause damage to lacquered, rubber or plastic surfaces. In the event of doubt it is recommended to make a test on an unseen surface area.
- Surfaces smeared with oil or grease should be cleaned by application of benzene or other degreasing agents and then washed with clean water with added detergent. Comply with recommendations of the Manufacturer.



## **DANGER**

Carefully read the instructions for application of washing detergents and maintenance preparations.

While washing with detergents wear appropriate protective clothing and goggles protecting against splashing.

- Washing detergent should be kept in original containers, optionally in replacement containers, but very clearly marked. Preparations may not be stored in food and drink containers.
- Care for the cleanness of elastic conduits and seals. The plastic from which these elements are made may be susceptible to organic substances and some detergents. As a result of long-term reaction of some substances, the ageing process may be accelerated and risk of damage increased. Rubber elements

should be maintained with the aid of special preparations after previous thorough washing.

- After finishing washing wait until trailer is dry and then grease all inspection points according to recommendations. Remove excess oil or grease with a dry cloth.
- Observe environmental protection principles and wash trailer in a place designated for such purpose.
- Washing and drying trailer must take place at temperatures above 0°C.
- After washing and drying trailer should be greased at all control points regardless of last lubrication period.

## 5.9 STORAGE

- Trailer should be kept in closed or roofed building.
- If the machine will not be used for a long time, it is essential to protect it from adverse weather, especially rust and accelerated tyre deterioration. During this time trailer must be unloaded. Trailer should be very carefully washed and dried.
- Corroded places should be cleaned of rust, degreased and protected using undercoat paint and then painted with surface paint according to colour scheme.
- In the event of prolonged work stoppage, it is essential to lubricate all elements regardless of the period of the last lubrication process.
- Wheel rims and tyres should be carefully washed and dried. During longer storage of unused trailer it is recommended that every 2 to 3 weeks the machine may be moved a bit so that the place of contact of tyres with ground is changed. So that tyres are not deformed and maintain proper geometry. Also tyre pressure should be inspected from time to time, and if necessary pressure should be increased to appropriate value.
- If trailer is equipped with tarpaulin it should be carefully washed and dried. If possible clean tarpaulin should be stored unrolled, otherwise carefully roll it not causing crushing and breaking of material.


## 5.10 TIGHTENING TORQUE FOR NUT AND BOLT CONNECTIONS

Unless other tightening parameters are given, during maintenance repair work apply appropriate torque to tightening nut and bolt connections. Recommended tightening torque of most frequently applied nut and bolt connections are given in table below. Given values apply to non greased steel bolts.

**TABLE 5.7 Tightening torque for nut and bolt connections**

THREAD METRIC	5.8 <sup>(1)</sup>	8.8 <sup>(1)</sup>	10.9 <sup>(1)</sup>
	Md [Nm]		
M10	37	49	72
M12	64	85	125
M14	100	135	200
M16	160	210	310
M20	300	425	610
M24	530	730	1 050
M27	820	1 150	1 650
M30	1 050	1 450	2 100

<sup>(1)</sup> – resistance class according to DIN ISO 898 standard

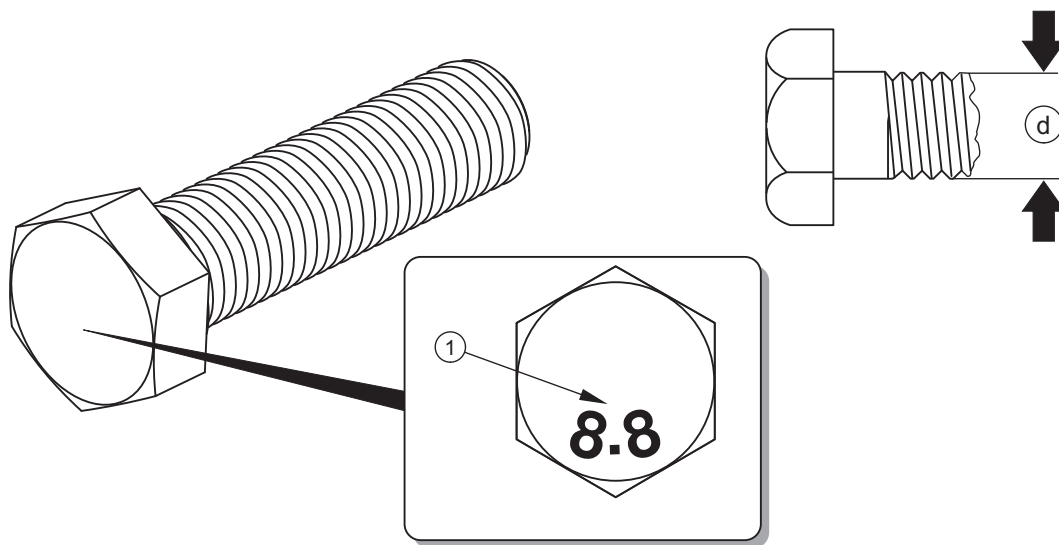

**FIGURE 5.12 Bolt with metric thread**


*(1) resistance class, (d) thread diameter*

Hydraulic conduits should be tightened with torque of 50 – 70 Nm.

## 5.11 INSTALLATION AND DISASSEMBLY OF THE FRAME AND TARPAULIN COVER

Tarpaulin cover can only be used together with the frame. The assembly of wall extensions should be carried out with the use of appropriate platforms, ladders, ramps or other stable raised surfaces. Particular care should be taken, holding onto the trailer with one hand. Work should be done with the help of another person

The frame of structure comprises front apex (1) - figure (5.13), rear apex (2), as well as connecting pipe (3).

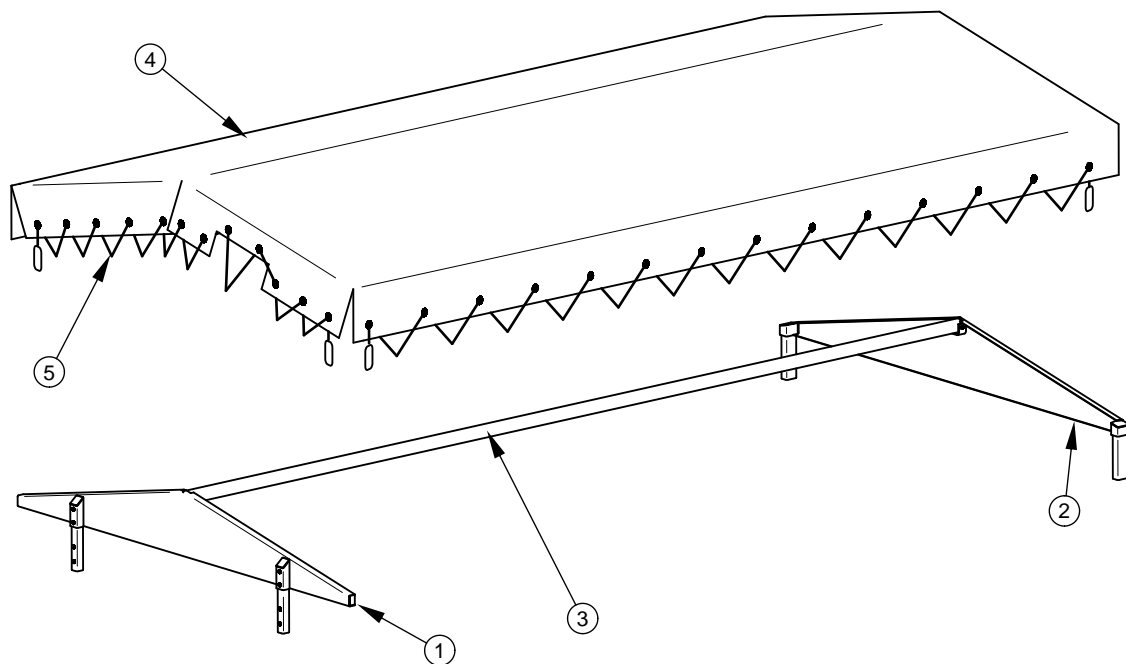

**FIGURE 5.13** Frame with tarpaulin cover

(1) front apex, (2) rear apex, (3) connecting pipe, (4) tarpaulin, (5) tensioning cable

#### Assembly of frame and tarpaulin

- ➔ Attach front apex (1) to the front wall extension,
- ➔ Attach rear apex (2) to the rear wall extension,
- ➔ Screw the connecting pipe (3) to the front and rear apexes,
- ➔ Put the tarpaulin cover on the right side,
  - ⇒ The tarpaulin should be laid so that it is possible to one role it without unnecessary laying of material,
- ➔ Mount tensioning cable (5) of tarpaulin to mounting riveted to the right side extension,
- ➔ Unroll tarpaulin, secure tensioning cable (5) from left side to left extension,
- ➔ Tighten tarpaulin and secure with cables (5) the front and rear part of the tarpaulin.

Disassembly of the frame and tarpaulin cover should be performed in reverse order.

**DANGER**

Assembly and disassembly of the frame should be carried out with the use of appropriate platforms, ladders or when standing on a ramp. These tools must be in good condition to fully protect the persons working on them against falling. Work should be performed by at least two persons. Exercise caution when working.

## 5.12 INSTALLATION AND DISASSEMBLY OF EXTENSION WALLS

**DANGER**


Assembly and disassembly of wall extensions should be carried out with the use of appropriate platforms, ladders or when standing on a ramp. These tools must be in good condition to fully protect the persons working on them against falling. Work should be performed by at least two persons. Exercise caution when working.

**Extension mounting**

- ➔ Secure rear extension stakes to rear side stakes.
- ➔ Install front wall extension.
- ➔ Install rear wall extension.
- ➔ Install side wall extensions.
  - ⇒ First place upper pins of extension in appropriate rear stake locks and front walls, and after that secure base of extensions with the aid of pin lugs to upper part of side walls.
- ➔ Screw in extension ladder to the front wall.

Disassembly of wall extensions should be performed in reverse order.

## 5.13 ADJUSTMENT OF DRAWBAR POSITION

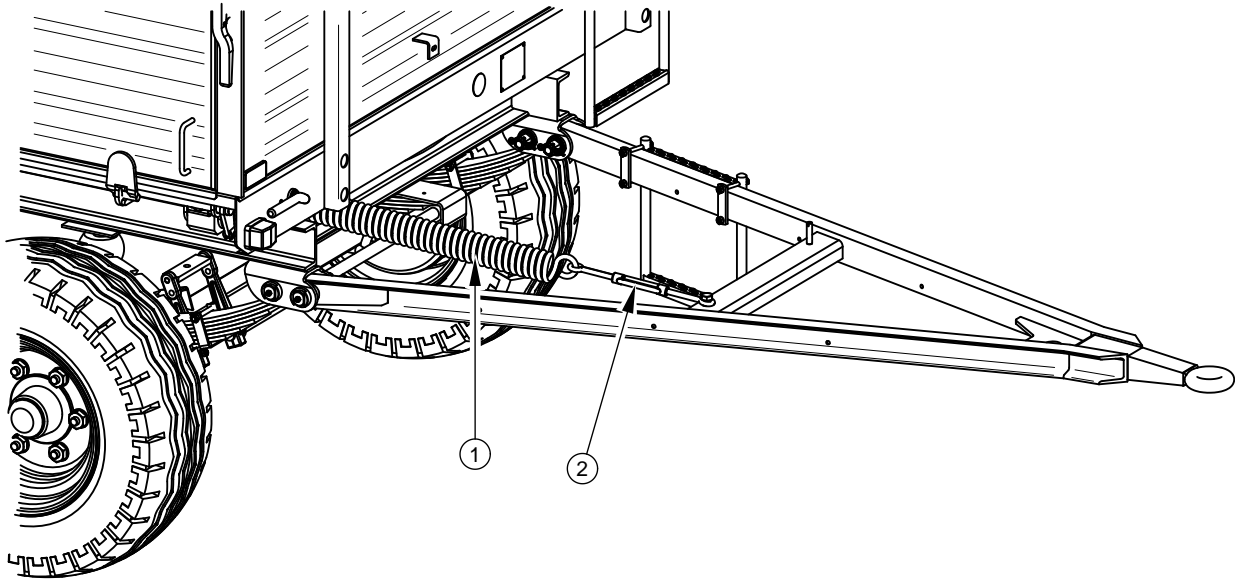

**FIGURE 5.14** Adjustment of drawbar position

(1) tension spring, (2) tensioner

Adjustment of drawbar position is achieved by changing the links of the tensioning bolt (2) - (internally threaded sleeve nut) The spring tension (1) is not changed by this operation. The spring is designed solely for maintaining the set drawbar height. In many upper transport hitch solutions of tractors it is possible to adjust its height to the hitch of the machine. Therefore it is recommended to adjust the drawbar and the tractor hitching in such a way, so that the drawbar would be set in the horizontal position or with a slight incline upwards toward the tractor.

## 5.14 TROUBLESHOOTING

**TABLE 5.8** Troubleshooting

FAULT	CAUSE	REMEDY
Problem with moving off	Brake system pneumatic conduits not connected	Connect brake conduits (applies to pneumatic systems)
	Applied parking brake	Release parking brake.

FAULT	CAUSE	REMEDY
	Damaged pneumatic system connection conduits	Replace.
	Leaking connections	Tighten, replace washers or seal set, replace conduits.
	Damage control valve or brake force regulator	Check valve, repair or replace.
Noise in axle hubs	Excessive slack in bearings	Check slack and regulate if needed
	Damaged bearing	Replace bearing
	Damaged hub parts	Replace
Poor reliability of braking system	Insufficient pressure in system	<p>Check pressure on tractor pressure gauge, wait till compressor fills tank to required pressure.</p> <p>Damaged air compressor in tractor Repair or replace.</p> <p>Damaged brake valve in tractor. Repair or replace.</p> <p>Leaking system conduits or connections. Check system for tightness.</p>
Excessive heating of axle hubs	Incorrect main or parking brake adjustment	Regulate setting of expander arms
	Worn brake linings	Change brake shoes
Incorrect hydraulic system operation	Improper hydraulic oil viscosity	Check oil quality, make sure that the oil in both machines is at the same type. If necessary change oil in tractor or in trailer
	Insufficient tractor hydraulic pump output, tractor hydraulic pump is damaged.	Check tractor hydraulic pump.




<b>FAULT</b>	<b>CAUSE</b>	<b>REMEDY</b>
	Damaged or contaminated ram cylinder	Check cylinder ram piston (bending, corrosion), check ram cylinder for tightness (piston seal), in case of need repair or replace ram cylinder.
	Excessive cylinder ram loading	Check mechanism controlled by ram cylinder for mechanical damage
	Damaged hydraulic conduits	Check and ascertain that hydraulic conduits are tight, not fractured and properly tightened. If necessary replace or tighten.



# NOTES

A series of horizontal dotted lines for writing notes.



# ANNEX A

Tyre dimensions

<b>TRAILER VERSION</b>	<b>AXLE FRONT / REAR</b>
<b>T653</b>	10.0/75-15.3 122 A8 <sup>(1)</sup>
<b>T653/1</b>	11.5/80-15.3 130 A8 <sup>(1)</sup> 14.0/65-16 134 A8 <sup>(2)</sup>
<b>T653/2</b>	11.5/80-15.3 134 A8 <sup>(1)</sup> 14.0/65-16 134 A8 <sup>(2)</sup>
<b>T653/2 WITH OVERRUN BRAKE</b>	11.5/80-15.3 134 A8 <sup>(1)</sup> 14.0/65-16 134 A8 <sup>(2)</sup>

<sup>(1)</sup> - wheel disc 9.00x15.3"

<sup>(2)</sup> - wheel disc 11x16" ET=-20